

**Draytek VigorAP 1062C
Ceiling Mount Access Point**



Draytek VigorAP 1062C Ceiling Mount Access Point User Guide

[Home](#) » [DrayTek](#) » Draytek VigorAP 1062C Ceiling Mount Access Point User Guide 

Contents

- [1 Draytek VigorAP 1062C Ceiling Mount Access Point](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Safety Instructions and Approval](#)
- [5 Declaration of Conformity](#)
- [6 Regulatory Information](#)
- [7 External Power Supply ErP Information](#)
- [8 Package Content](#)
- [9 Panel Explanation](#)
- [10 Installation](#)
- [11 Connection and Configuration](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)

DrayTek

Draytek VigorAP 1062C Ceiling Mount Access Point



Specifications

- **Product Name:** VigorAP 1062C
- **Firmware Version:** V5.0.1
- **Frequency Information**
- **Europe Area:**
 - **2.4GHz WLAN:** 2412MHz – 2472 MHz, max. TX power 19.97 dBm
 - **5GHz WLAN:** 5160MHz – 5340 MHz, max. TX power 22.87 dBm
 - **5GHz WLAN:** 5480MHz – 5720 MHz, max. TX power 25.70 dBm
- **UK Area:**
 - **2.4GHz WLAN:** 2412MHz – 2472 MHz, max. TX power 19.97 dBm
 - **5GHz WLAN:** 5160MHz – 5340 MHz, max. TX power 22.87 dBm
 - **5GHz WLAN:** 5480MHz – 5720 MHz, max. TX power 25.70 dBm

Product Usage Instructions

Safety Instructions

- Read the installation guide thoroughly before setting up the device. This device is a complicated electronic unit that may only be repaired by authorized personnel.

Declaration of Conformity

- The DrayTek Corporation declares that the VigorAP 1062C is compliant with Radio Equipment Directive 2014/53/EU, Low Voltage Directive 2014/35/EU, and RoHS 2011/65/EU.

Manufacturer Information

- **Manufacturer:** DrayTek Corp.
- **Address:** No.26, Flushing Rd., Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan

FAQ

Q: Where can I find the full text of the Declaration of Conformity?

A: The full text of the EU Declaration of Conformity is available at <https://fw.draytek.com.tw/VigorAP%201062C/Document/CE/>

Q: Can I repair the device myself?

A: No, the device is a complex electronic unit and should only be repaired by authorized personnel.

Intellectual Property Rights (IPR) Information

- Copyrights © All rights reserved. This publication contains information that is protected by copyright.
- No part may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language without written permission from the copyright holders.

Trademarks The following trademarks are used in this document:

- Microsoft is a registered trademark of Microsoft Corp.
- Windows, Windows 8, 10, 11, and Explorer are trademarks of Microsoft Corp.
- Apple and Mac OS are registered trademarks of Apple Inc.
- Other products may be trademarks or registered trademarks of their respective manufacturers.

Safety Instructions and Approval

Safety Instructions

- Read the installation guide thoroughly before you set up the device.
- The device is a complicated electronic unit that may be repaired only by authorized and qualified personnel. Do not try to open or repair the device yourself.
- Do not place the device in a damp or humid place, e.g. a bathroom.
- Do not stack the devices.
- The device should be used in a sheltered area, within a temperature range of 0 to +40 Celsius.
- Do not expose the device to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.
- Do not deploy the cable for LAN connection outdoors to prevent electronic shock hazards.

- Do not power off the device when saving configurations or firmware upgrades. It may damage the data in a flash. Please disconnect the
- Internet connection on the device before powering it off when a TR-069/ ACS server manages the device.
- Keep the package out of reach of children.
- When you want to dispose of the device, please follow local regulations on the conservation of the environment.


Warranty

- We warrant to the original end-user (purchaser) that the device will be free from any defects in workmanship or materials for two (2) years from the date of purchase from the dealer. Please keep your purchase receipt in a safe place as it serves as proof of date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, we will, at our discretion, repair or replace the defective products or components, without charge for either parts or labor, to whatever extent we deem necessary to restore the product to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal value and will be offered solely at our discretion.
- This warranty will not apply if the product is modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions.
- The warranty does not cover the bundled or licensed software of other vendors.
- Defects that do not significantly affect the usability of the product will not be covered by the warranty.
- We reserve the right to revise the manual and online documentation and to make changes from time to time in the contents hereof without obligation to notify any person of such revisions or changes.

Declaration of Conformity

- Hereby, DrayTek Corporation declares that the equipment type VigorAP 1062C complies with Radio Equipment Directive 2014/53/EU, Low Voltage Directive 2014/35/EU and RoHS 2011/65/EU.
- The full text of the EU Declaration of Conformity is available at the following internet address:
<https://fw.draytek.com.tw/VigorAP%201062C/Document/CE/>
- **Manufacturer:** DrayTek Corp.
- **Address:** No.26, Flushing Rd., Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan
- **Product:** VigorAP 1062C


Frequency Information for Europe area:

2.4GHz WLAN	2412MHz – 2472 MHz, max. TX power: 19.97 dBm
5GHz WLAN	5160MHz – 5340 MHz, max. TX power: 22.87 dBm 5480MHz – 5720 MHz, max. TX power: 25.70 dBm
	Requirements in AT/BE/BG/CZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/ CY/LV/LI/LT/LU/HU/MT/NL/NO/PL/PT/RO/SI/SK/TR/FI/SE/CH/HR/UK(NI). 5150MHz~5350MHz is for indoor use only.

This product is designed for 2.4GHz and 5GHz WLAN networks throughout the EC region.

- Hereby, DrayTek Corporation declares that the equipment type VigorAP 1062C complies with the Radio Equipment Regulations 2017 (SI 2017 No.1206),
- The Electrical Equipment (Safety) Regulations 2016 (SI 2016 No.1101), and The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (SI 2012 No. 3032).
- The full text of the UKCA Declaration of Conformity is available at the following internet address:
<https://fw.draytek.com.tw/VigorAP%201062C/Document/CE/>
- **Manufacturer:** DrayTek Corp.
- **Address:** No.26, Fushing Rd., Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan
- **Product:** VigorAP 1062C

Frequency Information for the UK area:

2.4GHz WLAN	2412MHz – 2472 MHz, max. TX power: 19.97 dBm
5GHz WLAN	5160MHz – 5340 MHz, max. TX power: 22.87 dBm 5480MHz – 5720 MHz, max. TX power: 25.70 dBm
	Requirements in the UK. 5150MHz~5350MHz is for indoor use only.

- This product is designed for 2.4GHz and 5GHz WLAN network use in the UK & Ireland.

UK PSTI STATEMENT OF COMPLIANCE

- We, DrayTek Corp., office at No.26, Fushing Rd., Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan, declare under our sole responsibility that the product
- The full text of the PSTI Declaration of Conformity is available at the following internet address:
<https://fw.draytek.com.tw/UK/PSTI/>
- **Product name:** Access Point

- **Model number:** VigorAP 1062C
- **Manufacturer:** DrayTek Corp.
- **Address:** No.26, Fushing Rd., Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan is in conformity with the relevant UK Statutory Instruments.
- The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023 (“Security Requirements”).

Standard	Version
The Product Security and Telecommunications Infrastructure Regulations	2023 Schedule 1
Support Period	3 years after the EOL notification

- Please note that this statement of compliance, including the Defined Support Period stated herein, is only applicable to products sold in the UK.
- This Statement of Compliance is retained by DrayTek for 10 years after the date of issue.
- Hsinchu 25th Mar., 2024 Alan Wen
- General Manager Office. VP
- (place) (date) (Legal Signature)

Regulatory Information

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device may accept any interference received, including interference that may cause undesired operation.

USA Local Representative	Company name	ABP International Inc.		
	Address	13988 Diplomat Drive Suite 180 Dallas TX 75234		
	ZIP Code	75234	E-mail	itadmin@abptech.com
	Contact Person	Mr. Henry N Castillo	Tel.	(972)831-1600 140

Caution

- Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.


External Power Supply ErP Information

		1	2	3	4	5
A	Manufacturer	DVE	DVE	AMIGO	AMIGO	TOPOW Electronics Co.
B	Address	No.5, Pao-Kao Road, Hsin-Tien, New Taipei City 231, Taiwan	No.5, Pao-Kao Road, Hsin-Tien, New Taipei City 231, Taiwan	No.20, Qianyang First Road, Yun-Mao-Tsun, San Xing, Zhongshan, Guangdong, China	No.20, Qianyang First Road, Yun-Mao-Tsun, San Xing, Zhongshan, Guangdong, China	No.8 Xinxing Industrial Park, Xinghe Village, Fuyong Street, Baoan District, Shenzhen, Guangdong, China
C	Model identifier	12PF09-12 FUK	18PFR-12 FUK	1201000FB	1202000FV	18120-EU-22086
		12PF09-12 FEU/12PF11-12 FEU	18PFR-12 FEU		1202000FB	18120-UK-23091
D	Input voltage	100~240V	100~240V	100~240V	100~240V	100~240V
E	Input AC frequency	50/60Hz	50/60Hz	50/60Hz	50/60Hz	50/60Hz
	Output voltage DC	12.0V	12.0V	12.0V	12.0V	12.0V
F	Output current	1.0A	1.5A	1.0A	2.0A	1.5A
G	Output power	12.0W	18.0W	12.0W	24.0W	18.0W
H	Average active efficiency	84%	85.5%	86.96%	86.2%	85.21%
I	Efficiency at low load 10%	79.3%	83.7%	77.5%	79.1%	80.1%
J	No-load power consumption	0.06W	0.07W	0.10W	0.10W	0.1W


- The external power supply used for each product will be model-dependent.
- For more updates, please visit www.draytek.com.

Package Content


- Take a look at the package content. If anything is missing or damaged, please contact DrayTek or the dealer immediately.

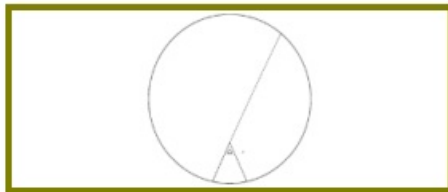

VigorAP 1062C Main Unit

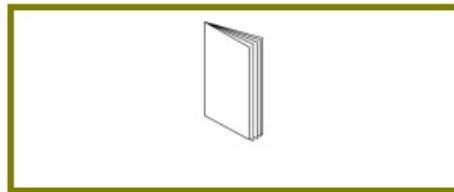

Quick Start Guide

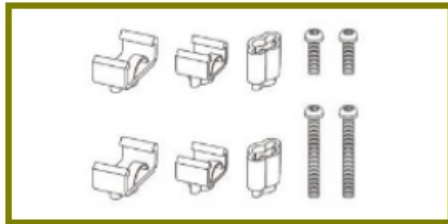


Kits & Screws
(Used for T-Rail Mounting)



Screws
(Used for Ceiling Mounting)




RJ-45 Cable (Ethernet)

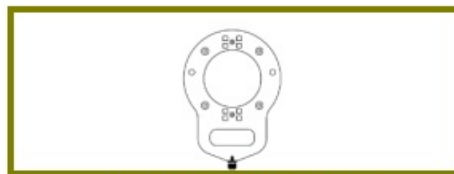

Ceiling Mount Bracket

- The maximum power consumption is 23 watts.

Panel Explanation

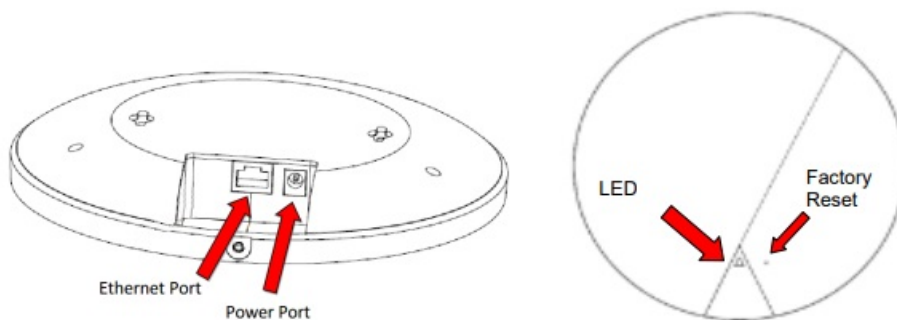


LED	Status	Explanation
Blue LED	On	The system is in boot-loader mode.
	Blinking	The system is in TFTP mode.
Green LED	Blinking	The system is in AP mode and works normally.
Red LED	Blinking	System error.
Off	Off	VigorAP is turned off or not functioning.
Interface		Explanation
Ethernet Port		Connects to LAN or router. Supports PoE power & Gigabit (2.5G).
Power Jack (DC IN)		Connector for a power adapter.
Hole		Explanation
Factory Reset		Restores the unit to factory default settings. To use, insert a small item such as an unbent paperclip into the hole. You will feel the button inside depress gently. Hold it for 5 seconds. The VigorAP will restart with the factory default configuration and the LED will blink blue.

Installation

VigorAP can be installed under certain locations: wooden ceilings, plasterboard ceilings, light-weighted steel frames, and walls.


Ceiling-mount Installation (Wooden Ceiling)

1. Place the bracket under the wooden ceiling and fasten four screws firmly.
2. When the bracket is in place, fasten two screws firmly on the bottom of VigorAP.
3. Secure the access point firmly in place using the included screw.

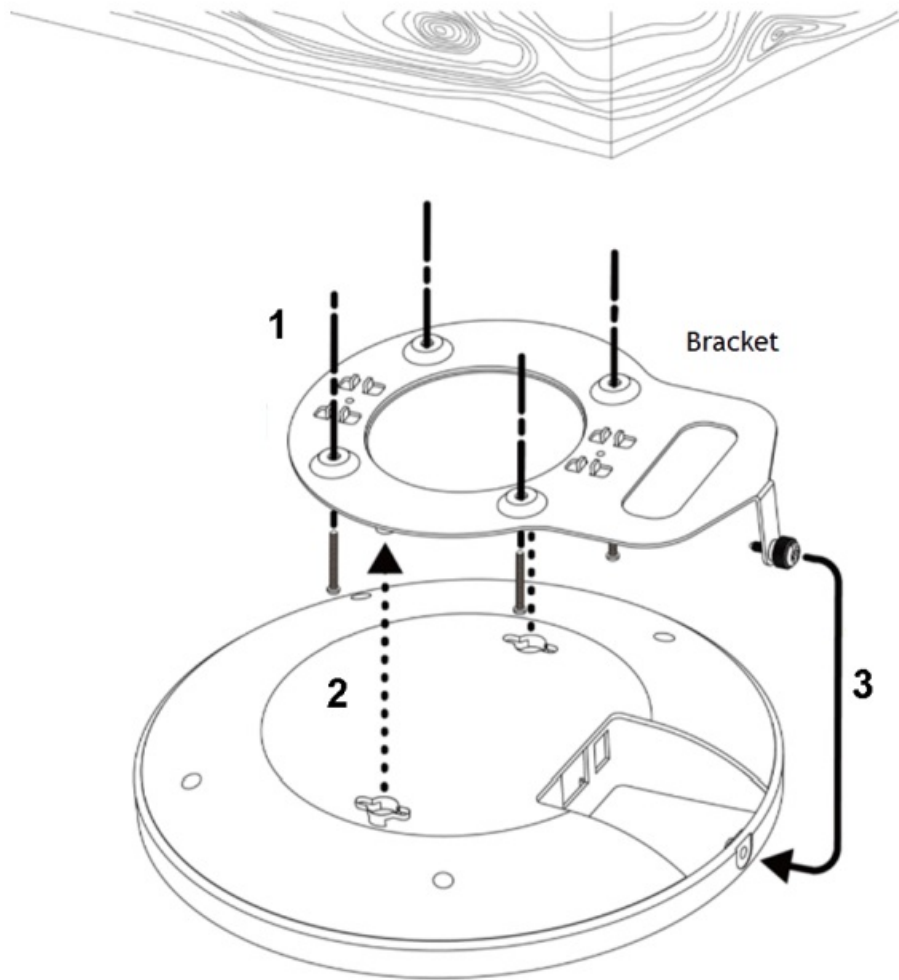

Ceiling-mount Installation (Plasterboard Ceiling)


1. Drill four holes in your ceiling using the ceiling mount bracket as a guide, and insert the four included wall plugs/screw anchors.
2. Align the ceiling mount bracket with your wall plugs/screw anchors and use the four screws to fix it into place.
3. When the bracket is in place, fasten two screws firmly on the bottom of VigorAP.
4. Secure the access point firmly in place using the included screw.

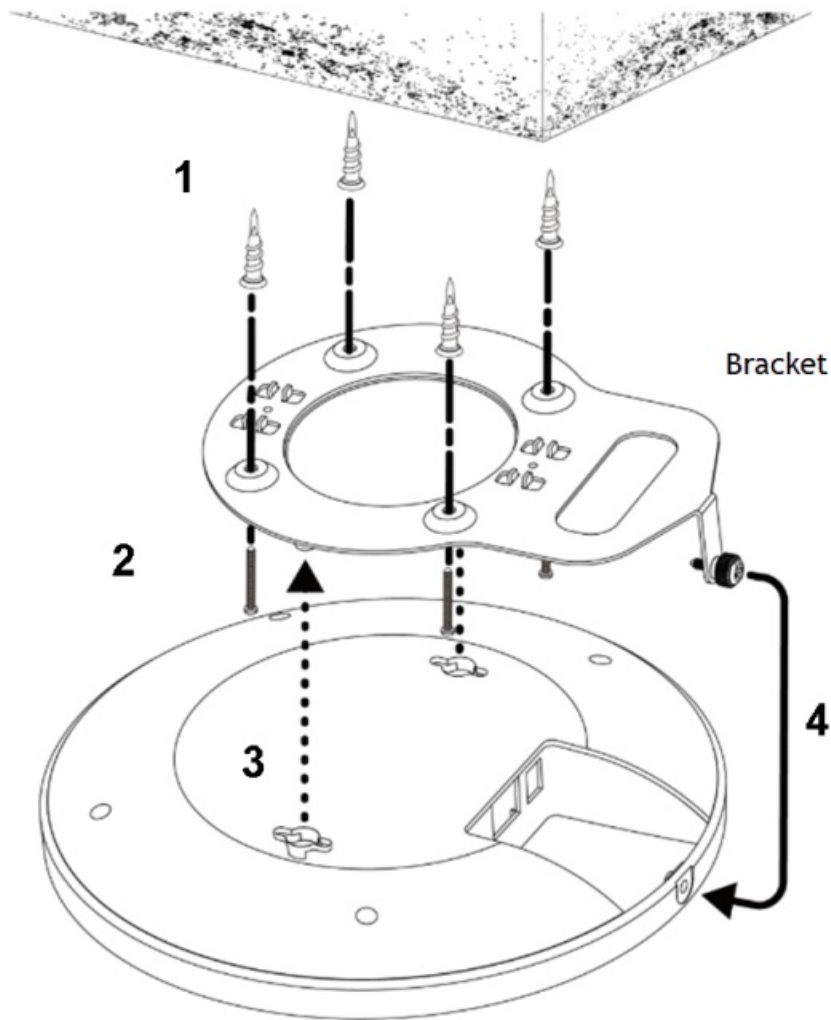


Suspended Ceiling Installation

You cannot screw into ceiling tiles as they are weak and not suitable for bearing loads. Your VigorAP is supplied with mounts (T-Rail brackets) that attach directly to the metal grid ('T-Rail') of your suspended ceiling.

1. Choose the correct size T-Rail bracket from the bundled package.
2. Put the T-Rail brackets on the holes of the bottom side of the device. Fasten them with suitable screws.
3. Secure the access point firmly in place using the included screw as shown below.

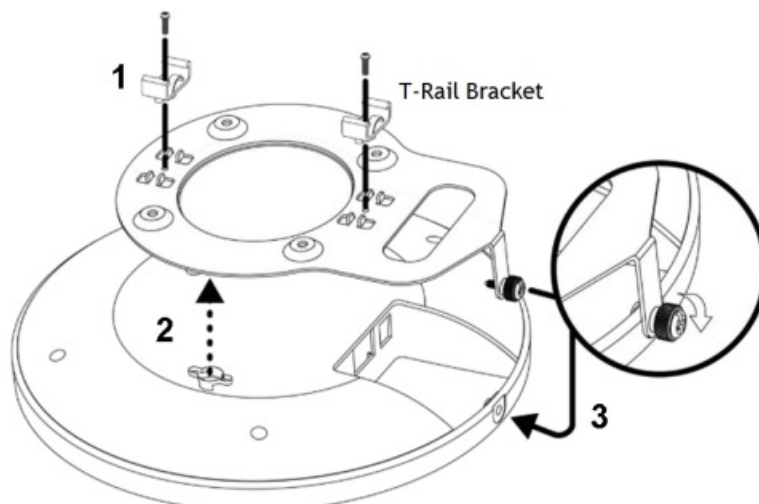


4. Clip the access point onto your T-Rail using the now attached T-Rail bracket.

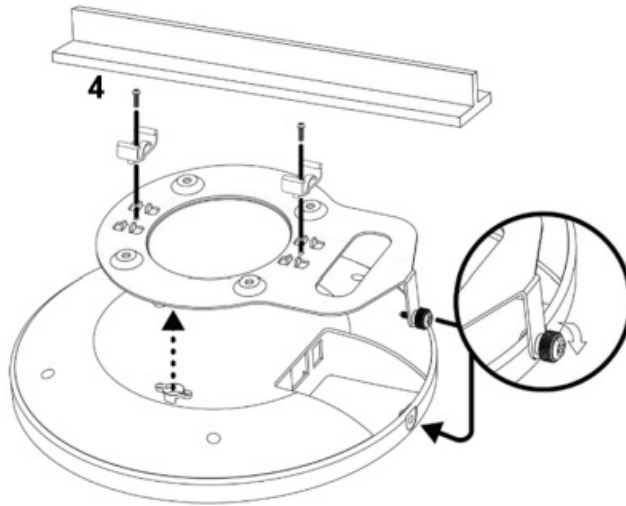

5. Attach the T-Rail brackets to the ceiling frame.


Note If a larger gap is required between the ceiling and the VigorAP, use the extension pieces to extend the height of the brackets.

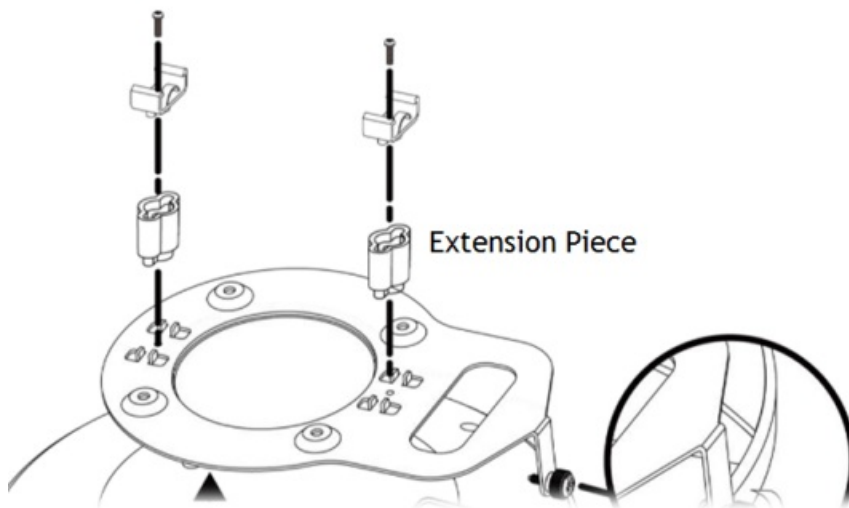


Connection and Configuration

Notifications for Hardware Connection

- Connect VigorAP to the Vigor router (via LAN port) with an Ethernet cable.

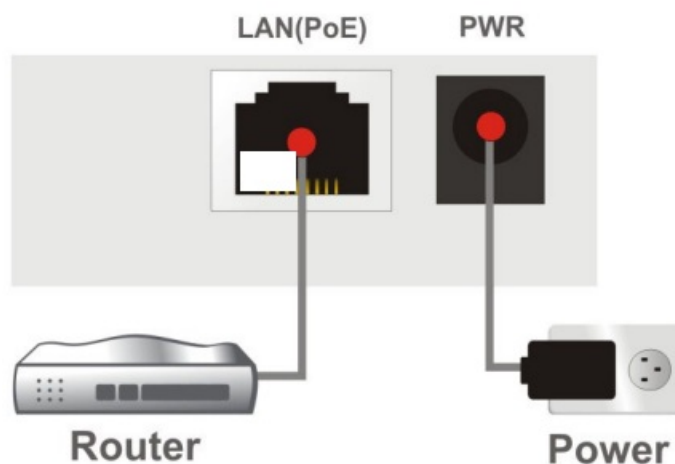

- Connect VigorAP to the PoE switch (via LAN port) with an Ethernet cable for getting the power from the switch directly. While connecting with a PoE switch, the power adapter is not necessary but optional.

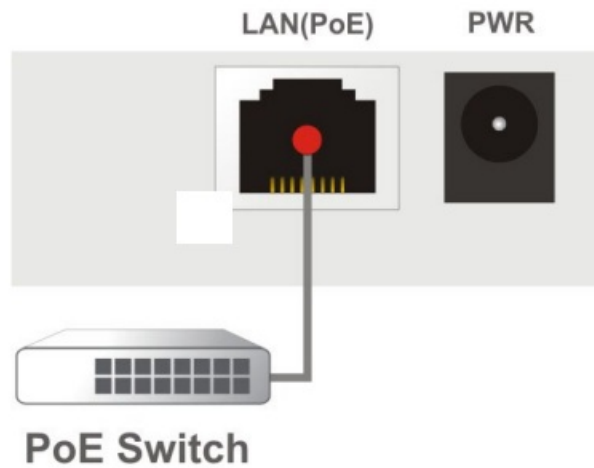


Web Configurations


There are two methods to configure VigorAP.

Method 1:

1. Make sure your PC connects to the modem correctly.
2. Open a web browser on your PC and type <http://192.168.1.2>. A pop-up window will open to ask for a username and password. Please enter “admin/admin” as the Username/Password and click Login.

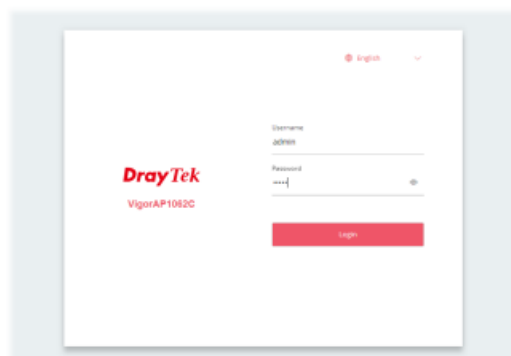


- **Note** You may either simply set up your computer to get IP dynamically from the router or set up the IP address of the computer to be in the same subnet as the IP address of VigorAP 1062C.
 - If there is no DHCP server on the network, then VigorAP 1062C will have an IP address of 192.168.1.2.
 - If there is DHCP available on the network, then VigorAP 1062C will receive its IP address via the DHCP server.
3. Next, the page will appear to guide you change the login password.
 - You **MUST** change the login password before accessing the web user interface.
 - Please set a new password for network security.

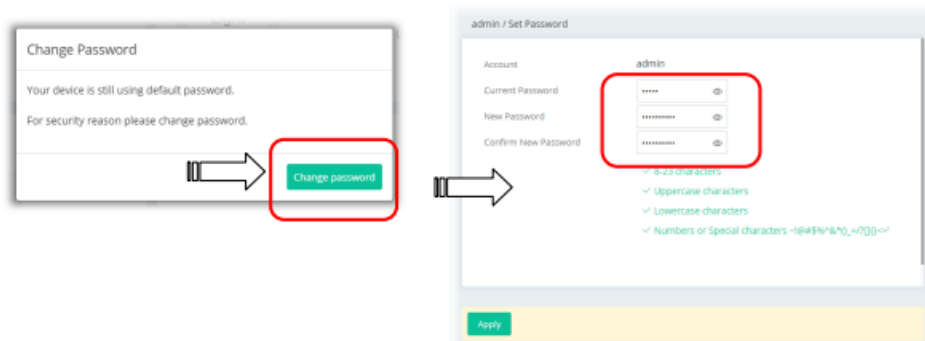

4. After clicking Apply, the Main Screen will pop up. When the homepage appears, view the configuration and

modify the settings if you want.

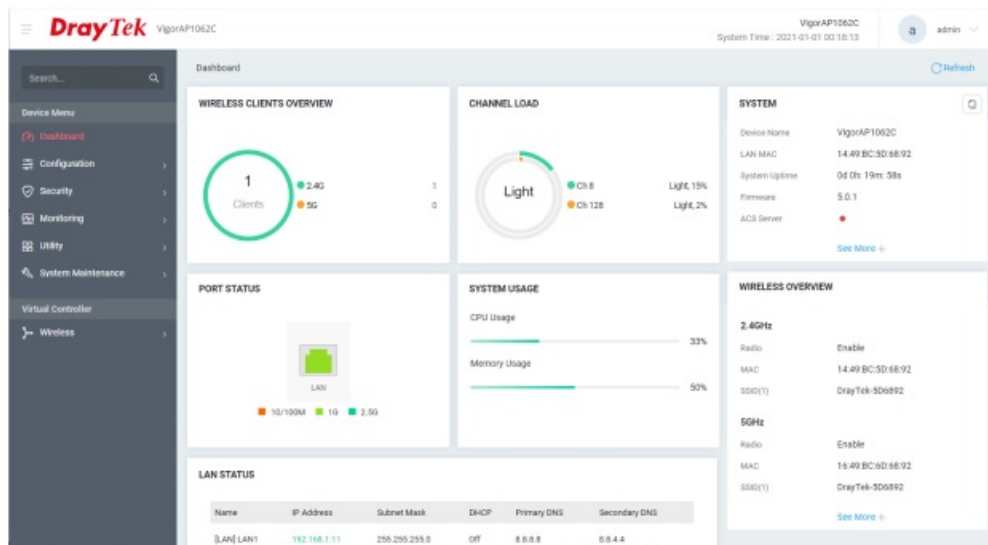

Method 2:

1. Use a mobile phone to scan the QR code named with the DrayTek Wireless App to download the DrayTek Wireless APP.




2. After opening the DrayTek website, use the scroll bar to locate the Wireless APP.

- **Getting Download Wireless APP**



3. Based on the mobile phone type (Android or iOS) you have, select the one you need to download the APP. Then, run the APP.
4. From the home page, click the Connect icon to access the Connect page.
 - Next, press the QR code icon to Scan the QR Code on your phone screen to open the camera.
 - Scan the QR code-named with Connect SSID to access the web user interface (configuration wizard) of VigorAP 1062C.
 - (For iOS users, the SSID and the password will be shown first. Simply click the Connect button to access the web user interface of VigorAP.)

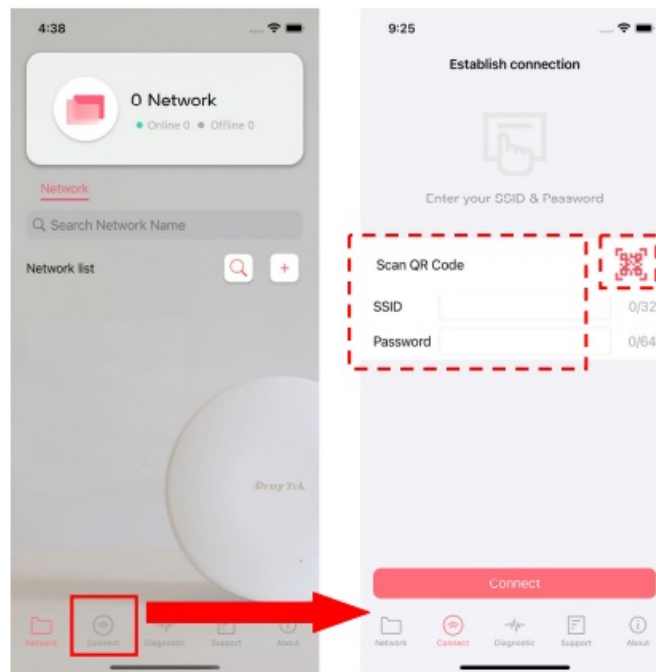

Customer Service

- If the device cannot work correctly after trying many efforts, please contact your dealer/DrayTek for further help right away. For any questions, please feel free to send an e-mail to “support@draytek.com”.

Be a Registered Owner

- Web registration is preferred. You can register your Vigor router via <https://myvigor.draytek.com>.

Firmware & Tools Updates

- Due to the continuous evolution of DrayTek technology, all routers will be regularly upgraded. Please consult the DrayTek website for more information on the newest firmware, tools, and documents.
<https://www.draytek.com>
- GPL Notice This DrayTek product uses software partially or completely licensed under the terms of the GNU GENERAL PUBLIC LICENSE. The author of the software does not provide any warranty.
- A Limited Warranty is offered on DrayTek products. This Limited Warranty does not cover any software applications or programs.
- To download source codes please visit: <http://gplsource.draytek.com>
- **GNU GENERAL PUBLIC LICENSE:** <https://gnu.org/licenses/gpl-2.0>
- **Version 2, June 1991**
- For any questions, please feel free to contact DrayTek technical support at support@draytek.com for further information.

Documents / Resources

