

DrayTek VigorAP 906 802.11ax Access Point



# DrayTek VigorAP 906 802.11ax Access Point User Guide

[Home](#) » [DrayTek](#) » DrayTek VigorAP 906 802.11ax Access Point User Guide 

## Contents

- [1 DrayTek VigorAP 906 802.11ax Access Point](#)
- [2 Product Usage Instructions](#)
- [3 Safety Instructions and Approval](#)
- [4 Panel Explanation](#)
- [5 Installation](#)
- [6 Connection and Configuration](#)
- [7 Connected As a Mesh Node \(in Mesh Network\)](#)
- [8 Customer Service](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)

**DrayTek**

DrayTek VigorAP 906 802.11ax Access Point



## Specifications

- **Product Name:** VigorAP 906 802.11ax Access Point
- **Firmware Version:** V1.4.9
- **Date:** August 21, 2023
- **Frequency Information:**
  - **2.4GHz WLAN:** 2400MHz – 2483MHz, max. TX power: 19.81dBm
  - **5GHz WLAN:**
    - 5150MHz – 5350MHz, max. TX power: 22.70dBm

- 5470MHz – 5725MHz, max. TX power: 29.47dBm

## **Product Usage Instructions**

### **Safety Instructions and Approval**

- Before setting up the device, read the installation guide thoroughly.
- Do not attempt to open or repair the device yourself.
- Avoid placing the device in damp or humid environments.
- Operate the device within a temperature range of 0 to +45 Celsius.
- Avoid exposing the device to direct sunlight or other heat sources.
- Do not stack the devices.
- Disconnect the Internet connection before powering off the device for configuration saving or firmware upgrades.
- Keep the device in a sheltered area and out of reach of children.

### **Warranty**

Contact the manufacturer for warranty information.

### **Declaration of Conformity**

The product complies with Directive 2014/53/EU and Regulation SI 2017 No. 1206.

### **FAQ**

- **Q: Can the VigorAP 906 be used outdoors?**
  - **A:** It is recommended to use the device in a sheltered area within the specified temperature range and not expose it to direct sunlight or moisture.
- **Q: What is the warranty coverage for the VigorAP 906?**
  - **A:** For warranty information, please contact DrayTek Corporation.

### **Intellectual Property Rights (IPR) Information**

Copyrights © All rights reserved. This publication contains information that is protected by copyright. No part may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language without written permission from the copyright holders

**Trademarks:** The following trademarks are used in this document:

- Microsoft is a registered trademark of Microsoft Corp.
- Windows, Windows 8, 10, 11, and Explorer are trademarks of Microsoft Corp.
- Apple and Mac OS are registered trademarks of Apple Inc.
- Other products may be trademarks or registered trademarks of their respective manufacturers

### **Safety Instructions and Approval**

## Safety Instructions

- Read the installation guide thoroughly before you set up the device.
- The device is a complicated electronic unit that may be repaired only by authorized and qualified personnel. Do not try to open or repair the device yourself.
- Do not place the device in a damp or humid place, e.g. a bathroom.
- Do not stack the devices.
- The device should be used in a sheltered area, within a temperature range of 0 to +45 Celsius.
- Do not expose the device to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.
- Do not deploy the cable for LAN connection outdoors to prevent electronic shock hazards.
- Do not power off the device when saving configurations or firmware upgrades. It may damage the data in a flash. Please disconnect the Internet connection on the device before powering it off when a TR-069/ ACS server manages the device.
- Keep the package out of reach of children.
- When you want to dispose of the device, please follow local regulations on the conservation of the environment.

## Warranty

We warrant to the original end-user (purchaser) that the device will be free from any defects in workmanship or materials for a period of two (2) years from the date of purchase from the dealer. Please keep your purchase receipt in a safe place as it serves as proof of date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, we will, at our discretion, repair or replace the defective products or components, without charge for either parts or labor, to whatever extent we deem necessary to restore the product to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal value and will be offered solely at our discretion. This warranty will not apply if the product is modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions. The warranty does not cover the bundled or licensed software of other vendors. Defects that do not significantly affect the usability of the product will not be covered by the warranty. We reserve the right to revise the manual and online documentation and to make changes from time to time in the contents hereof without obligation to notify any person of such revisions or changes.



### Declaration of Conformity

Hereby, DrayTek Corporation declares that the radio equipment type VigorAP 906 is in compliance with Directive 2014/53/EU.


The full text of the EU Declaration of Conformity is available at the following internet address:  
[https://fw.draytek.com.tw/VigorAP 906/Document/CE/](https://fw.draytek.com.tw/VigorAP%20906/Document/CE/)

**Manufacturer:** DrayTek Corp.

**Address:** No. 26, Flushing Rd, Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan


**Product:** VigorAP 906

Frequency Information for the European area

2.4GHz WLAN	2400MHz - 2483MHz, max. TX power: 19.81dBm	*1
5GHz WLAN	5150MHz - 5350MHz, max. TX power: 22.70dBm	*2
	5470MHz - 5725MHz, max. TX power: 29.47dBm	*2
	Requirements in AT/BE/BG/CZ/DZ/DK/EE/FR/DE/IS/IE/IT/EL/ES/ CY/LV/LI/LT/ LU/HU/MT/NL/NO/PL/PT/RO/SI/SK/TR/FI/SE/CH/HR. 5150MHz~5350MHz is for indoor use only.	

\*1: for 2.4GHz WLAN model; \*2: for 5GHz WLAN model)


This product is designed for 2.4GHz and 5GHz WLAN networks throughout the EC region.

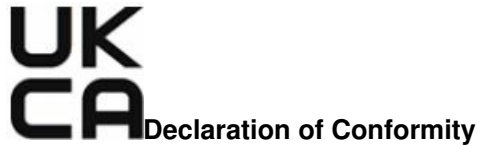

Hereby, DrayTek Corporation declares that the radio equipment type VigorAP 906 is in compliance with Regulation SI 2017 No. 1206.

- **Manufacturer:** DrayTek Corp.
- **Address:** No. 26, Fushing Rd, Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan
- **Product:** VigorAP 906

Frequency Information for UK area

2.4GHz WLAN	2400MHz - 2483MHz, max. TX power: 19.81dBm	*1
5GHz WLAN	5150MHz - 5350MHz, max. TX power: 22.70dBm	*2
	5470MHz - 5725MHz, max. TX power: 29.47dBm	*2
	Requirements in UK. 5150MHz - 5350MHz is for indoor use only.	

(\*1: for 2.4GHz WLAN model; \*2: for 5GHz WLAN model)

This product is designed for 2.4GHz and 5GHz WLAN network use in the UK & Ireland.

### Caution

- Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- This equipment complies with CE RF radiation exposure limits set forth for an uncontrolled environment.
- This equipment should be installed and operated with a minimum distance 20cm between the radiator & your body.
- Operations in the 5.15-5.35GHz band are restricted to indoor usage only.



## Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device may accept any interference received, including interference that may cause undesired operation.

**Radiation Exposure Statement:** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 20cm between the radiator & your body

USA Local Representative	Company name	ABP International Inc.			
	Address	13988 Diplomat Drive Suite 180 Dallas TX 75234			
	ZIP Code	75234	E-mail	rmesser@abptech.com	
	Contact Person	Mr. Robert Messer	Tel.	19728311600	

\*The external power supply used for each product will be model dependent.

		1	2	3	4	5	6	7	8	9
A	Manufacturer	CWT	CWT	CWT	CWT	CWT	APD	APD	APD	APD
B	Address	No. 222, Sec. 2, Nankan Rd., Lujhu Township, Taoyuan County 338, Taiwan	No. 222, Sec. 2, Nankan Rd., Lujhu Township, Taoyuan County 338, Taiwan	No. 222, Sec. 2, Nankan Rd., Lujhu Township, Taoyuan County 338, Taiwan	No. 222, Sec. 2, Nankan Rd., Lujhu Township, Taoyuan County 338, Taiwan	No. 222, Sec. 2, Nankan Rd., Lujhu Township, Taoyuan County 338, Taiwan	No.5, Lane 83, Lung-Sou St., Taoyuan City 330, Taiwan	No.5, Lane 83, Lung-Sou St., Taoyuan City 330, Taiwan	No.5, Lane 83, Lung-Sou St., Taoyuan City 330, Taiwan	No.5, Lane 83, Lung-Sou St., Taoyuan City 330, Taiwan
C	Model identifier	2ABB012F UK 2ABB012F EU	2ABB018F UK 2ABB018F EU	2ABL024F UK 2ABL024F EU	2ABL030F UK 2ABL030F EU	2ABN036F UK 2ABN036F EU	WA-12M12FG WA-12M12FK	WB-18D12FG WB-18D12FK	WA-24Q12FG WA-24Q12FK	WA-36A12FG WA-36A12FK
D	Input voltage	100-240V	100-240V	100-240V	100-240V	100-240V	100-240V	100-240V	100-240V	100-240V
E	Input AC frequency	50/60Hz	50/60Hz	50/60Hz	50/60Hz	50/60Hz	50/60Hz	50/60Hz	50/60Hz	50/60Hz
	Output voltage DC	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V
F	Output current	1.0A	1.5A	2.0A	2.5A	3.0A	1.0A	1.5A	2.0A	3.0A
G	Output power	12.0W	18.0W	24.0W	30.0W	36.0W	12.0W	18.0W	24.0W	36.0W
H	Average active efficiency	84.9%	86.2%	87.6%	87.8%	89.8%	83.7%	85.4%	88.6%	88.2%
I	Efficiency at low load 10%	73.6%	78.0%	81.3%	83.3%	83.7%	74.5%	80.5%	86.4%	85.4%
J	No-load power consumption	0.07W	0.07W	0.07W	0.07W	0.07W	0.07W	0.10W	0.07W	0.10W

For more updates, please visit [www.draytek.com](http://www.draytek.com).

## Package Content

Take a look at the package content. If there is anything missing or damaged, please contact DrayTek or the dealer


immediately.



Access Point




Quick Start Guide

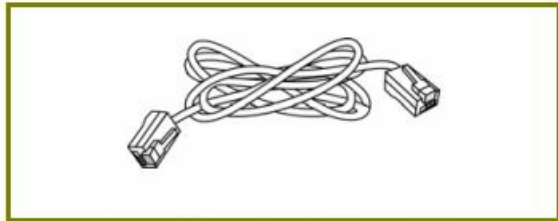


RJ-45 Cable (Ethernet)


The type of the power adapter depends on the country that the AP will be installed:

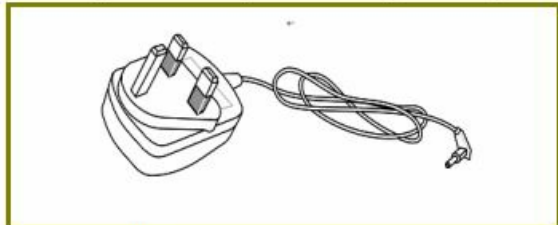


UK-type power adapter

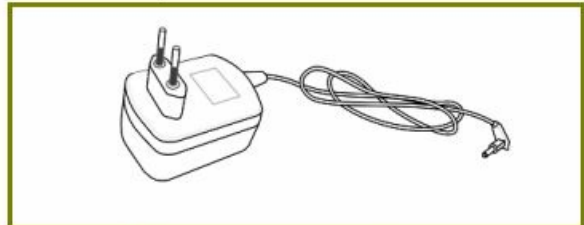

EU-type power adapter

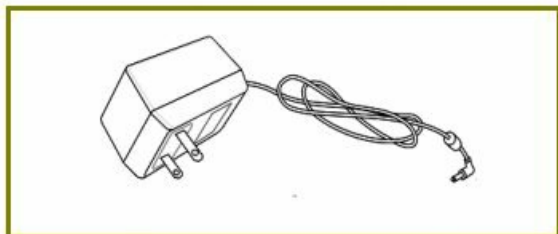

USA/Taiwan-type power adapter

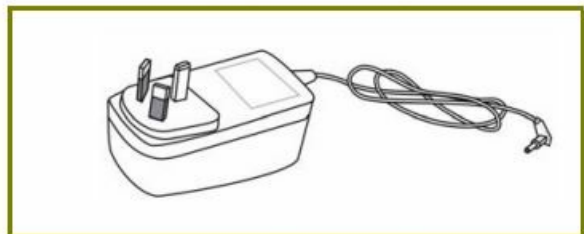


AU/NZ-type Power Adapter




#### Note

- The antenna/transmitter should be kept at least 20 cm away from the human body.
- The maximum power consumption is 18 watts.



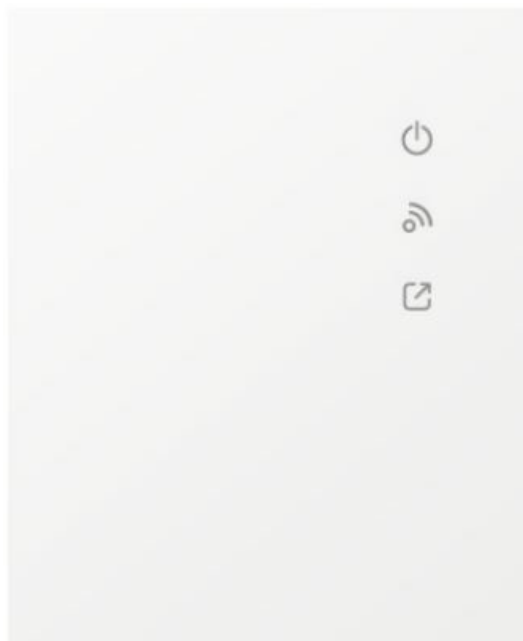


#### Panel Explanation





LED	Status	Explanation
 ACT	Off	The system is not ready or is failed.
	Blinking	The system is ready and can work normally.
	Blinking with WLAN	WPS is enabled and waiting for the response from the wireless client.
 WLAN	Off	Wireless function is not ready.
	On	Wireless function is ready.
	Blinking	Data is transmitting (sending/receiving).
	Blinking with ACT	WPS is enabled and waiting for the response from the wireless client.
 UPLINK	On	Connects to a Gateway.
	Off	Disconnects to a Gateway.

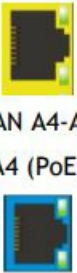


 	Interface	Description
	WLAN ON/OFF WPS	Wireless band will be switched /changed according to the button pressed and released. For example, <ul style="list-style-type: none"> <li>● 2.4G (On) and 5G (On) - in default.</li> <li>● 2.4G (Off) and 5G (On) - pressed and released the button once.</li> <li>● 2.4G (On) and 5G (Off) - pressed and released the button twice.</li> <li>● 2.4G (Off) and 5G (Off) - pressed and released the button three times.</li> </ul> WPS - When WPS function is enabled by web user interface, press this button for more than 2 seconds. The router will wait for any wireless client connecting to it through WPS.
		Power switch.
	 PWR	PWR: Connector for a power adapter.
	 LAN A4-A1 A4 (PoE) LAN B	Connectors for local networked devices. <ul style="list-style-type: none"> <li>● Left LED on - The port is connected.</li> <li>● Left LED off - The port is disconnected.</li> <li>● Left LED Blinking - The data is transmitting.</li> <li>● Right LED on -The port is connected with 1000Mbps.</li> <li>● Right LED off - The port is connected with 10/100 Mbps.</li> </ul> In which, LAN A4 is used for PoE connection (for indoor use).
	Factory Reset	Restore the default settings. Usage: Turn on the router. Press the button and keep for more than 10 seconds. Then the router will restart with the factory default configuration.

## Installation


This section will guide you to install the AP through a hardware / wall-mounting connection. For hardware connection, refer to the following steps to connect your devices correctly.

1. Connect VigorAP 906 to the xDSL modem, router, or switch/hub in your network through the LAN B port of the access point by Ethernet cable. You can also connect VigorAP 906 to a Vigor router via the wireless connection.
  - For detailed information, refer to the VigorAP 906 User's Guide.
2. Connect a computer to another available LAN A port. Make sure the subnet IP address of the PC is the same as the VigorAP 906 management IP, e.g., 192.168.1.X.
3. Connect the A/C power adapter to the wall socket, and then connect it to the PWR connector of the access point.
4. Power on VigorAP 906.
5. Check all LEDs on the front and back panel. The ACT LED on the front panel should blink; the WAN/LAN LED on the back panel should be on if the access point is correctly connected to the xDSL modem, router or switch/hub.

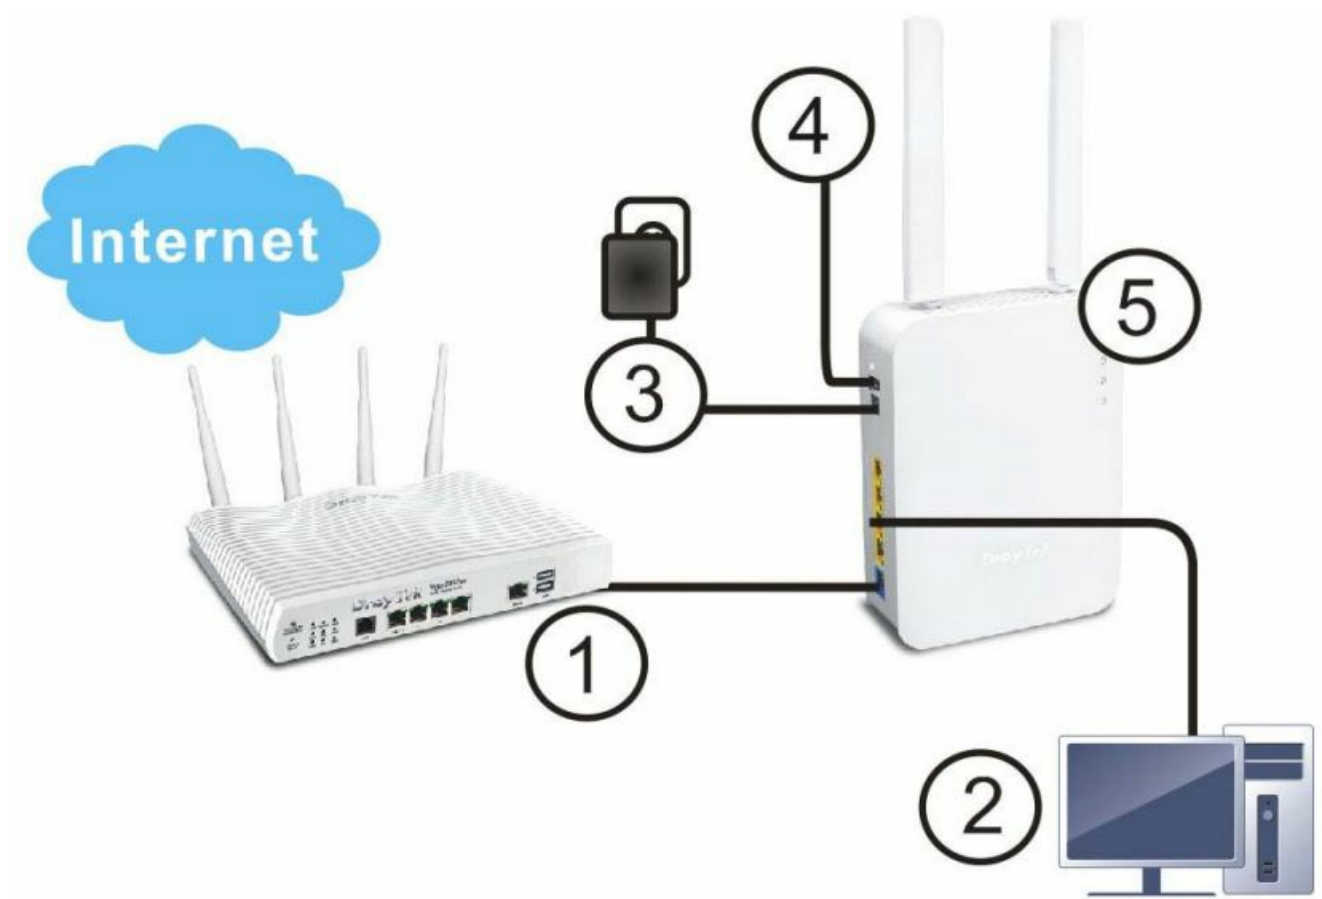

For wall mounting, refer to the following steps.


1. Drill two holes on the wall. The distance between the holes shall be 100.75mm. The recommended drill diameter shall be 6.5mm (1/4").
2. Fit screws into the wall using the appropriate type of screw plug.
3. Hang the VigorAP directly onto the screws.

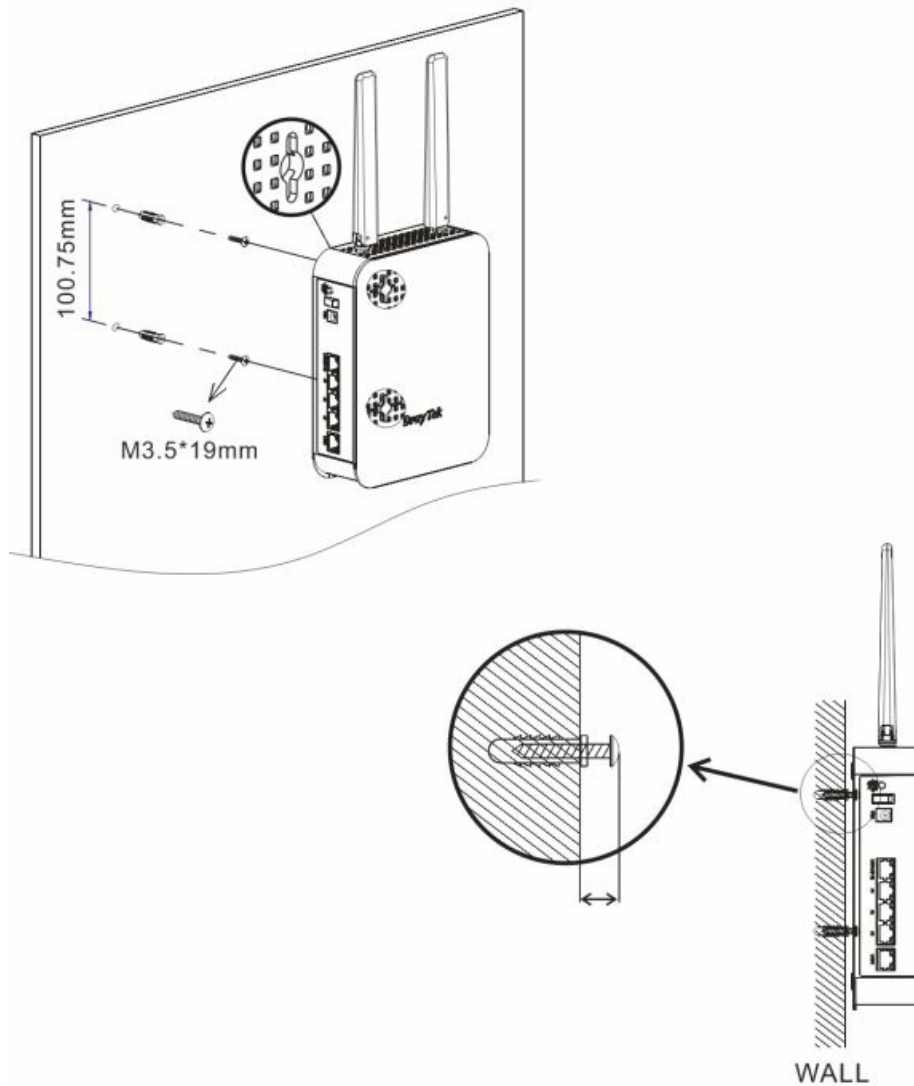

## Connection and Configuration

This section will guide you to configure AP settings to establish the wireless network through a web browser.

1. Make sure your PC connects to the device correctly.
2. Open a web browser on your PC and type <http://192.168.1.2>. A pop-up window will open to ask for a username and password. Please type "admin/admin" on Username/Password and click Login.

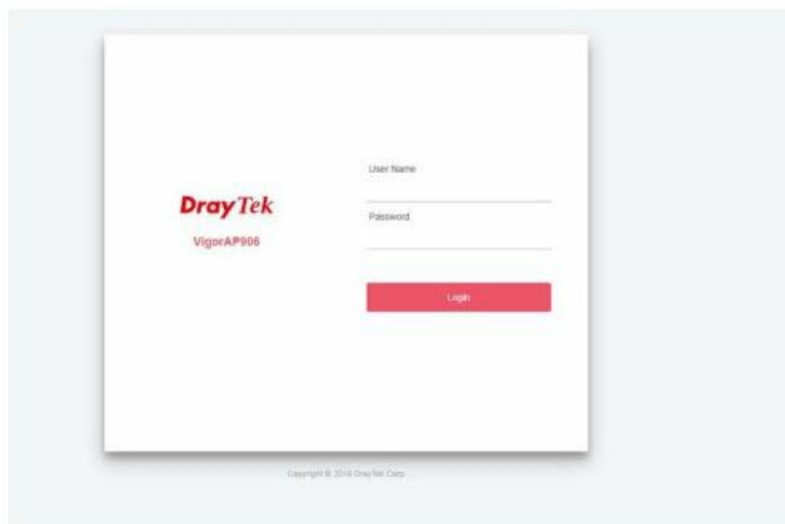

**Note** You may either simply set up your computer to get IP dynamically from the router or set up the IP address of the computer to be in the same subnet as the IP address of VigorAP 906.

- If there is no DHCP server on the network, then VigorAP 906 will have an IP address of 192.168.1.2.
- If there is DHCP available on the network, then VigorAP 906 will receive its IP address via the DHCP server.
- If you connect to VigorAP by wireless LAN, you could try to access the web user interface through <http://vigorap.com>.

### Connected As a Mesh Node (in Mesh Network)




1. Install VigorAP on the place you want.
2. As a mesh node, settings related to VigorAP 906 must be configured by a remote Mesh Root (e.g., VigorAP 906) within the mesh network. The user must detect VigorAP 906 via a Mesh Root to add it as a mesh node.

### Connected As an Access Point


As an access point, VigorAP 906 must be connected to a router and configured in the operation mode.

1. Connect VigorAP to a Vigor router.
2. Use a twisted-pair cable with RJ-45 plugs at both ends and plug into the Ethernet device (e.g., Vigor router) and Ethernet port of VigorAP.
3. There are two methods to configure VigorAP.
  - **Method 1:**
    - (a) First, open a web browser on your PC and type <https://192.168.1.2>. A pop-up window will open to ask for a username and password.

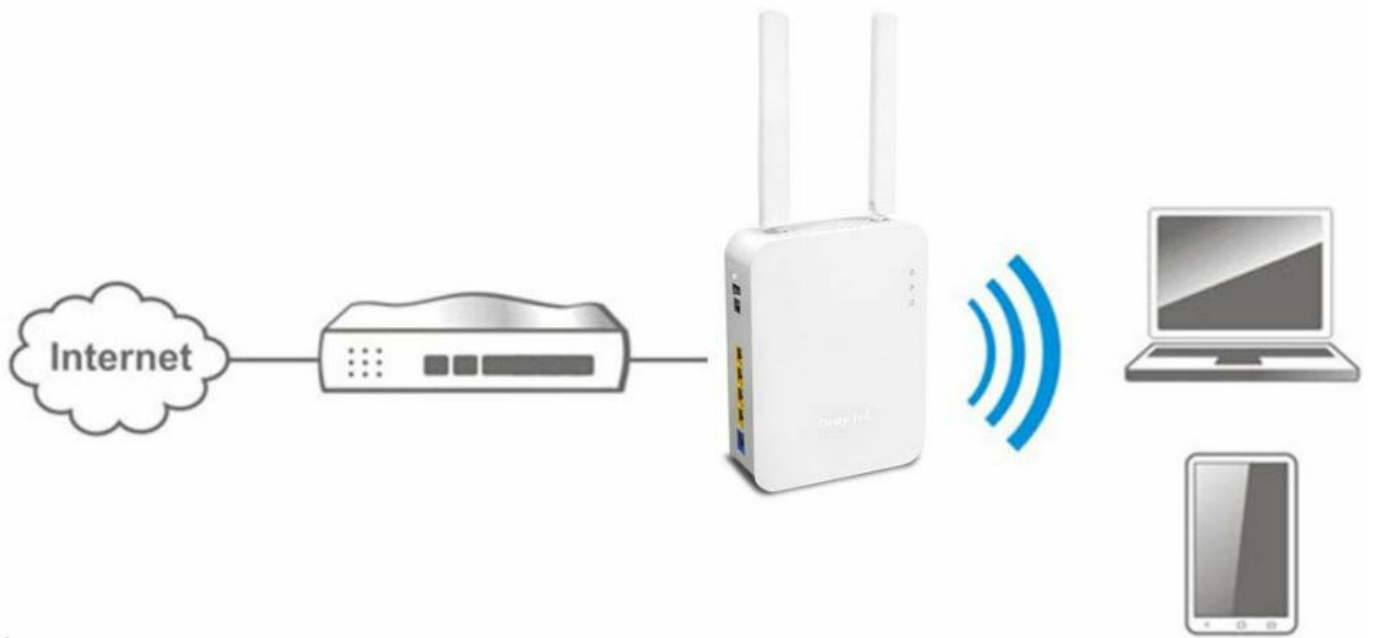

The image shows a login page for the DrayTek VigorAP906. The page has a light blue background. In the center, there is a white rectangular box containing the login form. The form includes the DrayTek logo and the model name "VigorAP906" on the left. On the right, there are two input fields: "User Name" and "Password". Below these fields is a red "Login" button. At the bottom of the page, there is a small copyright notice: "Copyright © 2018 DrayTek Corp."

- (b) After clicking Login, the Quick Start Wizard for configuring wireless settings will appear as follows.

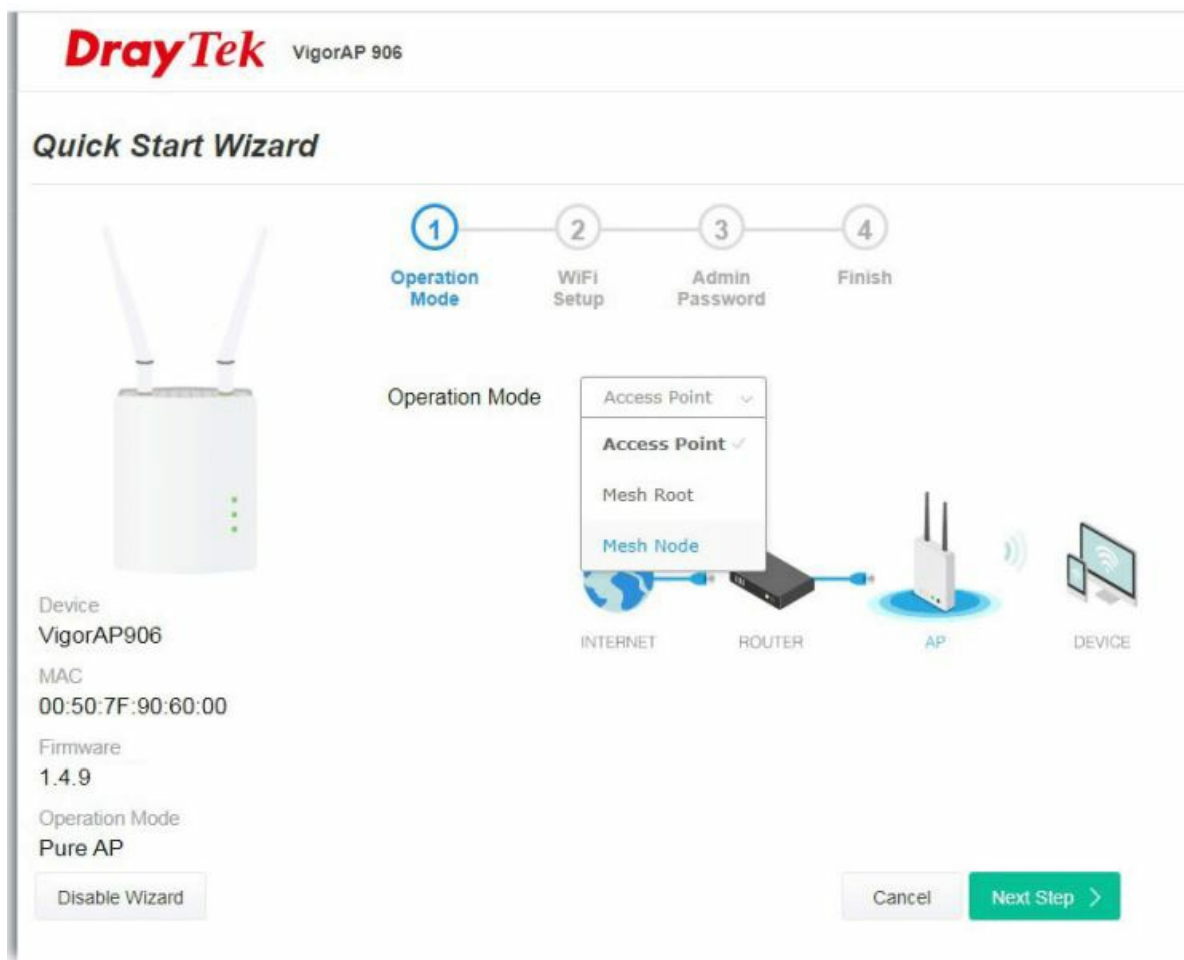

- (c) Follow the on-screen steps to finish the network connection.

## Method 2:


- (a) Use a mobile phone to scan the QR code named with the DrayTek Wireless App to download the DrayTek Wireless APP.



- (b) After downloading, run the APP.

(c) From the home page, click the Connect icon to access the Connect page. Next, press the QR code icon next to the Scan QR Code on your phone screen to open the camera. Scan the QR code-named with Connect SSID to access the web user interface (configuration wizard) of VigorAP

906. (For iOS users, the SSID and the password will be shown first. Simply click the Connect button to access the web user interface of VigorAP.)

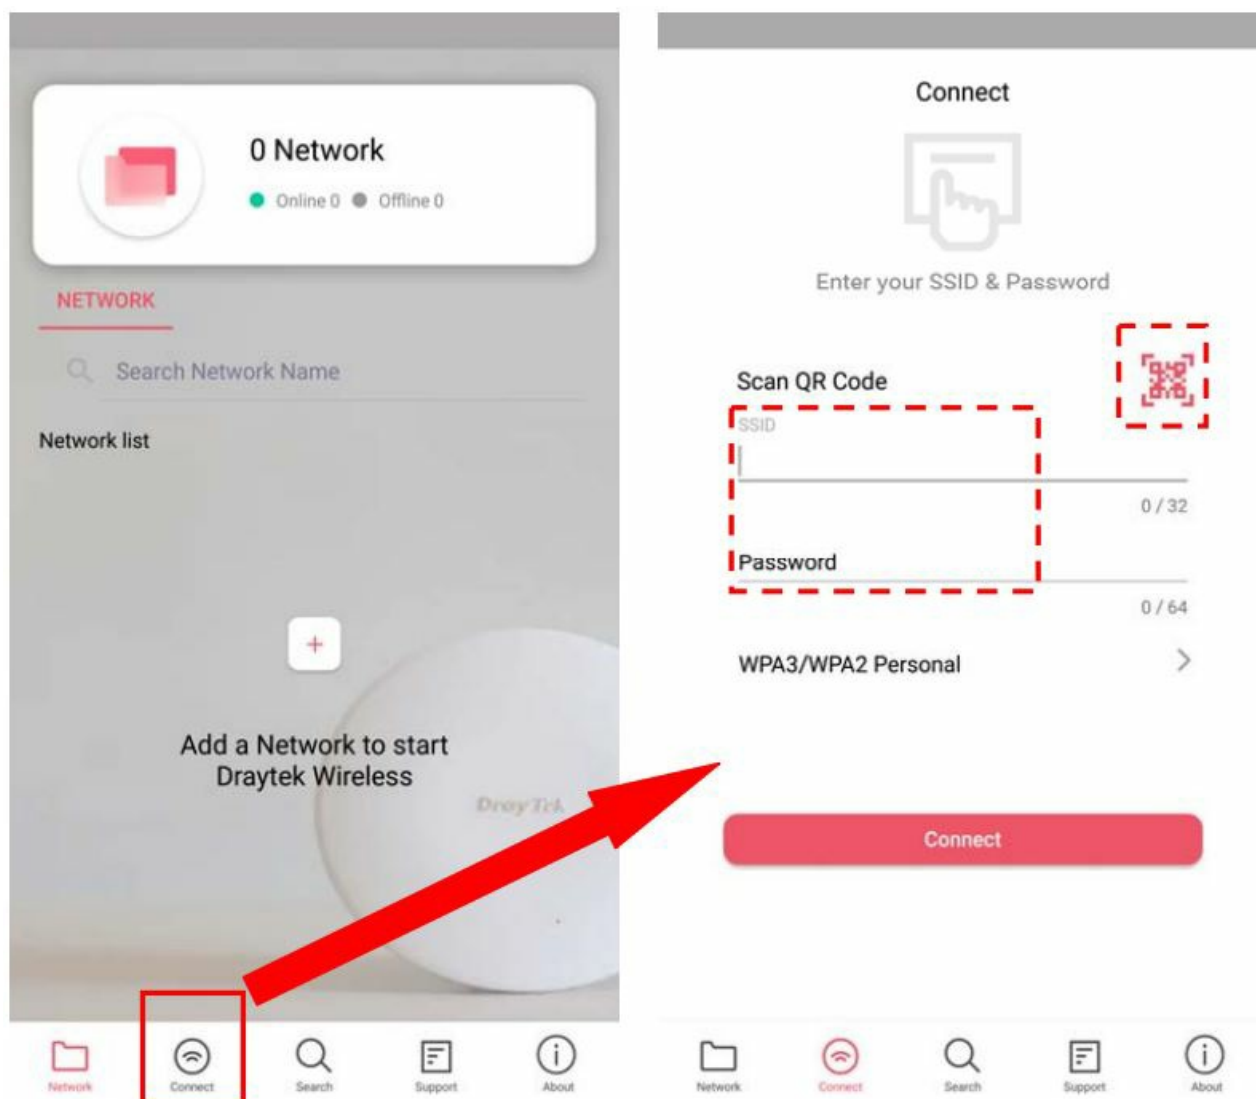

## Customer Service

If the device cannot work correctly after trying many efforts, please contact your dealer/DrayTek for further help right away. For any questions, please feel free to send an e-mail to "support@draytek.com".

## Be a Registered Owner

Web registration is preferred. You can register your Vigor router via <https://myvigor.draytek.com>.

## Firmware & Tools Updates

Due to the continuous evolution of DrayTek technology, all routers will be regularly upgraded. Please consult the DrayTek website for more information on newest firmware, tools, and documents.

<https://www.draytek.com>

GPL Notice This DrayTek product uses software partially or completely licensed under the terms of the GNU GENERAL PUBLIC LICENSE. The author of the software does not provide any warranty. A Limited Warranty is offered on DrayTek products. This Limited Warranty does not cover any software applications or programs.

To download source codes please visit: <http://gplsource.draytek.com>




For any questions, please feel free to contact DrayTek technical

support at

- [support@draytek.com](mailto:support@draytek.com) for further information.

---

## Documents / Resources

	<p><a href="#">DrayTek VigorAP 906 802.11ax Access Point</a> [pdf] User Guide VigorAP 906 802.11ax Access Point, VigorAP 906, 802.11ax Access Point, Access Point, Point</p>
---	--

## References

- [Home | DrayTek](#)
- [GNU General Public License v2.0 - GNU Project - Free Software Foundation](#)
- [MyVigor - DrayTek](#)
- [Home | DrayTek](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.