

DRIVEN 23D24R22 R C School Bus



# DRIVEN 23D24R22 R C School Bus User Manual

[Home](#) » [DRIVEN](#) » [DRIVEN 23D24R22 R C School Bus User Manual](#) 

## Contents

- 1 [DRIVEN 23D24R22 R C School Bus](#)
- 2 [Product Information](#)
- 3 [Product Usage Instructions](#)
- 4 [TO START PLAYING](#)
- 5 [Instructions](#)
- 6 [Alignment lever](#)
- 7 [User Guide](#)
- 8 [BATTERY ADVICE](#)
- 9 [FCC Warning](#)
- 10 [Documents / Resources](#)
  - 10.1 [References](#)



**DRIVEN 23D24R22 R C School Bus**



## Product Information

### Specifications:

- **Brand:** BATTAT
- **Model:** MD
- **Vehicle Batteries:** 6 x AA (1.5V) included
- **Remote Control Batteries:** 2 x AA (1.5V) not included

## Product Usage Instructions

### Starting to Play

1. Make sure the ON/OFF switch on the vehicle and remote are on the ON position.
2. Press on the steering wheel as shown in Fig. 4, then press any button on the remote as indicated in Fig. 3.
3. The vehicle will go into sleep mode after 30 minutes of inactivity. Wake it up by pressing on the steering wheel.
4. If the vehicle disconnects from the controller, switch both the truck and the controller OFF and then back ON.  
Continue with step 2.

### Steering Alignment Adjustment

If the vehicle drifts to the right, turn the lever towards the left (L).

### Battery Advice

Requires 6 x AA (1.5V) batteries for the truck (included) and 2 x AA (1.5V) batteries for the remote control (not included). Follow instructions carefully for battery usage to ensure safety and optimal performance.

## FAQ

- **Q: What should I do if the vehicle disconnects from the controller?**

- A: Switch both the truck and the controller OFF, then switch them back ON again to reconnect.

- **Q: How long does the vehicle stay in sleep mode?**

- A: The vehicle will automatically go into sleep mode after 30 minutes of inactivity to save power. Wake up by pressing on steering wheel, as indicated in Fig. 4.


## R/C SCHOOL BUS

### AUTOBUS SCOLAIRE TÉLÉCOMMANDÉ


## TO START PLAYING

1. Make sure the ON/OFF switch on the vehicle and remote are on the ON position (Fig. 1 & Fig. 2).
2. Press on steering wheel, as indicated in Fig. 4, then press any button on the remote, as indicated in Fig 3.
3. The vehicle will automatically go into sleep mode after 30 minutes of inactivity to save power. Wake up by pressing on steering wheel, as indicated in Fig. 4.
4. In case the vehicle disconnects from the controller, switch the truck and the controller OFF, then switch them back ON again (Fig. 1 & Fig. 2). Continue with step 2.


**FIG. 1**

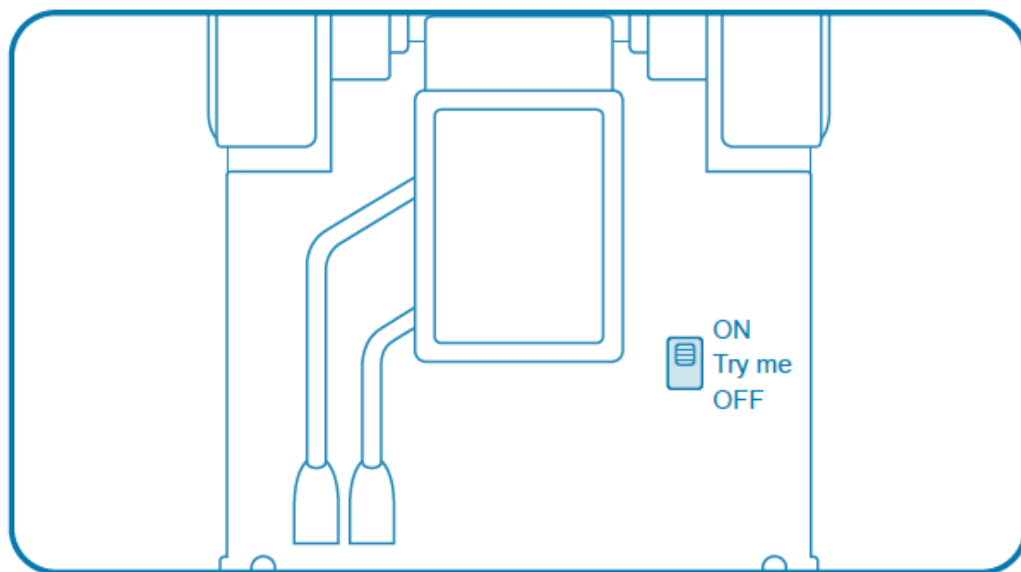 


**FIG. 2**

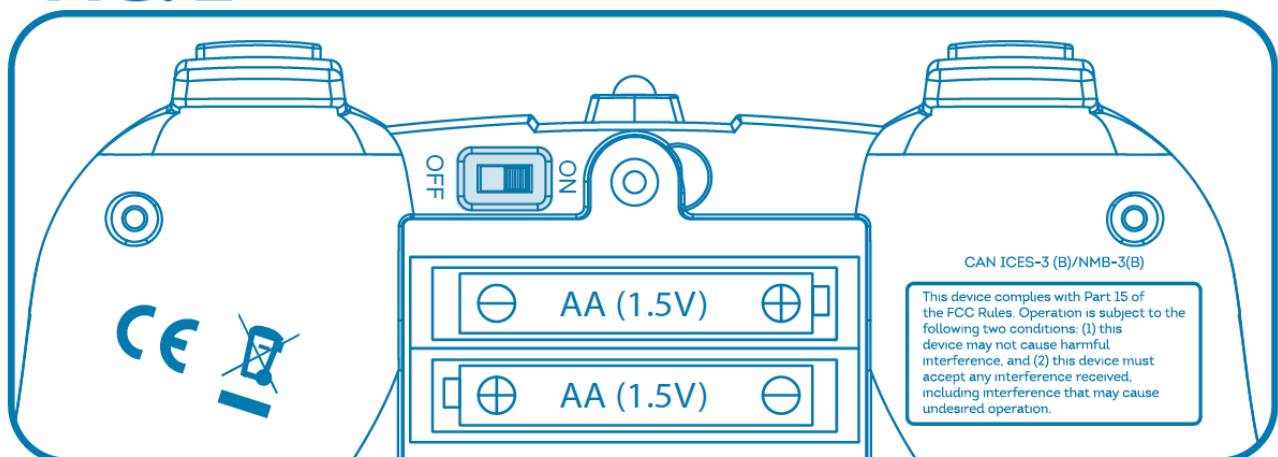 


# FIG. 3

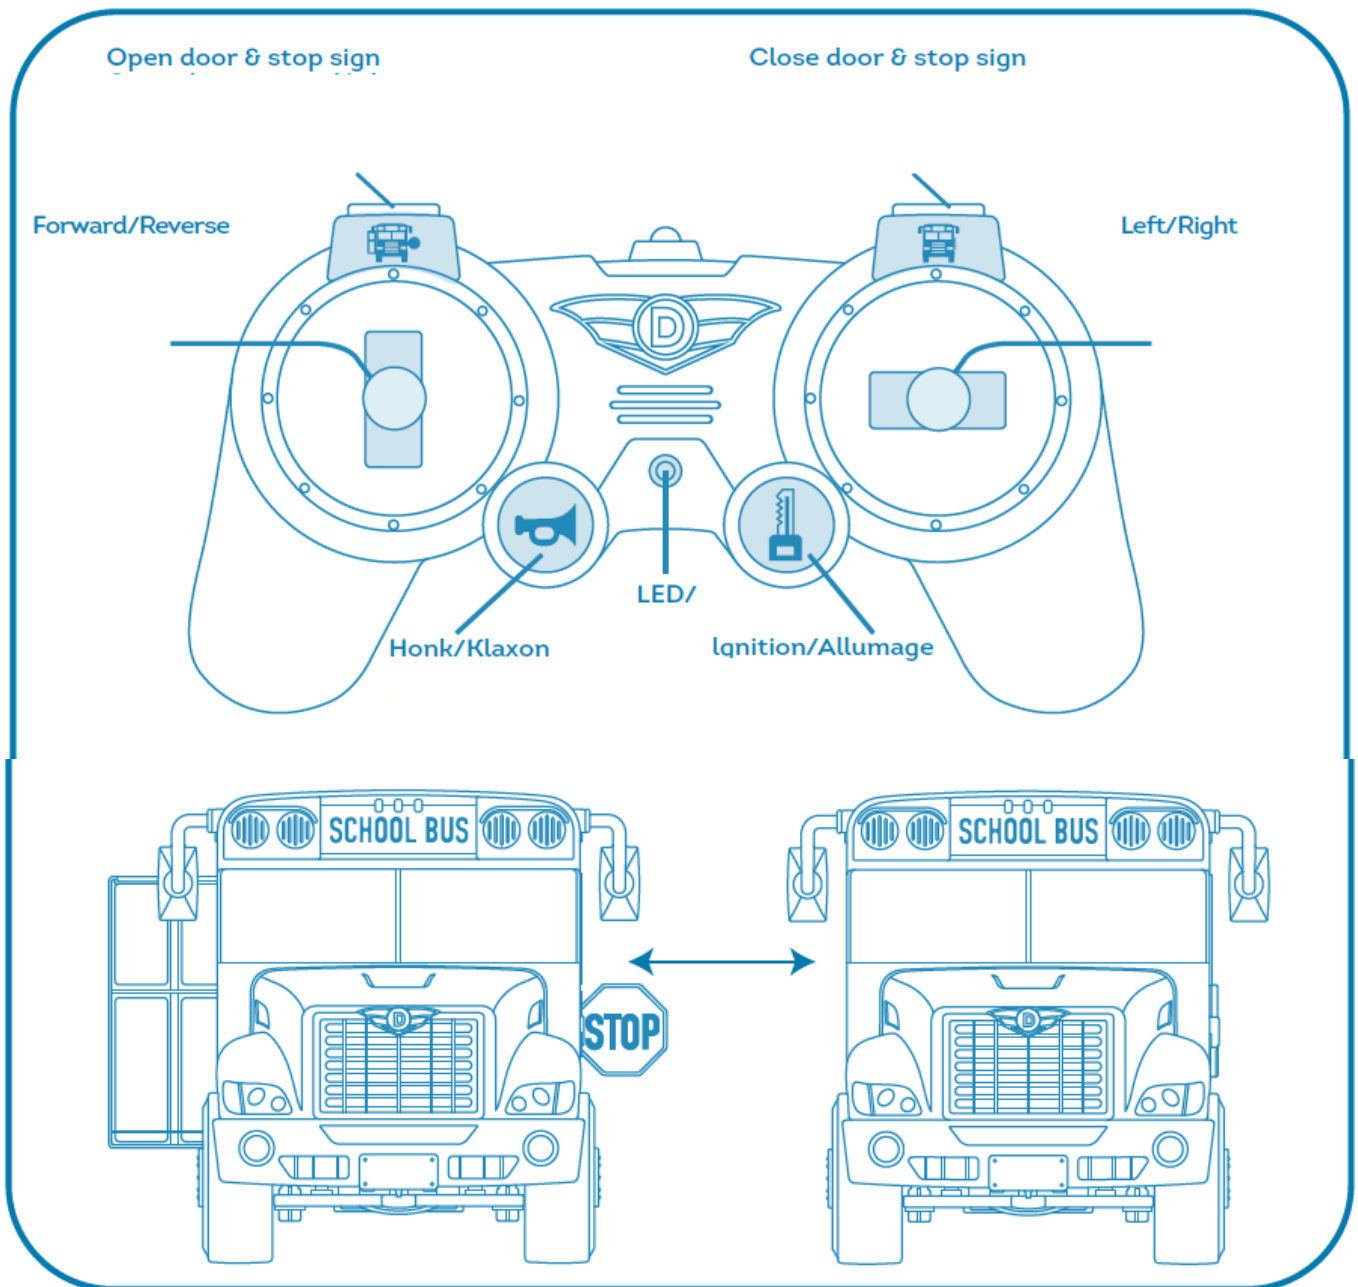 

# FIG. 4

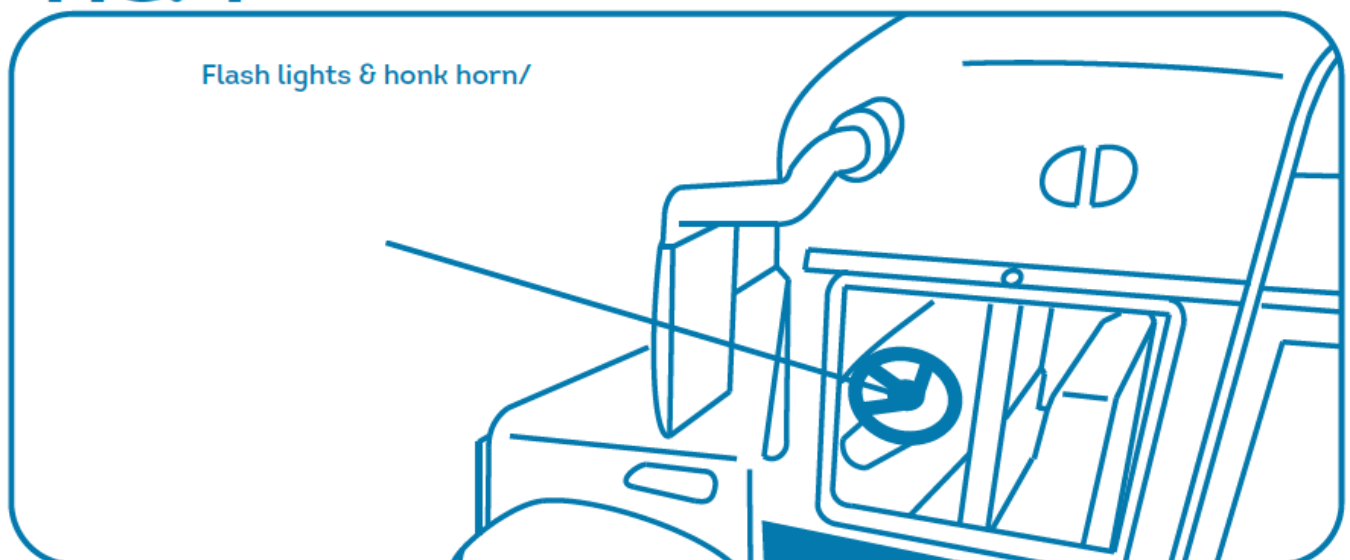 

Slide the roof to see inside

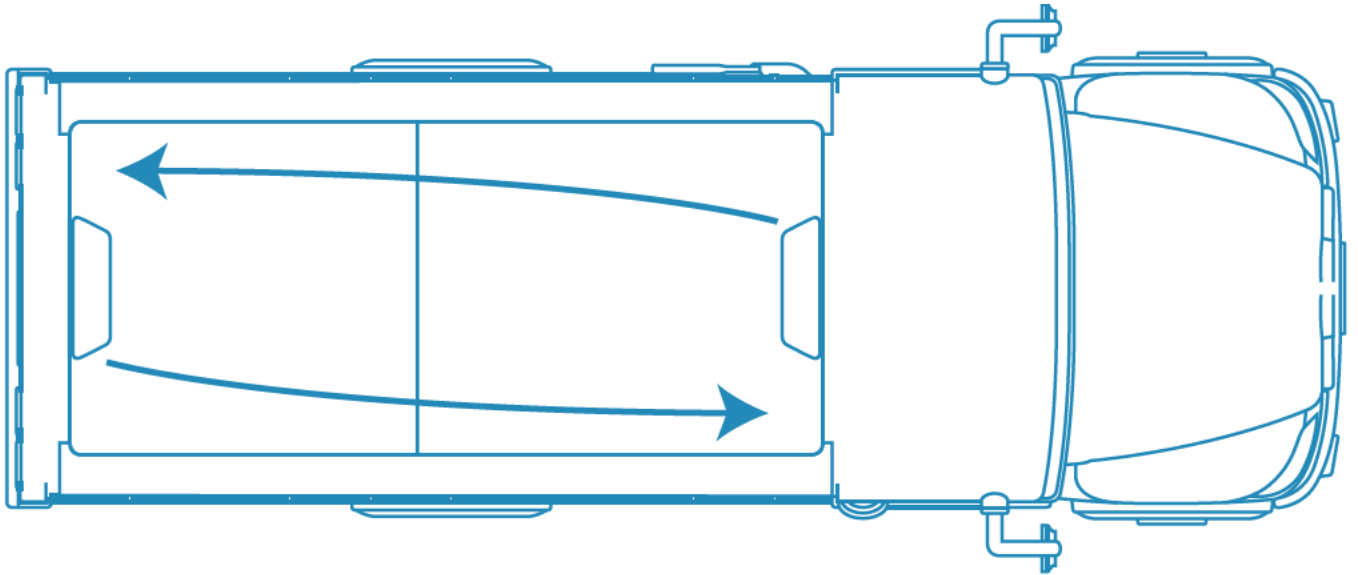 

## Troubleshooting



## Instructions

- **Frequency bands:** 2420MHz-2470MHz
- **Maximum radio-frequency power:** 5dbm
- Use alkaline batteries for longer play time.



**UK  
CA**



 
- **WARNING!:** SMALL PARTS – CHOKING HAZARD. Not suitable for children under 3 years.



**WH1228/WH1228Z**

**WARNING:** CHOKING HAZARD-Small parts. Not for children under 3 years.

### **Alignment lever**

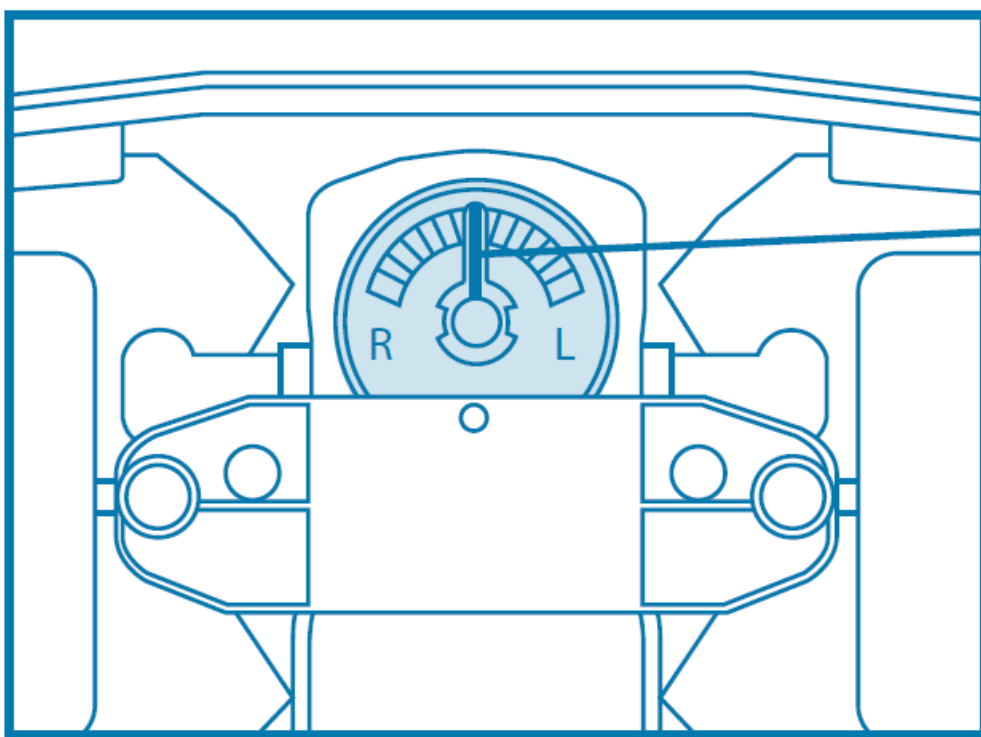

### **STEERING ALIGNMENT ADJUSTMENT**

If the vehicle does not drive in a straight line, adjust the alignment using the alignment lever. If the vehicle drifts to the left, turn the lever towards the "R". If the vehicle drifts to the right, turn the lever towards the "L".

### **User Guide**


1. Do not use near seawater or in dirty and dusty environments.

2. Do not use in the rain or immediately after rainfall.
3. If the vehicle gets wet, open the battery compartment immediately, remove batteries, and turn the vehicle upside down to dry.
4. Always clean and dry the vehicle and remote after using outdoors to avoid damage.
5. The remote's control distance may be reduced when using indoors.
6. The vehicle's remote control may not work after long storage.


**Follow the steps below to re-start:**

1. Always replace the batteries in the vehicle with 6 new AA alkaline batteries (Fig. 5).
2. Follow steps 1 and 2 on the first page to start playing.
3. If the vehicle does not work, put 2 new AA alkaline batteries in the remote (Fig. 6).
4. Follow steps 1 and 2 on the first page to start playing.

**FIG. 5**

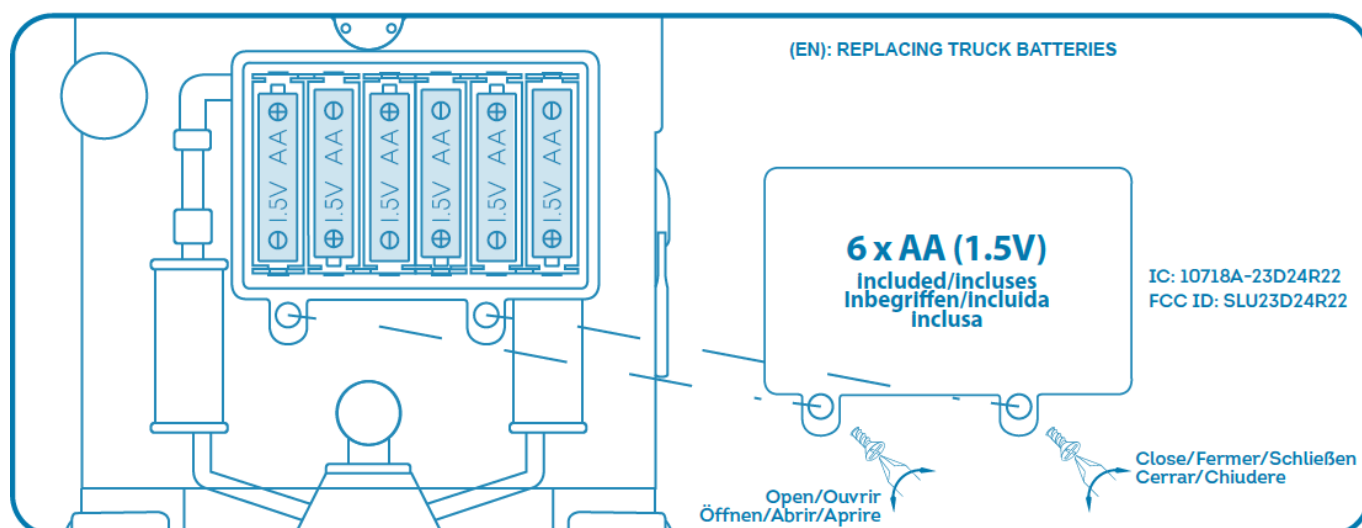 

**FIG. 6**

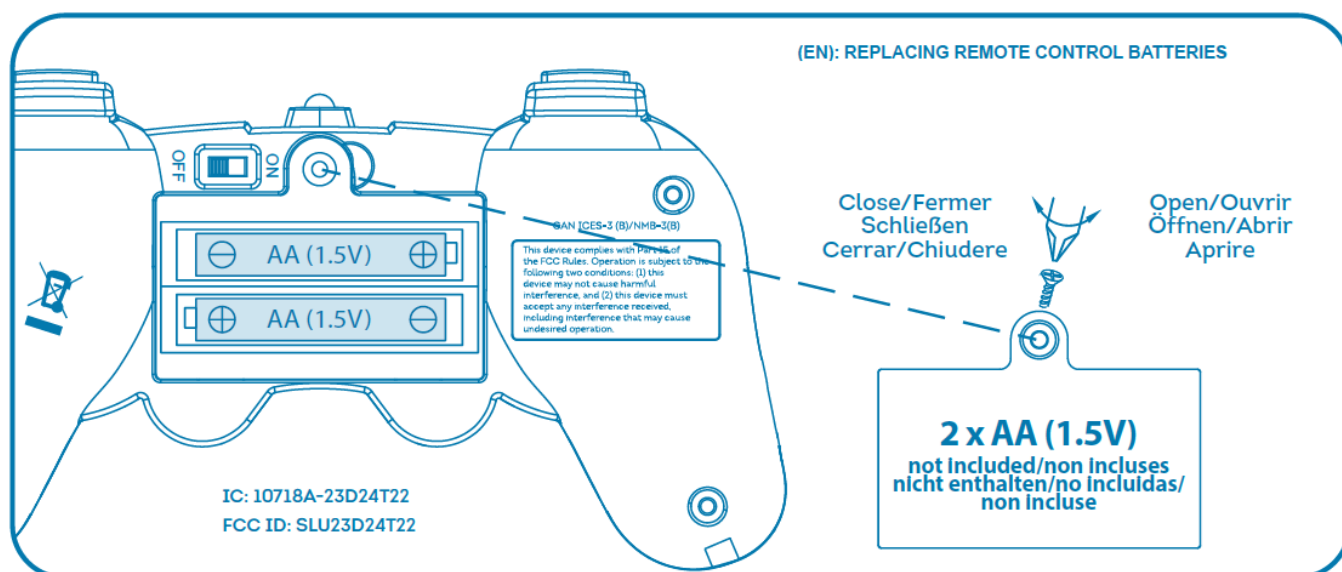 

Please remove all packaging materials before giving to children

## BATTERY ADVICE

- Requires 6 x AA (1.5V) batteries for the truck (included). Requires 2 x AA (1.5V) batteries for the remote control (not included). Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.

**ATTENTION:** When the module's functions lose performance, follow instructions carefully to install new batteries.

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## NOTE

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

 
## Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.



---

## Documents / Resources

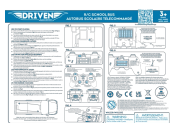

[DRIVEN 23D24R22 R C School Bus](#) [pdf] User Manual  
23D24R22 R C School Bus, 23D24R22, R C School Bus, School Bus, Bus

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.