



 
DRIVEN R-C Front end Loader User Manual

[Home](#) » [DRIVEN](#) » DRIVEN R-C Front end Loader User Manual 



R/C FRONT END LOADER REPLACING TRUCK BATTERIES

Use alkaline batteries for longer play time.

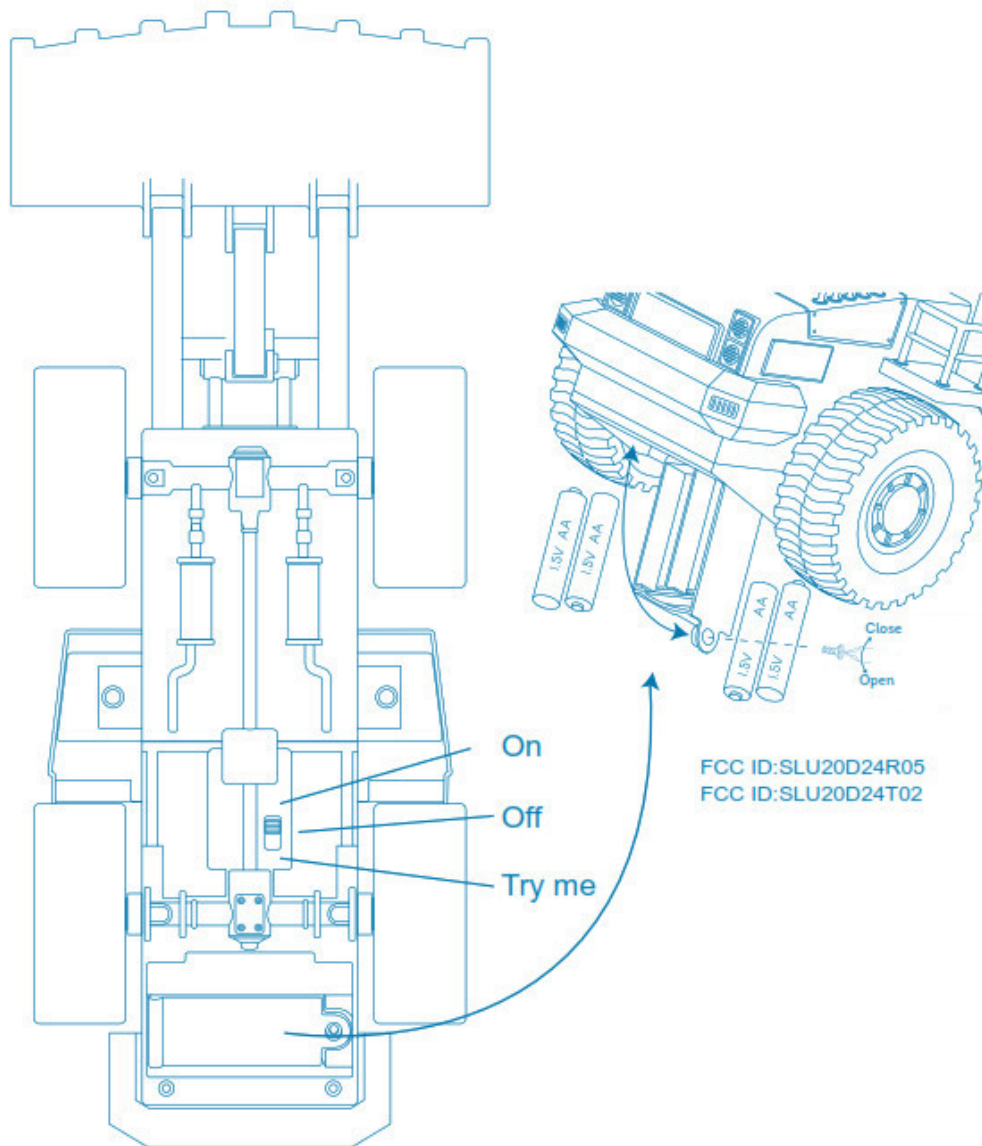

Please retain this information for future reference.

Contents

[1 REPLACING REMOTE CONTROL BATTERIES](#)

[2 Documents / Resources](#)

[3 Related Posts](#)

 
REPLACING REMOTE CONTROL BATTERIES

Note: Need 2 x AA (1.5V) battery (not included)

If batteries are drained after a long storage period:

Turn OFF the truck and remote controller. Replace the batteries with new ones. Turn ON the truck and remote controller.

Frequency bands: 2430MHz-2454MHz Maximum radio-frequency power: 5dbm

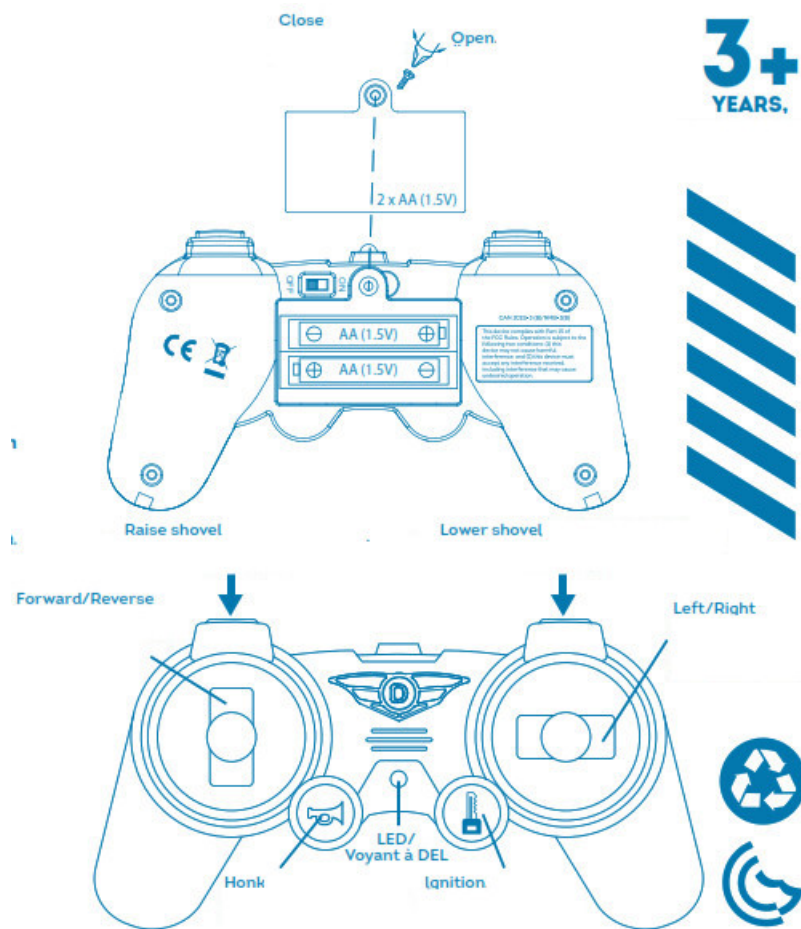

WH1143/WH1143Z



Excessive sand, dirt, and/or water may cause the toy to malfunction. Rough or inappropriate usage may result in permanent damage to the toy.

 
WARNING!: SMALL PARTS – CHOKING HAZARD. Not suitable for children under 3 years.



WARNING:
CHOKING HAZARD-Small partly. Not for children under 3 years

FIRST TIME PLAYING: 1) Install 2 x AA (1.5V) batteries in remote control, and set switch to ON position. 2) Set truck switch to ON position. 3) The truck and the remote control are connected when the LED stops flashing. 4) Press the ignition button to start playing.

SLEEP MODE: Truck goes into sleep mode after 2 minutes of inactivity. Wake up by pressing the truck roof buttons or remote control ignition button.

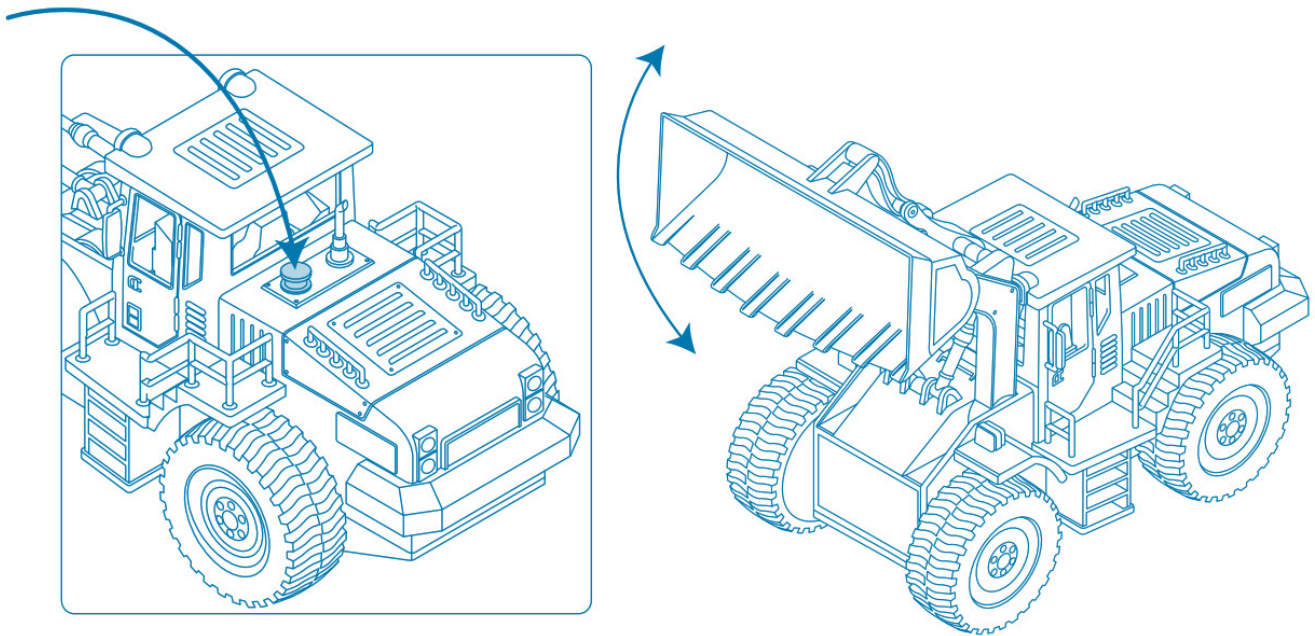

Don't load over 300g to avoid shovel arm lifting damage.

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

BATTERY ADVICE Requires 4 x AA (1.5V) batteries for the truck (included) Requires 2 x AA (1.5V) batteries for the remote control (not included) Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited.

ATTENTION: When the module's functions lose performance, follow instructions carefully to install new batteries.

CAN ICES-3 (B)/NMB-3(B)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Warning: changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please remove all packaging materials before giving to children

Documents / Resources

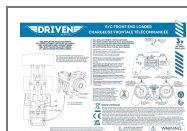

[DRIVEN R-C Front end Loader](#) [pdf] User Manual
20D24R05, SLU20D24R05, R-C Front end Loader

Manuals+.