



DROP B08L96PV42 Shift Mechanical Keyboard User Manual

[Home](#) » [DROP](#) » DROP B08L96PV42 Shift Mechanical Keyboard User Manual 

DROP B08L96PV42 Shift Mechanical Keyboard



Contents

1 GETTING STARTED WITH YOUR NEW SHIFT KEYBOARD

1.1 INITIAL START-UP

1.2 USB HUB FUNCTIONALITY

1.3 SHIFT WARRANTY

2 DEFAULT HOT KEYS

2.1 LED KEYS

2.2 MEDIA KEYS

2.3 KEYBOARD OPTION KEYS

2.4 NUMPAD KEYMAP

2.5 MISC CONTROLS

2.6 CUSTOMIZABLE FIRMWARE

3 Documents / Resources

4 Related Posts

GETTING STARTED WITH YOUR NEW SHIFT KEYBOARD

INITIAL START-UP

- Either USB-C port on the SHIFT can be used to connect your keyboard to your computer.
- The keyboard should work out of the box with macOS, Windows and Linux operating systems.

USB HUB FUNCTIONALITY

After connecting the SHIFT keyboard to your computer, the unused USB-C port on the keyboard can be used as an I/O port for your computer. Note: The keyboard dynamically measures and manages power utilization on the USB Vbus.

Typical capacity will vary depending upon the host computer but can be expected to range between 2 and 4 watts.

SHIFT WARRANTY

- In the event that the product purchased experiences defect or failure, please contact the place of purchase and provide your proof of purchase with a description of the issue. Include photos or videos, if applicable.
- Drop Support might ask for additional information, such as the product's serial number, so be sure to have that information ready.
- Drop will request for the product to be sent back to a specified return address, which will be provided to you via email.
- Upon receipt of the defective product, Drop will make every effort possible to ensure your satisfaction before shipping you a replacement.
- You are responsible for the cost of return shipping if a request is submitted after 2 weeks of receiving the item.
- Drop reserves the right to refund the purchase price as its exclusive warranty remedy if a replacement cannot be sourced.

DEFAULT HOT KEYS

Hold Fn key + listed keys to activate

LED KEYS

Fn + A LED Pat tern Select Previous
D LED Pattern Select Next
W LED Brightness Increase
S LED Brightness Decrease
Q LED Scrolling Pattern Speed Decrease
R LED Edge Brightness Increase
F LED Edge Brightness Decrease
E LED Scrolling Pattern Speed Increase
Tab Toggle Breathe Effect
Capslock LED Toggle Scrolling Pattern Direction
X LED On/Off
Z LED Toggle Mode (Keys+Edge, Keys
Only, Edge Only)
V Toggle Edge LED Intensity

MEDIA KEYS

Fn + Page Up Volume Up
* Volume Down
Page Down Mute
Home Play/Pause
End Stop
Numlock Previous
I Next

KEYBOARD OPTION KEYS

Fn + N Toggle keyboard 6KRO/NKRO
(Default state is 6KRO)

NUMPAD KEYMAP

w/ Numlock off

7 Home
9 PgUp
1 End
3 PgDn
8 Up
4 Left
6 Right
2 Down
0 Insert Delete

MISC CONTROLS


Fn + Print Scroll Lock
Fn + R Alt Menu
Fn + B (Hold 3 seconds) DFU mode

CUSTOMIZABLE FIRMWARE

To build new keymaps and hotkeys, please visit the keyboard configurator. dro.ps/a/t-setup-guide



Documents / Resources

	<p>DROP B08L96PV42 Shift Mechanical Keyboard [pdf] User Manual B08L96PV42 Shift Mechanical Keyboard, B08L96PV42, Shift Mechanical Keyboard, Mechanical Keyboard, Keyboard</p>
---	---