

DrunkDeer A75 Rapid Trigger Keyboard User Manual

Home » Drunkdeer » DrunkDeer A75 Rapid Trigger Keyboard User Manual

DrunkDeer A75 Rapid Trigger Keyboard User Manual




Contents


- 1 Package Content
- **2 Wired Connection**
- 3 How to restore the keyboard to default settings
- 4 How To Set The Rapid Trigger Mode
- **5 About The Magnetic Switch**
- **6 How To Control The Backlight Effect**
- 7 How To Switch The Operating Layout
- **8 Control The Volume With The Knob**
- 9 Specification
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

Package Content

A75 MS Keyboard: *1

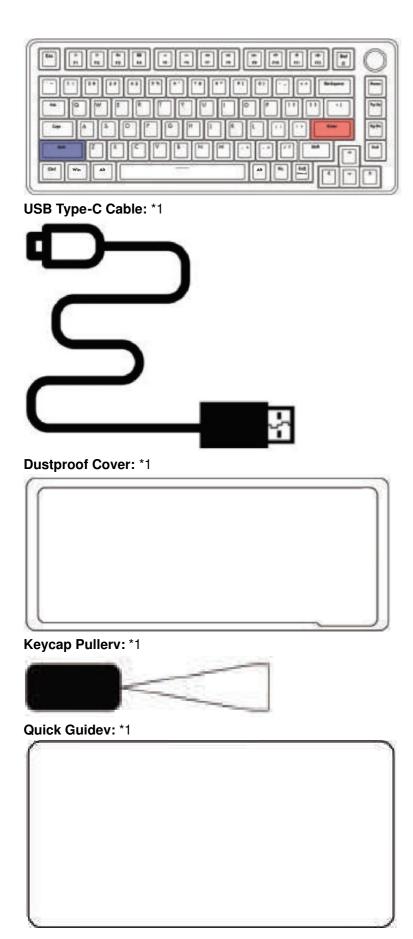


Wired Connection

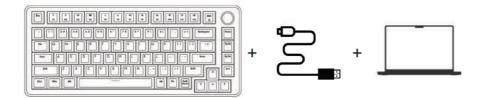

For the devices with Type-C ports (Laptop, for example), you can connect the keyboard to the device with the Type-C cable directly.

How to restore the keyboard to default settings

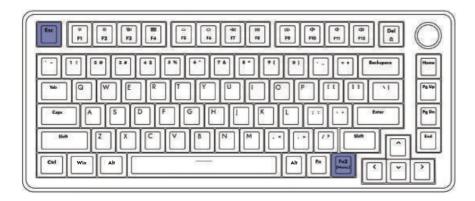

You can restore the keyboard by key combination 'Fn2(Menu) + Esc for 3 seconds The backlight will blink red for 3 seconds and the keyboard will return to its default state.

How To Adjust The Actuation Sensitivity

1. Select the key(Example WASD)



2. Set Action Point Set the point to activate a keypress



How To Set The Rapid Trigger Mode


Enable the Rapid Rrigger Mode



Key sensitivity setting (We Recommend that You Set the Sensitivity of the RT to 0.2M



Don't Forget to Click the 'Save to Keyboard' Button at the end

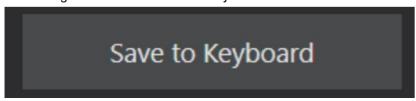


About The Magnetic Switch



- Magnetic Switches utilize Hall Sensors to determine the distance a key is pressed by measuring the strength of the magnetic field.
- It makes it possible to customize the trigger point (actuation point) to your preferred level of pressure and distance, accommodating all typing styles.

- Whether you bottom out or barely touch the keys, we've incorporated adaptive typing to provide noticeable comfort improvement for everyone.
- MS doesn't rely on physical contact, which can wear down the key over time. These switches can be pressed hundreds of millions of times.
- This is vastly superior to the metal contacts of conventional switches.


How To Control The Backlight Effect

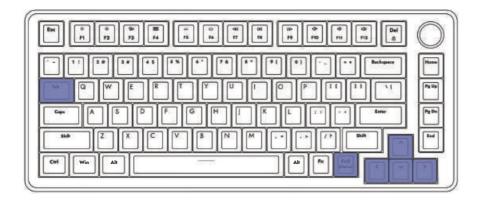

The backlight effect can be changed by key combination as follow:

- Fn2 (Menu)+ Tab: Change the backlight color (Only for certain effects)
- Fn2 (Menu)+ Previous backlight effect
- Fn2 (Menu)++ Next backlight effect
- Fn2 (Menu)+1 Increase the backlight brightness
- Fn2 (Menu)+ Decrease the backlight brightness

How To Switch The Operating Layout

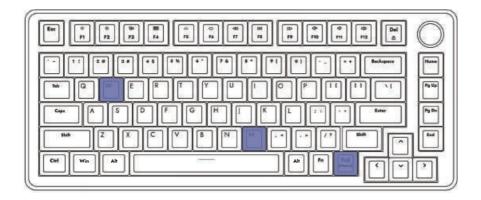

The operating layout of the A75 can be changed by key combination as follow:


Fn2 (Menu)+ M: Switch to the Mac OS

Under the MacOS layout, the function keys on F1 to F12 are available without other driver program.

Fn2 (Menu)+ W: Switch to the Windows

Under the Windows layout, the function keys would retain original key value

Control The Volume With The Knob

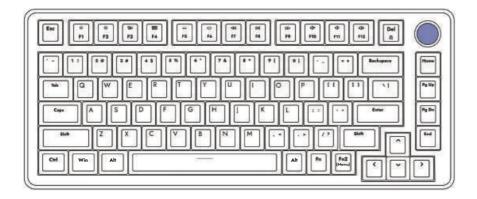

Whether it's MacOS or Windows layout, volume of the computer can be controlled directly by turning the knob.



You can also play or pause music/video by pressing the knob.



Specification

• Keyboard Model: A75

• Keyboard Size: 355mm* 140mm*45mm

• Keyboard Weight: 715 + 20 g

• Layout: ANSI 75%

• Main Material: ABS(Keycaps, Case); PBT Keycaps (option);

Aluminum case (option)

Switch Type: Drunk Deer Magnetic Switch
System Available: Windows & Mac OS

Caution

Please DO NOT place the keyboard in a high-temp or strong magnetic environment.

We DO NOT recommend disassembling or modifying this keyboard. Due to the characteristic of magnetic switches, abnormal environments such as severe impact, high temperature, and strong magnetic fields may cause the keyboard to malfunction.

If you have other questions, please feel free to contact us with hello@drunkdeer.com or go to our official website www.drunkdeer.com for further information and help.



Documents / Resources



<u>DrunkDeer A75 Rapid Trigger Keyboard</u> [pdf] User Manual A75 Rapid Trigger Keyboard, A75, Rapid Trigger Keyboard, Trigger Keyboard, Keyboard

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.