



# DrunkDeer G65 Rapid Trigger Mechanical Keyboard User Manual

[Home](#) » [Drunkdeer](#) » DrunkDeer G65 Rapid Trigger Mechanical Keyboard User Manual 

## Contents

- [1 DrunkDeer G65 Rapid Trigger Mechanical Keyboard](#)
- [2 Package Content](#)
- [3 Wired Connection](#)
- [4 How To Use](#)
- [5 Other Fast Operating](#)
- [6 Specification](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



## DrunkDeer G65 Rapid Trigger Mechanical Keyboard



## Package Content

- G65 Gaming Keyboard \*1
- USB Type-C Cable \*1

- Keycap Puller \*1

 
## G65 Gaming Keyboard



### Keycap Puller



### USB Type-C to A Cable

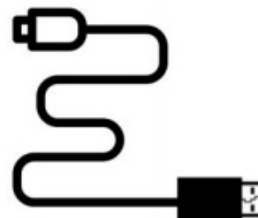

## Wired Connection



+



 
+



For the devices with USB Type-A ports (Personal PC, for example.) You can connect the keyboard to the device with the cable in the package directly.



+

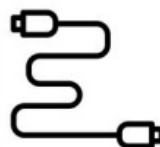


+



For the devices with USB Type-C ports only (Laptop, for example.) You may need to purchase an additional USB Type-C to C cable to connect the keyboard.


## How To Use
 
### How To Restore The Keyboard To Default Settings

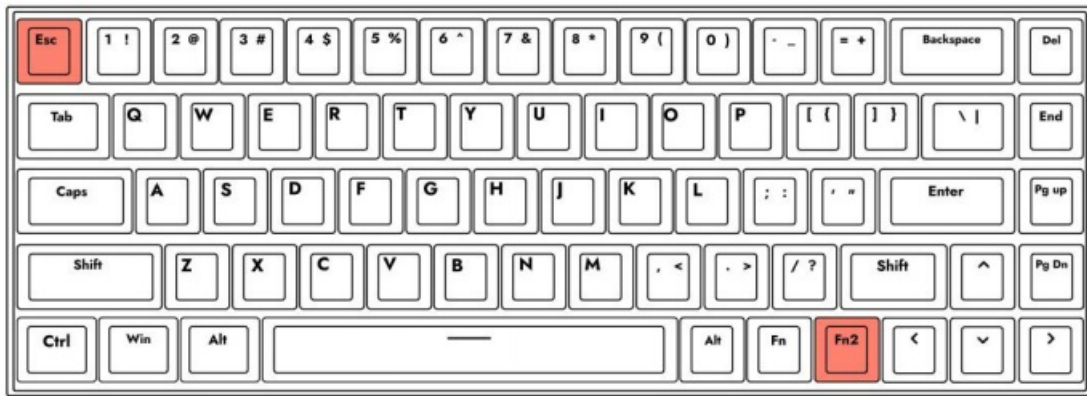


- You can restore the keyboard by key combination 'Fn2+ Esc' for 5 seconds.
- The backlight will blink red for 3 seconds and the keyboard will return to its default state.

### How to Adjust the Actuation Sensitivity in DrunkDeer Antler

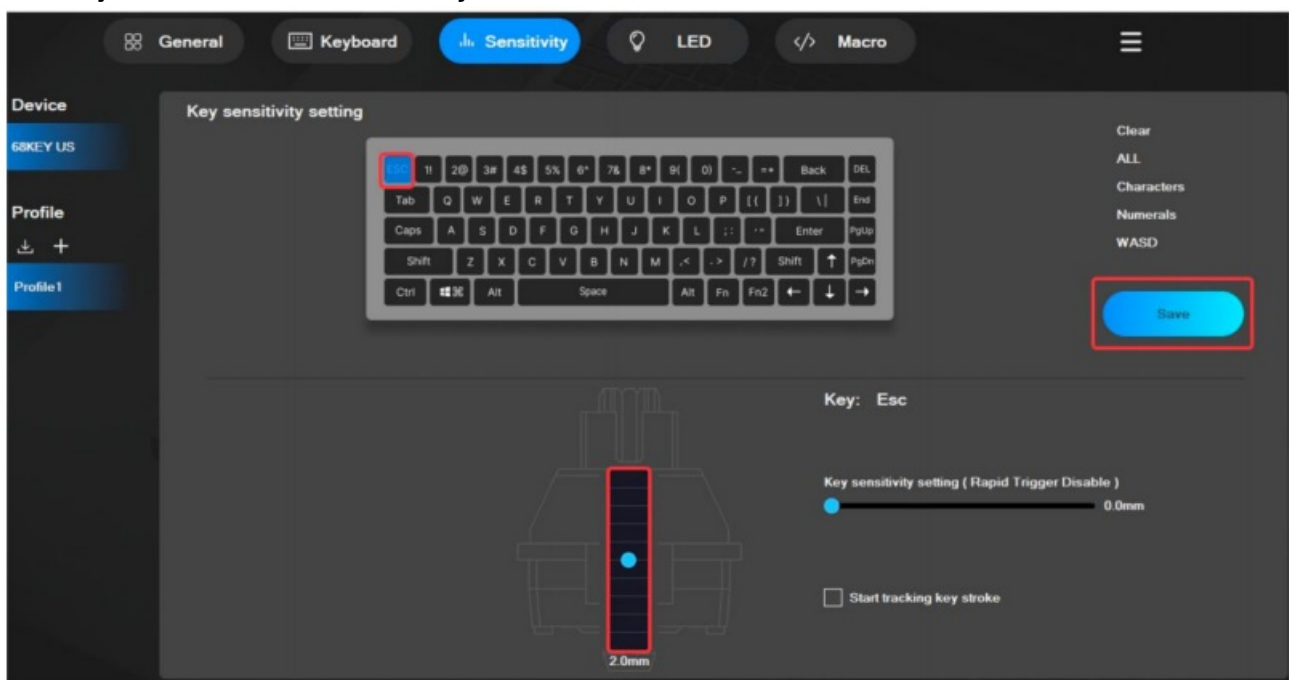 

- After you select the key you want to adjust the sensitivity of, drag the blue dot to select the point you want the key to be triggered.
- Don't forget to save after adjusting the certain keys.


### How To Change The Backlight Effect

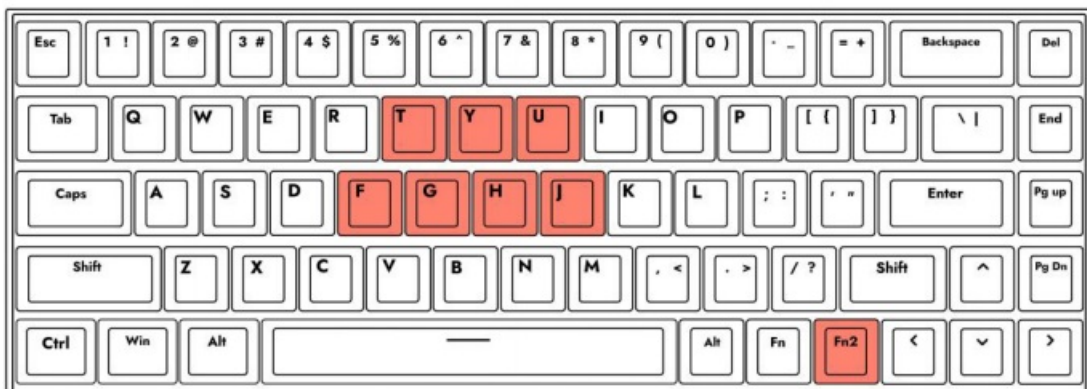 

The backlight effect can be changed by key combination as follows:

- Fn2 + T = Turn on/off the backlight
- Fn2 + Y = change the backlight color
- Fn2 + U = Next backlight effect
- Fn2 + F = Decrease backlight brightness
- Fn2 + G = Increase backlight brightness
- Fn2 + H = Backlight speed down
- Fn2 + J = Backlight speed up

## Other Fast Operating

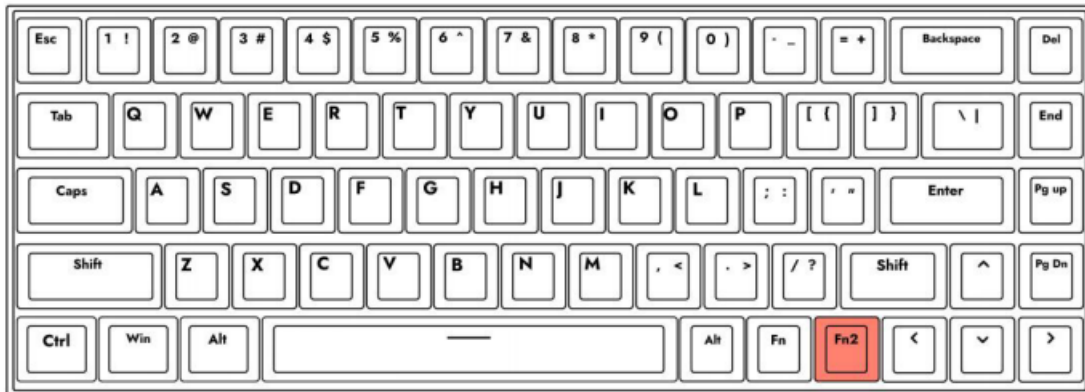 

- Fn2 + Esc = ~'
- Fn2 + 1~0 = F1~F10
- Fn2 + . = F1
- Fn2 + + = F12
- Fn2 + Del = Insert
- Fn2 + End = Home
- Fn2 + PgUp = Print
- Fn2 + PgDn = Scroll
- Fn2 + ] = Pause
- Fn2 + Z = Skip back audio
- Fn2 + X = Ship audio forward
- Fn2 + C = Stop/Play an audio
- Fn2 + B = Mute/Unmute
- Fn2 + N = Volume down
- Fn2 + M = Volume up
- Fn2 + W = Lock /Unlock 'Win' key

## Specification


- **Model Name:** G65
- **Product Size:** 310mm\*102mm\*30mm
- **Product Weight:** 580 ± 20 g
- **Layout:** ANSI 65%
- **Main Material :** ABS(Housing); Silicon(Pad feet)

- **Switch Type:** Magnetic Switch Linear

## Caution

- Please DO NOT place the keyboard in a high-temp or strong magnetic environment.
  - We DO NOT recommend disassembling or modifying this keyboard.
  - Due to the characteristic of magnetic switches, abnormal environments such as strong impact, high temperature, and strong magnetic fields may cause the keyboard to malfunction.
  - The switches can be disassembled or replaced with each other, lubed, or replace the spring. Each keyboard is individually calibrated for precision before leaving the factory.
  - The behavior described above may have a slight impact on individual key press precision. (Does not affect normal use).
- 

## Documents / Resources

	<a href="#">DrunkDeer G65 Rapid Trigger Mechanical Keyboard</a> [pdf] User Manual G65 Rapid Trigger Mechanical Keyboard, G65, Rapid Trigger Mechanical Keyboard, Trigger Mechanical Keyboard, Mechanical Keyboard, Keyboard
--	--

## References

- [User Manual](#)