
Manuals+ — User Manuals Simplified.



DS18 SB37BT Amplified Sound-Bar with BT and USB Player Owner's Manual

Home » DS18 » DS18 SB37BT Amplified Sound-Bar with BT and USB Player Owner's Manual

DS18 SB37BT Amplified Sound-Bar with BT and USB Player

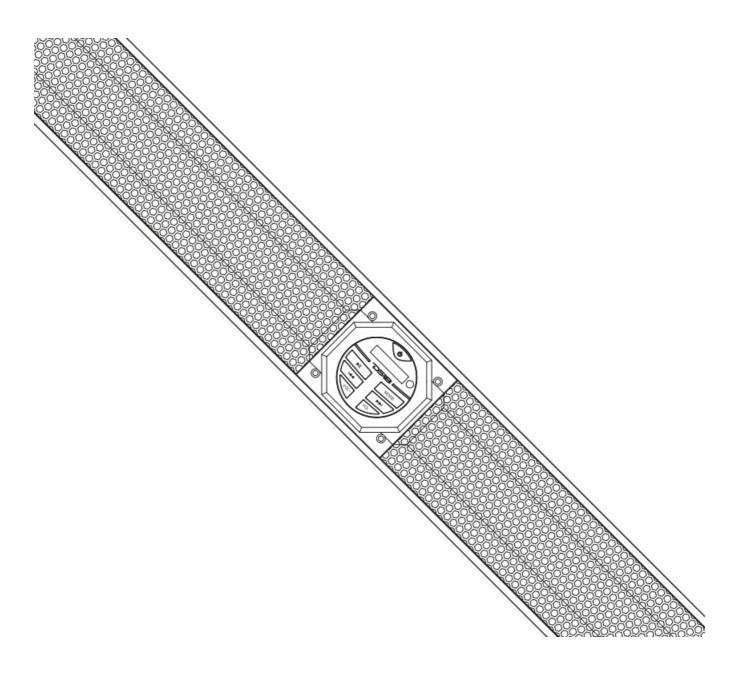

Contents

- 1 FEATURES
- **2 KNOWING YOUR SB37BT**
 - 2.1 PACKAGING INCLUDES
- **3 BT OPERATION**
- **4 PAIRING & DISCOVERING A NEW BT**
- **CONNECTION**
- **5 BT STREAMING**
- **6 MULTIFUNCTION CONTROLLER BT OPERATION**
- **7 VOLUME CONTROL**
- **8 AUX INPUT**
- 9 AUX-IN OPERATION
- **10 USB PLAYER**
- 11 USB CONTROLS OPERATION
- 12 REMOTE CONTROL
- 13 REMOTE CONTROL OPERATION
- **14 INSTALLATION**
- **15 WIRING INSTALLATION**
- **16 DIMENSIONS**
- 17 TROUBLESHOOTING
- **18 SPECIFICATIONS**
- 19 Documents / Resources
 - 19.1 References
- **20 Related Posts**

FEATURES












KNOWING YOUR SB37BT

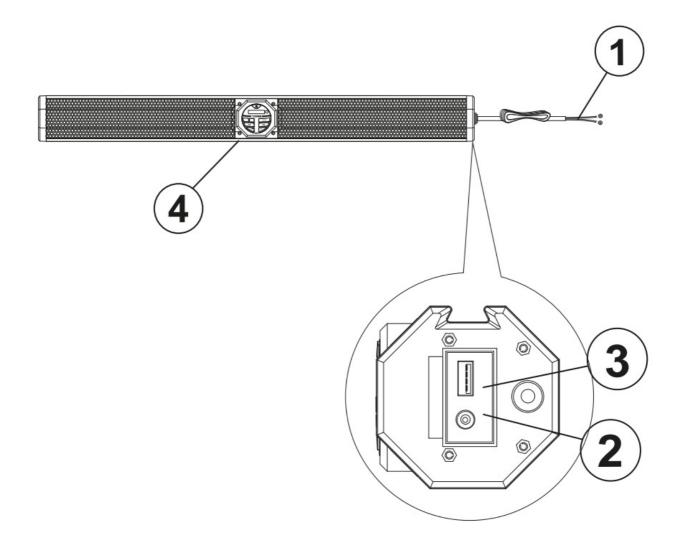


- 1. Main Power Wire
- 2. 3.5mm Aux-Input
- 3. USB Jack
- 4. Control Panel

PACKAGING INCLUDES

- 1x SB37BT Soundbar
- 1x Remote Control
- 3x Tube clamp adjustable 1.5" to
- 2.25" diameter
- 6x NBR pad
- 1 set of screws and stop washers

NOTE: The stainless steel hardware supplied with your soundbar has been chosen to resist rust and corrosion. If the particular hardware supplied will not work for your installation purposes, please be sure to use only appropriate marine grade (stainless steel) mounting hardware.

BT OPERATION

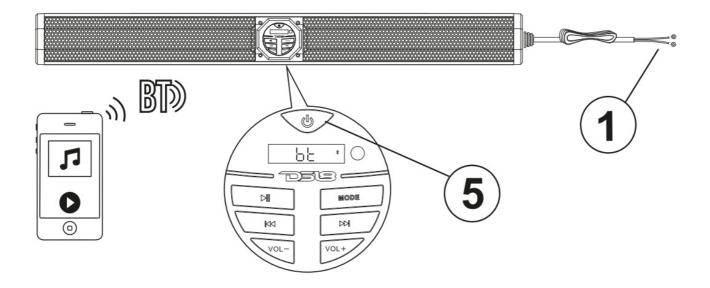


PAIRING & DISCOVERING A NEW BT CONNECTION

- 1. Long Press the Power Button © until the Soundbar Turns On
- 2. The SB37BT Will automatically go into paring mode:

ANDROID AND IOS USERS:

- A. Go into settings menu of your device
- B. Enter the BT Menu
- C. Turn On BT and press SCAN
- D. "SB37BT" Will now be displayed under AVAILABLE DEVICES
- E. If Prompted, enter pass code: "0000"
- 1. If SB37BT is not seen, repeat tha above steps to "refresh" the "device list"
- 2. When the connection is successful, you are now ready to stream music from your favorite media player to the SB37BT

BT STREAMING

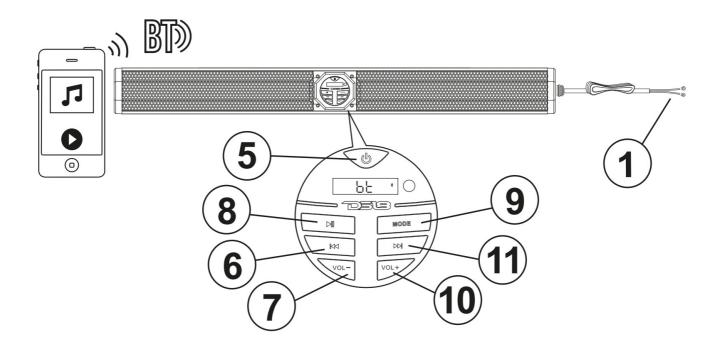

MULTIFUNCTION CONTROLLER BT OPERATION

- 1. Use this PLAY/PAUSE ® button to Play or Pause the music from your device
- 2. Use this NEXT Button to select the next track or song on your playlist.
- 3. Use this PREVIOUS ® Button once to restart the song that is playing, or press again to go back to the previous song in your playlist.


VOLUME CONTROL

- 1. press the VOL+ [®] Button to raise the volume or you can also use the volume control on your connected device.
- 2. To lower the volume press ② the VOLUME DOWN button or use your devices controls

TIPS

For maximum audio performance, depending of your type of music, you can change the EQ presets from your remote control to avoid distortion at hi-level of volume

AUX INPUT

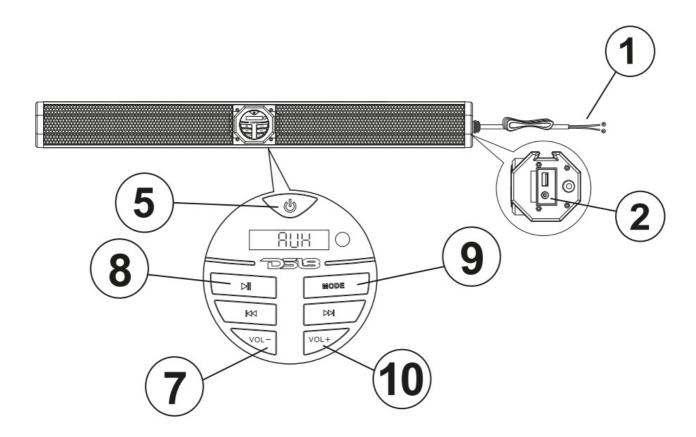

AUX-IN OPERATION


- 1. Long Press the Power Button ⑤ until the Soundbar Turns On
- 2. Use a 3.5mm Jack cable from your device and connect it to the AUX-IN ② jack connector located behind the rubber cover on one side of the soundbar.

3. The AUX Mode is activated once the jack connector is in. now you can adjust the volume for your preference and play audio from your device.

TIPS

it is recommend to set the volume at minimum 75% level before get distortion from your device and only use the volume control from the soundbar as a Master

USB PLAYER

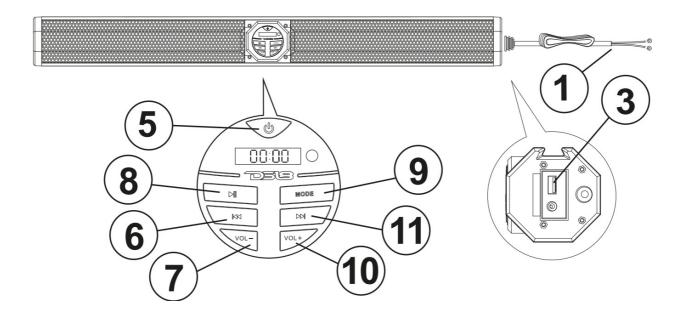

USB CONTROLS OPERATION


- 1. Long Press the Power Button © until the Soundbar Turns On
- 2. Insert an USB Flash Drive on the USB Port ③ that is located behind the rubber cover at one side of the soundbar, once inserted the audio files start playing automatically
- 3. Press PLAY/PAUSE button ® to Play or Pause the Audio Files from your USB.
- 4. .Use this NEXT Button to select the next track or song on your USB playlist.
- 5. Use this PREVIOUS ® Button once to restart the song that is playing, or press again to go back to the previous song in your USB playlist.

TIPS




The USB Player only Accepts MP3 and WMA Formats, also can be use as a 1 amp charger Port

REMOTE CONTROL

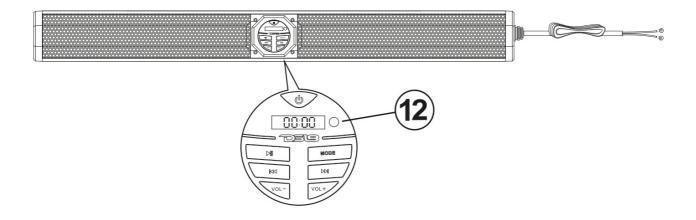

REMOTE CONTROL OPERATION


- 1. Make sure that the battery it is installed and the battery protector has been removed.
- 2. The remote control needs to be pointed to the IR sensor (12) in the Soundbar to operates.
- 3. press the desired function on the remote control: Power ON/OFF (1), Mode (2), EQ presets (3), Next (4), Vol- (5), Play/Pause (6), Vol+ (7), Previous (8), Folder down (9), Folder up (10)

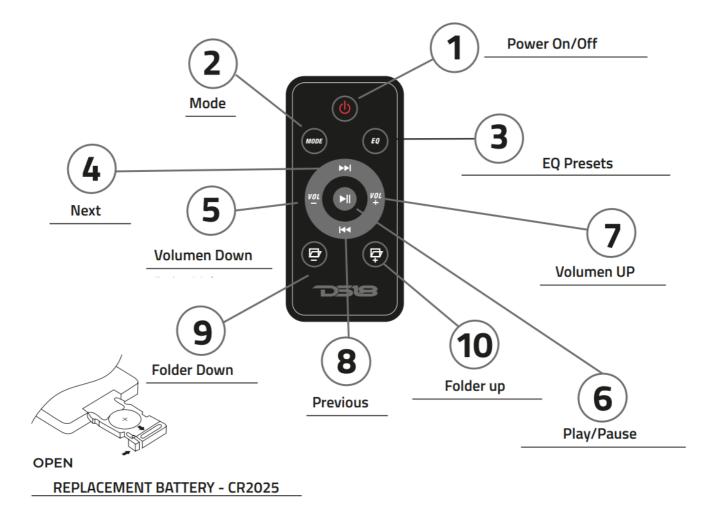

INSTALLATION

READ BEFORE INSTALLATION

- 1. Be sure to carefully read and understand the instructions before attempting to install these soundbar.
- 2. For safety, disconnect the negative battery terminal from the battery prior to beginning the installation.
- 3. For easier assembly, we suggest you have all your tools in hand- Drill, Allen set, Crimp, Soldering iron, Wire Strippers, Heat-shrink, etc.
- 4. Use high quality "Waterproof' connectors for a reliable installation and to minimize signal or power loss.
- 5. Think before you drill! Be careful not to cut or drill into gas tank, fuel lines, brake or hydraulic lines, vacuum lines or electrical wiring when working on any vehicle.
- 6. Never run wires near fuel lines or power (if possible). Running the wires inside the hull or car area provides the best protection.
- 7. Avoid running wires over or through sharp edges. Use rubber or plastic grommets to protect any wires routed through metal, especially on the Roll Cage.
- 8. Make sure that the mounting clamp is tight before leaving the Vehicle.

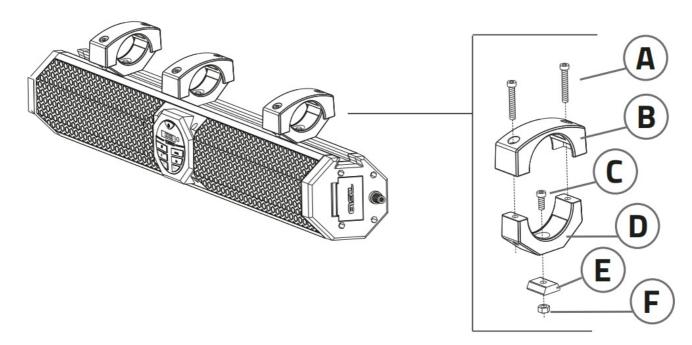

INSTALLATION EQUIPMENT

- 5mm Allen Key
- Wrench Set

BEGINNING MOUNTING

- **Step 1**: Remove the soundbar from the packaging and ALL hardware.
- **Step 2:** Find a GOOD location that allows for easy wiring of the Soundbar (Power Wire)-PLUS does NOT impair your movement around the location.
- **Step 3**: Using 5mm Allen Key spin out the screw that holds the top clamp (if was mounted)
- **Step 4:** Use one of the supplied nuts (F) and insert this on the clamp base (E), then slide the clamp base into the soundbar holder channel to the desire location.
- **Step 5:** Take the base clamp (D) and align it to the base clamp (E) hole and secure it with the short screw (C) using a 5mm Allen key.
- Step 6: Wrap the rubber pad around the pipe and lock the top clamp (B).
- **Step 7:** Align the Clamp (B) with the base clamp (D) and use the supplied screws (A) to tight down the clamps using a 5mm Allen Key.
- Step 8: Do the same procedure on each clamp supplied, you may need an extra help from somebody to hold up


the Soundbar during the Clamp installation.

Step 9: Onces you tight very well all screws you can run the Power wire to the battery location, use zip ties to secure the cable away from elements that can damage it.

This is it!! enjoy your new SB37BT Soundbar.




For water resistance purposes remove any USB or Auxiliary Cables and be sure to put the rubber cap sor covers in place before using this soundbar in wet locations or when washing your vehicle.

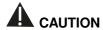


Using other mounting method smay void this warranty

WIRING INSTALLATION

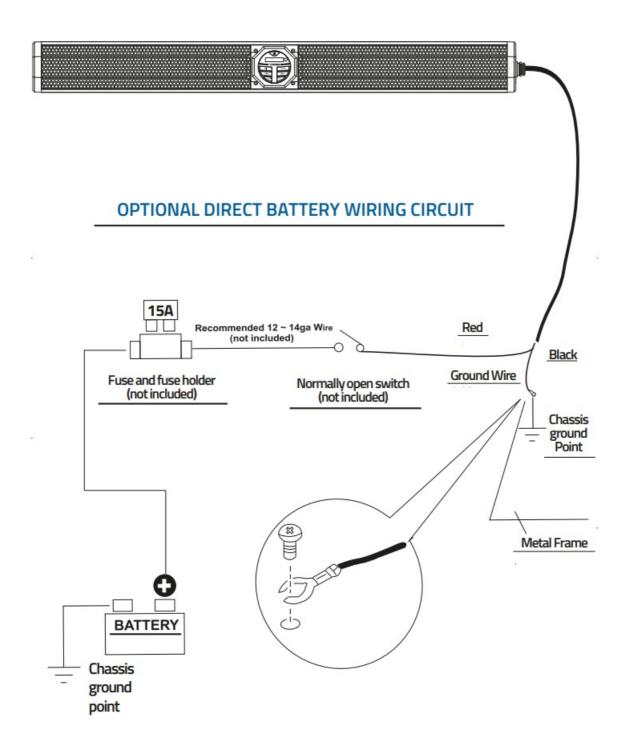

DIMENSIONS

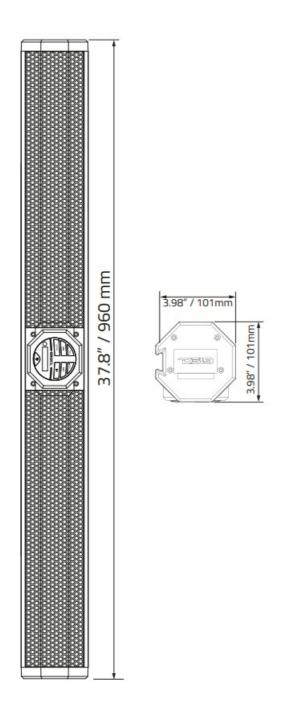

TROUBLESHOOTING

SPECIFICATIONS

Nominal Size	37.8" / 960mm
	1200 Watts
RMS Power @ 4 ohm	200 Watts
Max Power @ 4 ohm	400 Watts
Frequency Response	45Hz-20KHz
Storage Temperature	5°F ~ 176°F (-15°C ~ 80°C)
Operation Temperature	32°F ~ 140°F (0°C ~ 60°C)
Operation Voltage	12 Volts (10~16 Volts Range)
BODY/FEATURES	

Marine Grade TypeIP.	Χ5
Body Material Color Finish	
Aluminum / Oxidized Black Hemp Sand	

• •	Steel Mesh /Malla de Acero
	1 pcs / 1 Unidad
•	
	Yes
RCA Line Out (Pre-Amp)	No
Aux Line Input	Yes, (720mV) / Si, (720mV)
EQ DSP	5 Preset EQ (for BT and USB Mode)
Remote Out	No
USB Player	Yes (WMA, MP3 files) / Si (Archivos MP3, WMA)
	Yes (1Amp)
	er, Mode, Play/Pause,Fwd, Bwd,Vol+/Vol-)
	Yes (IR Card Type) / Si (IR Tipo Tarjeta)
	Yes (Blue Backlit) / Si (Azul Retroiluminado)
WOOFER SPECIFICATIONS	
Nominal Diameter	3" / 76.2mm (8 Pcs)
Voice Coil Former Material	
Cone Material	
	Spk1: Rubber / Spk2: Cloth
	Steel /
•	Ferrite
Motor Diameter	2.36" / 60mm
TWEETER SPECIFICATIONS	
Nominal Diameter	
Voice Coil Diameter	,
Voice Coil Diameter Type	
Voice Coil Diameter Type Diaphragm Material	
Voice Coil Diameter Type Diaphragm Material Magnet Material	
Voice Coil Diameter Type Diaphragm Material Magnet Material	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance Signal to Noise Ratio	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance Signal to Noise Ratio	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance Signal to Noise Ratio T.H.D. 1000Hz	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance Signal to Noise Ratio T.H.D. 1000Hz	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance Signal to Noise Ratio T.H.D. 1000Hz Channel Separation	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance Signal to Noise Ratio T.H.D. 1000Hz Channel Separation	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance Signal to Noise Ratio T.H.D. 1000Hz Channel Separation Audio Source Power Input Wire Size	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance Signal to Noise Ratio T.H.D. 1000Hz Channel Separation Audio Source Power Input Wire Size Recommend Fuse Size	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance Signal to Noise Ratio T.H.D	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance Signal to Noise Ratio T.H.D. 1000Hz Channel Separation Audio Source Power Input Wire Size Recommend Fuse Size MAX Current Draw Thermal Protection	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels. Minimum Impedance Signal to Noise Ratio T.H.D. 1000Hz Channel Separation. Audio Source Power Input Wire Size Recommend Fuse Size MAX Current Draw Thermal Protection Over-Load Protection	
Voice Coil Diameter Type Diaphragm Material Magnet Material Crossover 6dB/oct AMPLIFIER SPECIFICATIONS / ESP Amplifier Class Amplifier Type Number of Channels Minimum Impedance Signal to Noise Ratio T.H.D. 1000Hz Channel Separation Audio Source Power Input Wire Size Recommend Fuse Size MAX Current Draw Thermal Protection	

BT SPECIFICATIONS

	V5
Audio Protocols	A2DP
Range>33ft	(10m)* / Class 2

MEASUREMENTS

Overall Width	37.8" / 960 mm
Overall Height	3.98" / 101 mm
Overall Depth	3.98" / 101 mm





Documents / Resources



<u>DS18 SB37BT Amplified Sound-Bar with BT and USB Player</u> [pdf] Owner's Manual SB37BT Amplified Sound-Bar with BT and USB Player, SB37BT, Amplified Sound-Bar with BT and USB Player, Amplified Sound-Bar, Sound-Bar

References

• Official DS18 Pro Audio Store - Speakers, Subwoofers, Amps & More!

Manuals+,