

dsafe 210406 Export Dial Lock Instructions

Home » dsafe » dsafe 210406 Export Dial Lock Instructions



Contents

- 1 dsafe 210406 Export Dial
- 2 How to unlock
- 3 How to lock
- 4 Documents / Resources
- **5 Related Posts**



dsafe 210406 Export Dial Lock



How to unlock




The combination of your safe is set as follows:

NUMBER	ROTATION	TURNS
	Right	4
	Left	3
	Right	2
	Left	1

It is necessary to accurately dial the four numbers shown.

- A. In the correct sequence
- B. In the correct rotation, and
- C. For the correct number of turns

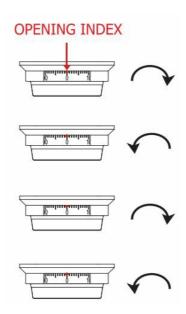

- **Step 1.** The first number must pass the opening index mark over 3 times in a clockwise (right) direction and stop on the fourth full turn.
- Step 2. The second number must pass the opening index mark twice in a counter-clockwise (left direction and stop on the third full turn.
- Step 3. The third number must pass the opening index mark only once in a clockwise (right) direction and stop on the second full turn.
- Step 4. The fourth number must not pass the opening index mark turning counter-clockwise (left and it must stop the first time it appears.

• Step 5. Now turn the key in the cylinder lock to the right and open the door.

How to lock

- Step 1. Close the door
- Step 2. Turn the key to the left and remove it.
- Step 3. Spin the combination lock over 3 times in any direction.
 - Please do not lose the combination only you know the code.
 - To improve products constantly, the manufacturer reserves the right to alter the specifications without prior notice. Printed in Korea, April. 8, 2021 REV. 6















Korea

Sweden

U.S.A

Japan

n Russia

ISO 9001

CE

Documents / Resources



dsafe 210406 Export Dial Lock [pdf] Instructions 210406 Export Dial Lock, 210406, Export Dial Lock, Dial Lock

Manuals+,