



# DSR3231T Remote Control Instructions

[Home](#) » [DSR](#) » DSR3231T Remote Control Instructions 

## Contents

- [1 DSR3231T Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 keys Functions](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



## DSR3231T Remote Control



## Product Information

The DSR3231T is a remote control device designed for use with electronic devices such as televisions, set-top boxes, and media players. It is a replacement remote control that can be used as a substitute for the original remote control.

- **Specifications**

- **Model:** DSR3231T
- **Power Input:** Requires batteries (not included)
- **Compatibility:** Designed for use with various electronic devices
- **Color:** Black

## Product Usage Instructions

- **Power and Input Controls**

- To turn on or off the device, press the Power button. Use the numbered buttons (1-9) to enter channel numbers or other numerical inputs.
- The Guide button provides access to the electronic program guide (EPG) or other guides available.
- The 0 button can be used for additional functions or inputs. The Info button displays information about the current program or media. The Volume buttons control the audio level, and the Mute button toggles the sound on or off.

- The Prog +/- buttons allow you to navigate through different channels or programs.

#### • **AV and RDS Controls**

- For devices with AV or RDS functionality, use the AV/Input/RDS button to switch between different audio/video inputs or to access RDS features.

#### • **Menu and Navigation Controls**

- The Menu button opens the device's menu or home display. The Media button provides access to media playback options. The Up, Left, OK (Enter), Right, and Down buttons are used for navigation within menus and interfaces.
- The Back button allows you to go back to the previous screen or menu. The Exit button closes menus or cancels actions. The AD (Audio/Lang I/II) button controls audio settings and language options.

#### • **Color and Function Controls**

- The remote control features color-coded buttons for specific functions.
- The Red button may be used for various purposes, such as accessing streaming services like Netflix or performing a search.
- The Green button can be used for accessing applications or repeating actions. The Yellow button provides access to YouTube or can be used for repeating actions. The Blue button is used for Prime Video or random actions.
- The Picture/Format button adjusts the picture settings. The CH- and Page- buttons navigate through channels or pages.

#### • **Subtitle and Text Controls**

- To control subtitles or text options, use the Subtitle/EQ Text/Goto button.
- The TV/Radio button switches between TV and radio modes. The I>I button allows you to switch between different TV or radio channels.
- The Preset+ button is used for presetting favorite channels. The Rec/Rec Mode button starts recording or sets the recording mode. The Stop/Hold button stops playback or holds the current frame.
- The Play/Slow button starts playback or enables slow motion. The Pause/Step/Freeze button pauses playback or steps through frames.

#### • **FAQ (Frequently Asked Questions)**

- **Q:** How do I replace the batteries in the remote control?
- **A:** The DSR3231T remote control requires batteries for operation. To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and remove the old batteries. Insert new batteries according to the polarity markings (+/-) and close the compartment securely.
- **Q:** Can I use this remote control with any device?
- **A:** The DSR3231T remote control is designed for compatibility with various electronic devices. However, it is important to check the device's specifications and compatibility before using the remote control.
- **Q:** Where can I find a replacement for the DSR3231T remote control?
- **A:** If you need a replacement for the DSR3231T remote control, you can visit the following website for more information and purchasing options:

<https://tutti-i-telecomandi.it/it/1058674-84977-telecomando-di-sostituzione-per-DSR3231T.html>.

## **keys Functions**




Originale		Sostituto	
	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / +/-
	0		0
	Infos		Info / Angle
	Vol +		Vol+
	Mute		Mute / Dimmer
	Prog +		CH+ / Page+

Originale		Sostituto	
	Vol -		Vol-
	Format		Picture / Format
	Prog -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Media		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	AD		Audio / Lang I/II

Originale	Sostituto	Originale	Sostituto
 Subtitles	 Subtitle / EQ		
 Text	 Text / Goto		
 Radio	 TV/Radio /		
 I<<	 I<< / Preset-		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 >>I	 >>I / Preset+		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		

<https://tutti-i-telecomandi.it/it/1058674-84977-telecomando-di-sostituzione-per-DSR3231T.html>.

Documents / Resources

	<a href="#">DSR DSR3231T Remote Control</a> [pdf] Instructions DSR3231T Remote Control, DSR3231T, Remote Control, Control
---	--

References

- [M Telecomando sostituto di DSR3231T](#)
- [User Manual](#)