



DUAL-LITE XD18BT AM/FM Receiver with Bluetooth and Fixed Face Owner's Manual

[Home](#) » [DUAL LITE](#) » DUAL-LITE XD18BT AM/FM Receiver with Bluetooth and Fixed Face Owner's Manual 

DUAL-LITE XD18BT AM/FM Receiver with Bluetooth and Fixed Face Owner's Manual



Contents

- 1 Preparation
 - 1.1 Before You Start
 - 1.2 Getting Started
- 2 Wiring Diagram
- 3 Control Locations
- 4 General Operation
- 5 AM/FM Tuner Operation
- 6 USB Operation
- 7 Bluetooth Operation
- 8 Dual iPlug P2 Smart App Remote Control
- 9 Voice Activation
- 10 Specifications
- 11 Troubleshooting
- 12 Limited One Year Warranty
- 13 FCC Compliance
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

Preparation

Please read entire manual before installation.


Before You Start

- Disconnect negative battery terminal. Consult a qualified technician for instructions.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight, or where it would be subject to dust, dirt or excessive vibration


Getting Started

- Insert the supplied keys into the slots as shown, and slide the unit out of the mounting sleeve.
- Install mounting sleeve into opening, bending tabs to secure.
- Connect wiring harness and antenna. Consult a qualified technician if you are unsure.
- Certain vehicles may require an installation kit and/or wiring harness adapter (sold separately).
- Test for correct operation and slide into mounting sleeve to secure.
- Snap trim ring into place.

TYPICAL FRONT-LOAD DIN MOUNTING METHOD

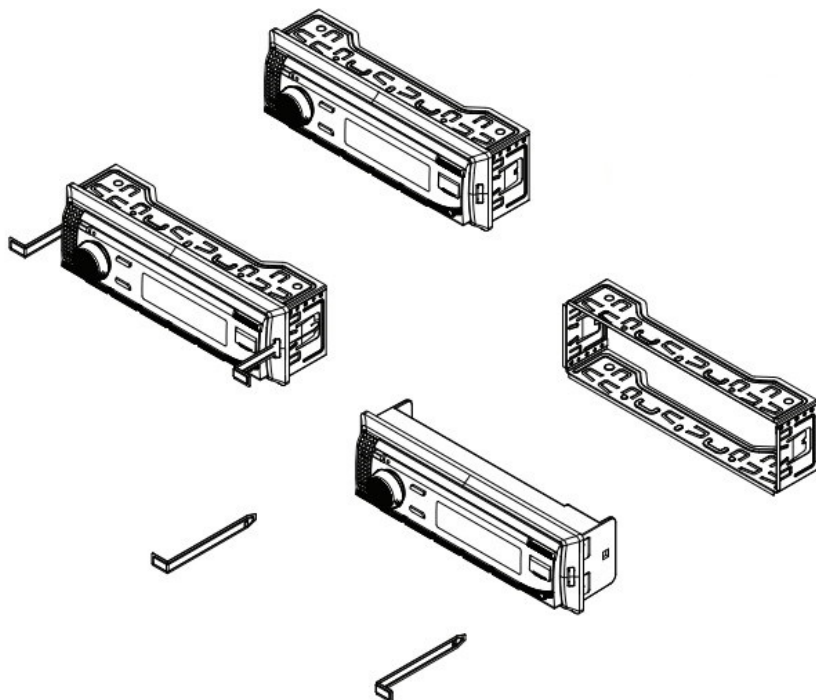

Wiring Diagram

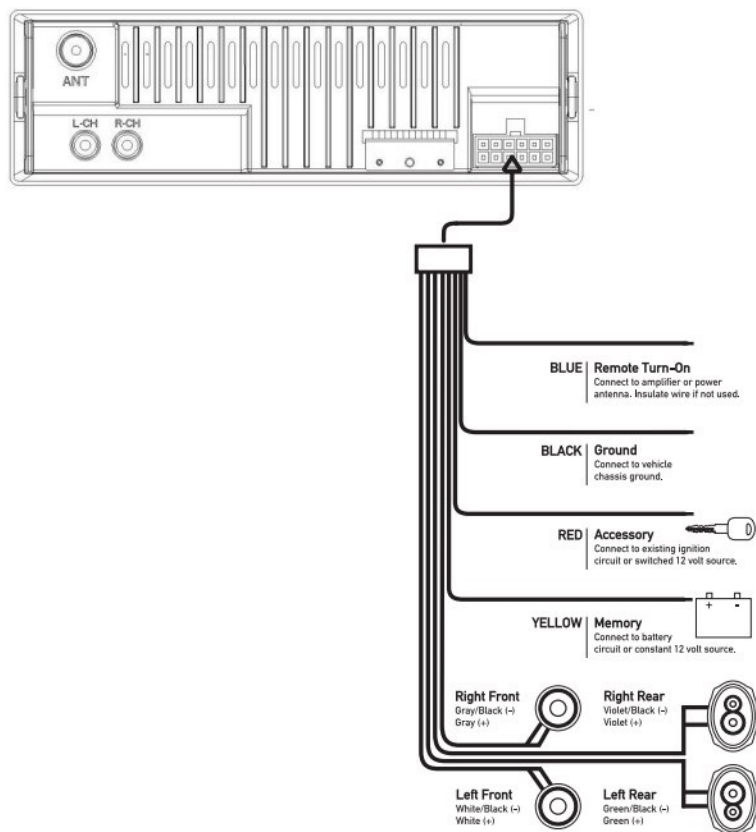

FUSE

When replacing the fuse, make sure new fuse is the correct type and amperage. Using an incorrect fuse could damage the radio. The unit uses one 10 amp AGC fuse located beside the Heat Sink





Control Locations



1. Power
2. Microphone
3. Volume / Audio
4. Tune / Track Up
5. Tune / Track Down
6. Voice Assist
7. USB Port
8. Auxiliary Input
9. Reset
10. Preset 6 / Folder Up
11. Preset 5 / Folder Down

12. Preset 4 / Random
13. Preset 3 / Repeat
14. Preset 2 / Intro
15. Preset 1 / Play/Pause
16. Dimmer
17. Source
18. Band/Display
19. Bluetooth Talk
20. Mute

General Operation

Power On/Off	Press  the button to turn the unit on. Press  again to turn the unit off.
Changing Modes	Press SOURCE to select between Radio, USB, Auxiliary Input and Bluetooth. Sources of operation are shown in the display.
Volume	Adjust volume using the volume knob .
Mute	Press  to silence the audio. Press  again to resume listening at the previously selected volume.
Display	Press DISP to toggle between various displayed information.
Dimmer	Press DIM to select the dimmer level: DIM HI/DIM MEDIUM/ DIM LOW.
Auxiliary Inputs	Insert a 3.5mm cable in the unit's front AUX port
Setting the Clock	With the unit on, press BAND/DISP to display clock time. Press and hold BAND/DISP until the hours begins to flash, then release.
	Rotate the volume knob left or right to adjust the hours , then press BAND/DISP. When the minutes begins to flash, rotate the volume knob left or right to adjust the minutes.
	Press BAND/DISP momentarily to save the selected time.
Reset	Press the RESET button to reset the unit back to the factory settings if abnormal operation occurs. The reset button is located on the front panel
Audio / Menu	Press the volume knob momentarily to select between audio functions.
	Press and hold the volume knob for more than two seconds to select between the menu functions.
	Rotate the volume knob left/right to adjust or activate the desired function/audio.

AM/FM Tuner Operation

Seek Tuning	Press and hold TUNE ◀◀ or TUNE ▶▶ II for two seconds to auto seek to the previous or next strong station.
Manual Tuning	Press TUNE ◀◀ or TUNE ▶▶ II momentarily to change radio frequency up or down one step at a time. Press and hold TUNE ◀◀ or TUNE ▶▶ for three seconds to advance quickly, then release it to stop on desired station.
Band	Press BAND to select between FM1, FM2, FM3, AM1 and AM2 bands. Up to six presets can be programmed for each band, enabling up to 18 FM stations and 12 AM stations to be stored in memory.
Storing Presets	To store a station, select the desired band and station. Press and hold the desired preset button (1-6) for more than two seconds. When stored, the preset number will appear in the display.
Recalling Presets	Preset stations can be recalled anytime by pressing the corresponding preset button.
Automatically Store	Press and hold the volume knob for more than two seconds, then press DISP to 18 FM stations and 12 AM stations automatically.
Preset Scan Stations	Touch PS to recall each preset station that has been stored in memory for each band. (Available with the Dual Smart Remote App only.)

USB Operation

Playing MP3 Files	To play MP3 files, insert a USB device containing MP3 files.
Track Select	Press TUNE ►► to skip to the beginning of the next track. Press TUN ◄◄ to skip to the beginning of the previous track.
Fast Forward and Reverse	Press and hold TUNE ►► or TUNE ◄◄ to fast forward or reverse a track.
Pause	Press ►/ to temporarily stop USB playback. Press ►/ again to resume playback
Folder Access	Folders can be found by pressing Folder Up or Folder Down. About one second after the folder name is displayed, the first file under the selected folder will be displayed and playback will begin.
Repeat	<p>Press RPT to toggle between RPT ALL, RPT FLR and RPT ONE.</p> <ul style="list-style-type: none"> • RPT ALL – Plays all tracks on USB device. • RPT ONE – Continuously repeats selected track.
Random	Press RDM to play tracks in random order; press again to cancel the RDM function.
Intro	Press INT to play the first 10 seconds of each track; press again to cancel the INT function.

Bluetooth Operation

Preparation	Before using a Bluetooth device, it must be paired and connected. Ensure that Bluetooth is activated on your device before beginning the pairing process.
Pairing a New Device	The head unit broadcasts the pairing signal constantly when no devices are connected. Complete the pairing sequence from your Bluetooth device. Refer to the owner's manual for your device for more details.
	The device name is "Dual Media Player". The Bluetooth passcode is "1234".
	Note: If passcode "1234" does not pair your device to the receiver, use passcode "0000". Note: The head unit can be in any mode of operation when pairing is performed.
Streaming Audio Troubleshooting	The head unit supports A2DP wireless streaming audio from a Bluetooth mobile device directly to your head unit. The following functions can be used to control the music:
	The head unit supports A2DP wireless streaming audio from a Bluetooth mobile device directly to your head unit. The following functions can be used to control the music:

Dual iPlug P2 Smart App Remote Control





Use the Dual iPlug P2 Smart App Remote Control on an Apple or Android smartphone to control the receiver via Bluetooth.

Change the mode, station, song, volume, and settings directly from your smartphone without being in the receiver's line-of-sight.

Download the Dual iPlug P2 Smart App Remote Control from Apple App Store or Google Play Store and install it on your smartphone or tablet (**QR code download link on the right**).



Voice Activation

Your receiver is designed with an easy access voice activation button to use Siri® or the Google Assistant™ via your car's Bluetooth. Interact with your smartphone assistant while you drive with only the push of a button!

Bluetooth should be paired between your smartphone and the receiver. Press the voice activation button, and the receiver will switch into Bluetooth mode, This will activate Siri® or Google Assistant™ on your smartphone. You will need to manually switch back to the previous or desired mode once this operation is terminated.

Specifications

FM Tuner	Tuning range: 87.5MHz-107.9MHz Usable sensitivity: 8.5dBf 50dB quieting sensitivity: 10dBf Stereo separation @ 1kHz: >30dB Frequency response: 30Hz-13kHz
AM Tuner	Tuning range: 530kHz-1710kHz Usable sensitivity:
General	Speaker output impedance: 4~8 ohms Line output voltage: 1.2 Volts RMS Dimensions: 7" x 2" x 2" (178 x 50 x 50 mm) Design and specifications subject to change without notice.

Troubleshooting

Problem	Cause	Action
Unit will not turn on (no power)	Yellow wire not connected or incorrect voltage Red wire not connected or incorrect voltage	Check connections for proper voltage (11~16VDC)
	Black wire not connected	Check connection to ground
	Fuse blown	Replace fuse
Unit has power (but no sound)	Speaker wires not connected	Check connections at speakers
	One or more speaker wires touching each other or touching chassis ground	Insulate all bare speaker wires from each other and chassis ground
Unit blows fuses	Yellow or red wire touching chassis ground	Check for pinched wire
	Speaker wires touching chassis ground	Check for pinched wire
	Incorrect fuse rating	Use fuse with correct rating
NO FILE appears on display	No playable MP3 files found on the device	Check the device for valid MP3 files
NO SUPPORT appears on display	An invalid ID3 tag version is present	Version 1.0 to 2.0 ID3 tags are supported.

Limited One Year Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Dual Electronics Corp. warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of the original purchase.

Dual Electronics Corp. agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

Who is covered? This warranty is extended to the original retail purchaser for products purchased from an

authorized Dual dealer and used in the U.S.A.

What is covered? This warranty covers all defects in material and workmanship in this product. The following are not covered: software, installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product. Specific license conditions and copyright notices for the software can be found via www.dualav.com.

What to do?

1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.
2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.
3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
4. For more information and for the location of the nearest authorized service center please contact us by one of the following methods:
 - Call us toll-free at 1-866-382-5476
 - E-mail us at cs@dualav.com

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchant ability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Dual Electronics Corp.

Toll Free: 1-866-382-5476



www.dualav.com

©2023 Dual Electronics Corp. All rights reserved. Other trademarks and trade names are those of their respective owners.

NSA011823-V01



Documents / Resources

 <p>XD18BT INSTALLATION/OWNER'S MANUAL <small>AM/FM Receiver with Bluetooth and Fixed Face</small></p> <p>MP3 USB AUX Bluetooth</p> 	<p>DUAL-LITE XD18BT AM/FM Receiver with Bluetooth and Fixed Face [pdf] Owner's Manual XD18BT AM FM Receiver with Bluetooth and Fixed Face, XD18BT, AM FM Receiver with Bluetooth and Fixed Face, Bluetooth and Fixed Face, and Fixed Face, Fixed Face, Face</p>
---	---

References

-  [Dual Electronics - Home Page](#)