

DUAL XRM47BT AM FM Receiver with Bluetooth Fixed Face



DUAL XRM47BT AM FM Receiver with Bluetooth Fixed Face Owner's Manual

[Home](#) » [Dual](#) » DUAL XRM47BT AM FM Receiver with Bluetooth Fixed Face Owner's Manual 

Contents

- 1 DUAL XRM47BT AM FM Receiver with Bluetooth Fixed Face
- 2 Product Information
- 3 Product Usage Instructions
- 4 Preparation
- 5 Before You Start
- 6 Mounting the Head Unit: ISO mounting
- 7 Wiring Diagram
- 8 Control Locations
- 9 General Operation
- 10 AM/FM Tuner Operation
- 11 USB Operation
- 12 Bluetooth Operation
- 13 Limited One Year Warranty
- 14 Specifications
- 15 Documents / Resources
 - 15.1 References
- 16 Related Posts



DUAL XRM47BT AM FM Receiver with Bluetooth Fixed Face



Product Information

Specifications

- **Product Name:** XRM47BT
- **Type:** AM/FM Receiver with Bluetooth
- **Face Type:** Fixed

Product Usage Instructions

Installation

Preparation

Please read the entire manual before installation. Install the product in a location that is not exposed to direct sunlight, dust, dirt, or excessive vibration.

Mounting the Head Unit: Typical DIN mounting

Step 1: Insert the mounting sleeve into the installation kit or dashboard.

Step 2: Bend multiple mounting tabs around the mounting sleeve until it is secure.

Step 3: Connect all wiring harnesses and slide the head unit into the mounting sleeve until it clicks into place.

Mounting the Head Unit: ISO mounting

Using the existing brackets or the brackets supplied with the installation kit, mount the brackets to the sides of the head unit with the screws supplied with the head unit.

Wiring Diagram

When replacing the fuse, make sure to use the correct type and amperage. The unit uses one 10 amp ATM fuse located beside the Heat Sink.

FAQ

- **Q: How do I reset the unit?**

- **A:** Press the RESET button located on the front panel to reset the unit back to factory settings if abnormal operation occurs.

- **Q: How do I set the clock?**

- **A:** With the unit on, press DISP to display the clock time. Press and hold DISP until the hours begin to flash, then release. Use the TUNE buttons to adjust the hours and minutes. Press DISP momentarily to save the selected time.

- **Q: How do I change the mode of operation?**

- **A:** Press the MODE button to select between Radio, USB, Auxiliary Input, and Bluetooth. The selected mode will be displayed.

Preparation

Please read the entire manual before installation.

 
Before You Start

- Disconnect the negative battery terminal. Consult a qualified technician for instructions.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight, or where it would be subject to dust, dirt or excessive vibration.


Mounting the Head Unit: Typical DIN mounting

Single DIN


Step 1:

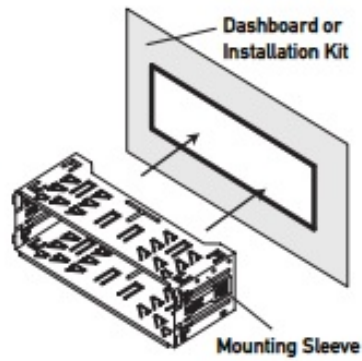

 Step 2:

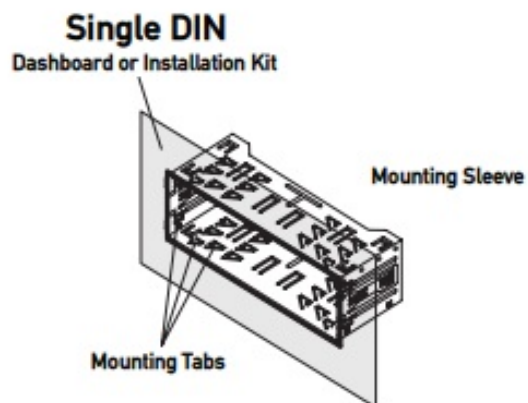

 
Step 3:

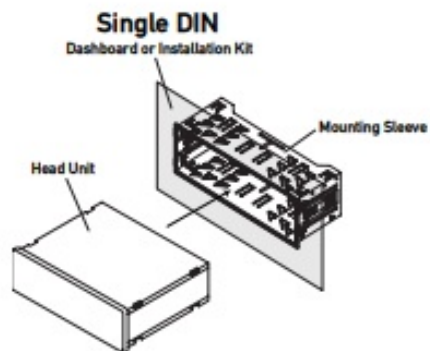

- **Step 1:** Insert the mounting sleeve into the installation kit or dashboard.
- **Step 2:** Bend multiple mounting tabs around the mounting sleeve until the mounting sleeve is secure.
- **Step 3:** Connect all wiring harnesses and slide the head unit into the mounting sleeve until it clicks into place.


Mounting the Head Unit: ISO mounting

 Single DIN

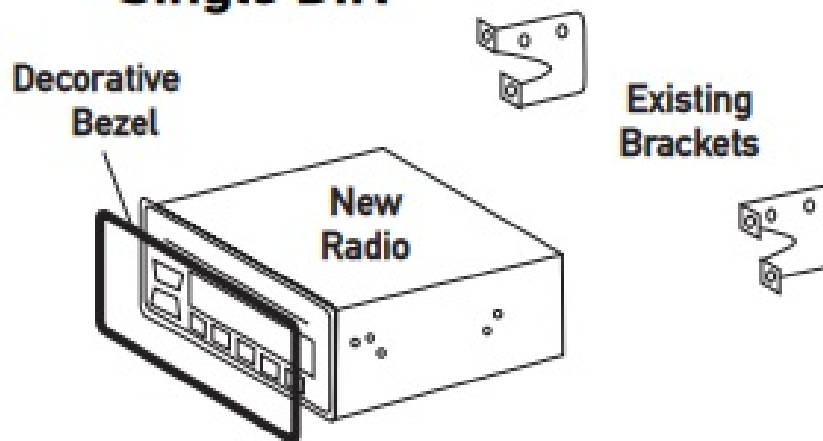

Using the existing brackets or the brackets supplied with the installation kit, mount the brackets to the sides of the head unit with the screws supplied with the head unit.

 
Wiring Diagram

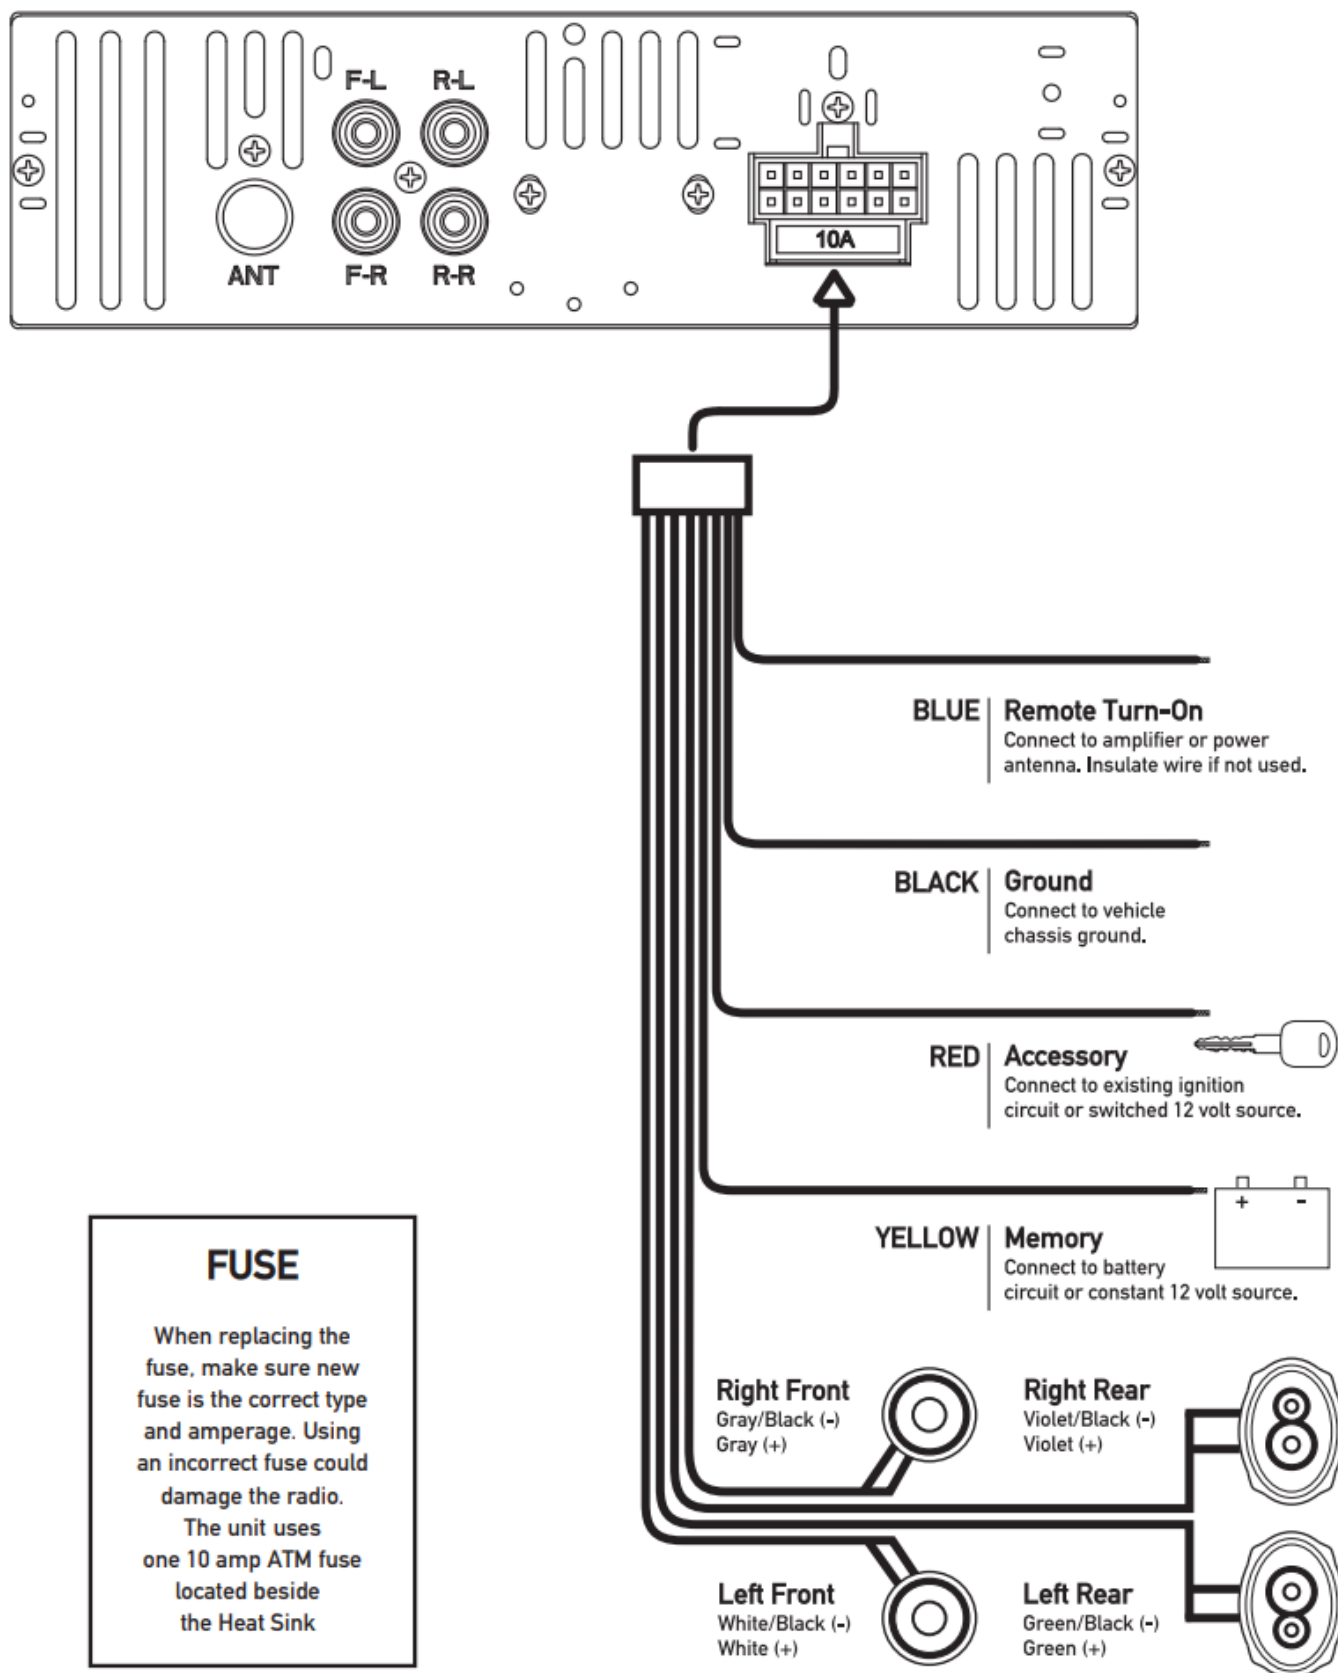

Control Locations





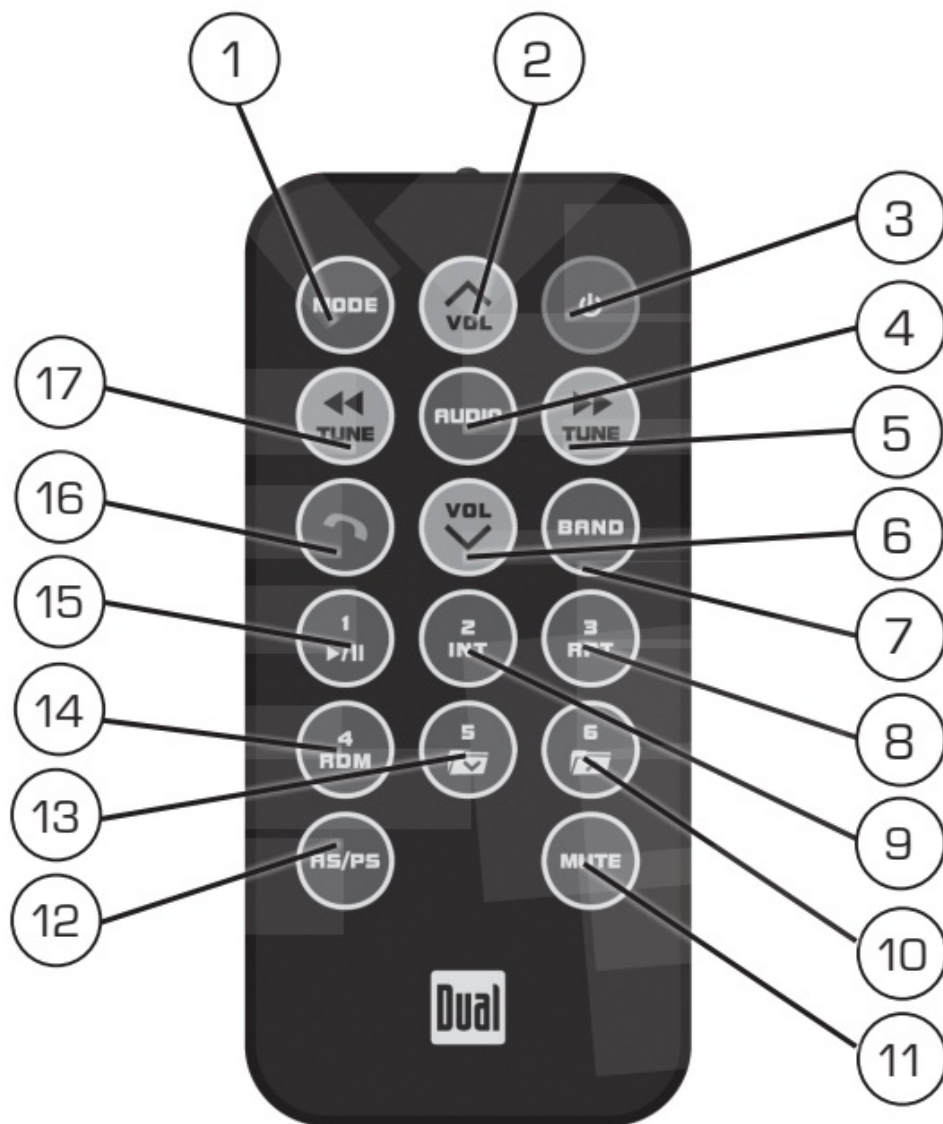 



1. Power
2. Band
3. Mute
4. Volume Knob
5. AS/PS
6. USB Port
7. Auxiliary Input
8. Preset 6 / Folder Up
9. Preset 5 / Folder Down
10. Preset 4 / Random
11. Preset 3 / Repeat
12. Preset 2 / Intro
13. Preset 1 / Play/Pause
14. Display
15. Mode
16. Reset
17. Tune Up
18. Tune Down











1. Mode
2. Volume Up
3. Power
4. Audio
5. Tune Up
6. Volume Down
7. Band
8. Preset 3 / Repeat
9. Preset 2 / Intro
10. Preset 6 / Folder Up
11. Mute
12. AS/PS
13. Preset 5 / Folder Down
14. Preset 4 / Random
15. Preset 1 / Play / Pause
16. Bluetooth Talk
17. Tune Down

General Operation







- **Power On/Off:** Press the  button to turn the unit on. Press  again to turn the unit off.
- **Changing Modes:** Press MODE to select between Radio, USB, Auxiliary Input and Bluetooth. Modes of operation are shown in the display.
- **Volume:** Adjust volume using the volume knob (00-43).
- **Mute:** Press to silence the audio. Press again to resume listening at the previously selected volume.
- **Auxiliary Inputs:** Insert a 3.5mm cable in the unit's front AUX port.
- **Reset:** Press the RESET button to reset the unit back to the factory settings if abnormal operation occurs. The reset button is located on the front panel
- **Setting the Clock:** With the unit on, press DISP to display clock time. Press and hold DISP until the hours begin to flash, then release.
 - Press the TUNE  and TUNE  to adjust the hours, then press the DISP, the minutes begin to flash, press the TUNE  and TUNE  buttons to adjust the minutes
 - Press DISP momentarily to save the selected time.
- **Display:** Press DISP to toggle display between various displayed information.
- **Audio / Menu:** Press the volume knob momentarily to select between audio functions.
 - Press and hold the volume knob for more than two seconds to select between the menu functions.
 - Rotate the volume knob left/right to adjust or activate the desired function/audio.

AM/FM Tuner Operation




- **Seek Tuning:** Press TUNE  or TUNE  to seek to the previous or next strong station
- **manual Tuning:**
 - Press and hold TUNE  or TUNE  to enter manual tuning mode, then press TUNE  or TUNE  momentarily to change the radio frequency up or down one step at a time. Press and hold TUNE  or TUNE  to advance quickly.
- **Band:** Press BAND to select between FM1, FM2, FM3, AM1 and AM2 bands. Up to six presets can be programmed for each band, enabling up to 18 FM stations and 12 AM stations to be stored in memory.
- **Storing Presets:** Up to 18 FM and 12 AM stations can be stored. To store a station, select the desired band and station. Press and hold the desired preset button (1-6) for more than two seconds. When stored, the preset number will appear in the display. Press BAND to select between FM1, FM2, FM3, AM1 and AM2 bands. Up to six presets can be programmed for each band, enabling up to 18 FM stations and 12 AM stations to be stored in memory.
- **Recalling Presets:** Preset stations can be recalled at any time by pressing the corresponding preset button.
- **Automatically Store:** Press and hold AS/PS for more than 2 seconds to store 18 FM stations and 12 AM stations automatically.
- **Preset Scan Stations:** Press AS/PS to recall each preset station that is stored in the memories in each band.

USB Operation

- **Playing MP3 Files:** To play MP3 files, insert a USB device containing MP3 files.

- **Track Select:** Press TUNE  to skip to the beginning of the next track. Press TUNE  to skip to the beginning of the previous track.
- **Fast Forward and Reverse:** Press and hold TUNE  or TUNE  to fast forward or reverse a track.
- **Pause:** Press  to temporarily stops the USB playback.
- Press  again to resume playback.
- **Folder Access:** Folders can be found by pressing Folder Up or Folder Down. About one second after the folder name is displayed, the first file under the selected folder will be displayed and playback will begin.
- **Repeat:** Press RPT to toggle between RPT ALL, RPT FLR, and RPT ONE.
 - RPT ALL – Plays all tracks on a USB device.
 - RPT ONE – Continuously repeats selected track.
 - RPT FLR – Continuously repeats all files in current folder.
- **Random:** Press RDM to play tracks in random order; press again to cancel the RDM function.
- **Intro:** Press INT to play the first 10 seconds of each track; press again to cancel the INT function.

Bluetooth Operation

- **Preparation:** Before using a Bluetooth device, it must be paired and connected. Ensure that Bluetooth is activated on your device before beginning the pairing process.
- **Pairing a New Device:** The head unit broadcasts the pairing signal constantly when no devices are connected. Complete the pairing sequence from your Bluetooth device. Refer to the owner's manual for your device for more details.
- The device name is "Dual Media Player".
The Bluetooth passcode is "1234".
- **Note:** The head unit can be in any mode of operation when pairing is performed.
- **Streaming Audio Troubleshooting:** The head unit supports A2DP wireless streaming audio from a Bluetooth mobile device directly to your head unit. The following functions can be used to control the music:
 - Press  to skip to the next available audio track.
 - Press  to skip to the previous audio track.
 - Press  to toggle between play and pause during playback.

Troubleshooting

Problem	Cause	Action
Unit will not turn on (no power)	Yellow wire not connected or incorrect voltage Red wire not connected or incorrect voltage	Check connections for proper voltage (11~16VDC)
	Black wire not connected	Check connection to ground
	Fuse blown	Replace fuse
Unit has power (but no sound)	Speaker wires not connected	Check connections at speakers
	One or more speaker wires touching each other or touching chassis ground	Insulate all bare speaker wires from each other and chassis ground
Unit blows fuses	Yellow or red wire touching chassis ground	Check for pinched wire
	Speaker wires touching chassis ground	Check for pinched wire
	Incorrect fuse rating	Use fuse with correct rating
NO FILE appears on display	No playable MP3 files found on the device	Check the device for valid MP3 files
NO SUPPORT appears on display	An invalid ID3 tag version is present	Version 1.0 to 2.0 ID3 tags are supported.

Limited One Year Warranty

- This warranty gives you specific legal rights. You may also have other rights which vary from state to state.
- Dual Electronics Corp. warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of the original purchase.
- Dual Electronics Corp. agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.
- **Who is covered?** This warranty is extended to the original retail purchaser for products purchased from an authorized Dual dealer and used in the U.S.A.
- **What is covered?** This warranty covers all defects in material and workmanship in this product. The following are not covered: software, installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure

to follow instructions supplied with the product, or damage occurring during return shipment of the product. Specific license conditions and copyright notices for the software can be found via www.dualav.com.

What to do?

1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.
2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.
3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
4. For more information and for the location of the nearest authorized service center please contact us by one of the following methods:
 - Call us toll-free at 1-866-382-5476
 - E-mail us at cs@dualav.com

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specifications

FM Tuner

- **Tuning range:** 87.5MHz-107.9MHz
- **Usable sensitivity:** 8.5dBf
- **50dB quieting sensitivity:** 10dBf
- **Stereo separation @ 1kHz:** >30dB
- **Frequency response:** 30Hz-13kHz


AM Tuner

- **Tuning range:** 530kHz-1710kHz
- **Usable sensitivity:** <42dBu
- **Frequency response:** 30Hz-2.2kHz

General

- **speaker output impedance:** 4~8 ohms
- **Line output voltage:** 2
- **Volts RMS Dimensions:** 7" x 3.8" x 2" (178 x 97 x 50 mm)

Design and specifications are subject to change without notice.



CEA-2006 Power Standard Specifications
(reference: 14.4VDC +/- 0.2V, 20Hz~20kHz)

Power Output: 16 Watts RMS x 4 channels at 4 ohms and \leq 1% THD+N
Signal to Noise Ratio: 75dBA (reference: 1 watt into 4 ohms)

Dual Electronics Corp.

Toll Free: 1-866-382-5476


www.dualav.com

©2016 Dual Electronics Corp. All rights reserved.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Namsung is under license.

Other trademarks and trade names are those of their respective owners.

Documents / Resources

 <p>XRM47BT INSTALLATION/OWNER'S MANUAL 40W Stereo AM/FM/Bluetooth® Receiver</p> <p>MP3 USB AUX Bluetooth®</p> <p>Dual</p>	<p>DUAL XRM47BT AM FM Receiver with Bluetooth Fixed Face [pdf] Owner's Manual</p> <p>XRM47BT AM FM Receiver with Bluetooth Fixed Face, XRM47BT, AM FM Receiver with Bluetooth Fixed Face, Receiver with Bluetooth Fixed Face, Bluetooth Fixed Face, Fixed Face, Face</p>
--	--

References

-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.