




DUNE HD Max 8K Network Player User Guide

[Home](#) » [Dune HD](#) » DUNE HD Max 8K Network Player User Guide 

Dune

Contents

1

Interface

2

Package content

3

Installation

4

Remote

5

Learning remote control


6

Documents / Resources

6.1

References

Interface

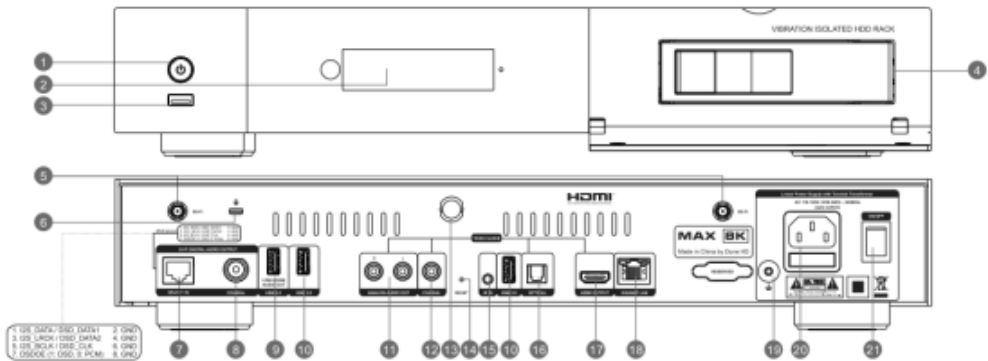

1. Power ON/OFF button
2. Display

3. USB 2.0 host
4. HDD rack (3.5" SATA)
5. 2 x Wi-Fi antenna connectors
6. Kensington security slot
7. Hi-Fi I2S-E (RJ45) output
8. Hi-Fi coaxial S/PDIF output
9. USB 3.0 (low noise, recommended for audio out to external USB DAC)
10. 2 x USB 3.0 host
11. Analog stereo audio output
12. Coaxial S/PDIF output
13. Bluetooth antenna
14. Restore button
15. IR input (3.5mm minijack, T-R-S: 5V-IR-GND, L=14.5mm)
16. Optical S/PDIF output
17. HDMI 2.1a output
18. Ethernet 10/100/1000
19. Ground connector
20. 110-120V/220-240V AC input
21. Power ON/OFF switch

Package content



1. Dune HD player
2. 4 x Power cord (EU, US, UK, AU plugs)
3. HDMI cable
4. 2 x Wi-Fi antennas
5. IR extender (for IR input)
6. Remote control
7. 2 x AAA batteries
8. Quick start guide
9. 2 x 19" rack nounting brackets
10. Set of screws for 19" rack mounting brackets

Installation



1. Connect your Dune HD Player to TV by HDMI-cable

2. Use Ethernet-cable (not included) to connect Dune HD player to the Internet (or use Wi-Fi)
3. Turn on the Dune HD player and TV. Choose the proper input on the TV.

Remote

Remote must be paired to the player via Bluetooth before use:

1. Direct remote to the player and press any button on the remote. The remote and the player will pair automatically.
 2. If the remote was already paired before, or in case of any problems: press and hold the “ENTER” and “V+” buttons on the remote for 3 seconds to put the remote into pairing mode. Use “Setup” / “System”/“Remotes & accessories” menu to unpair and pair the remote again.
- POWER-turn the player on/off.
 - TV section (TV DOWN, TV UP, OK, I, SET, TV INPUT, TV POWER) – learnable buttons to control TV or other equipment (see “Using Remote to Control TV” section).
 - SETUP, MODE control the playback and some other player functions.
 - MOUSE-toggle mouse mode (air mouse).
 - FAV1 “Recent” menu or user-defined function.
 - FAV2 “Favorites” menu or user-defined function.
 - MIC microphone/search.
 - Arrows (◀▶▶▶), ENTER, RETURN, TOP MENU, POP UP MENU, INFO main buttons for controlling the player (navigate across the items on the screen, open/use the currently selected item, go back to the previous screen, go to the main menu, show/hide popup menu with actions for the currently selected item or the current player state, show/hide information about the currently selected item or the current player state, control some other player functions).
 - MUTE-turn the sound on/off.
 - ▶|| PLAY/PAUSE, STOP-control the playback and some other player functions.
 - V+/V- (volume up/volume down) – adjust the volume.
 - P+/P- (page up/page down) – scroll up and down in various lists, switch to the next/previous TV channel, control some other player functions.
 - AUDIO (AUD), SUBTITLE (SUB) – toggle audio tracks and subtitle tracks.
 - 0-9-enter numbers and text; control some other player functions.
 - CLEAR-delete the last entered character, delete the currently selected item, control some other player functions.
 - SELECT-switch text input mode, add the item to the selection list, control some other player functions.
 - A (Red), B (Green), C (Yellow), D (Blue) – control various player functions.

NOTE: Button support and functions depend on particular applications. Not all apps support all buttons.



Learning remote control

You can program 6 learnable buttons (located in “TV”: section: “TV DOWN”, “TV UP”, “OK”, “T”, “SET”, “TV INPUT”, “TV POWER”) to control your TV or other equipment:

1. Press and hold the “SET” button on the remote for 3 seconds.
2. Press one of 6 learnable buttons on the remote.
3. Place your remote and the other remote on a table so that the IR emitters of both remotes are directed towards each other and are at a distance of about 1 cm.
4. Press and hold a button on the other remote until the LED indicator on your remote stops blinking. This means that the button learning is complete.
5. Learn other buttons the same way if needed (repeat steps 2-4).

Key combinations (hold for 3 sec): Pair: ENTER + V+; Unpair, IR mode: ENTER + V-; BackLight


off/33%/66%/100%: SET + 0/1/2/3

Reset Remote to Factory Defaults: Press and hold “ENTER” and “TOP MENU” buttons on the remote for 3 seconds.



HDMI, HDMI High Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Documents / Resources

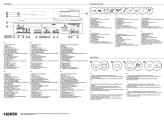

[DUNE HD Max 8K Network Player](#) [pdf] User Guide
Max 8K Network Player, 8K Network Player, Network Player, Player

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.