



DWARF II Update Firmware Smart Digital Telescope User Guide

[Home](#) » [DWARF](#) » DWARF II Update Firmware Smart Digital Telescope User Guide 

Contents

- [1 DWARF II Update Firmware Smart Digital Telescope](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 How to Update DWARF II Firmware](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

DWARF

DWARF II Update Firmware Smart Digital Telescope



Product Information

The DWARFII is a device that requires firmware updates to ensure optimal performance. The latest firmware version for the DWARFII is V2.0.06. You can check your current firmware version by navigating to DWARFLAB App – My Device – Firmware Version.

Specifications

- **Firmware Version:** V2.0.06

Product Usage Instructions

Updating Firmware

Situation 1: Firmware Version V1.3.22 and above

If your DWARFII firmware version is equal to or greater than V1.3.22, you can directly upgrade it to V2.0.06.

1. To update the firmware, please follow the OTA (Over The Air) DWARFII update tutorial for both iOS and Android devices. [Click here to view the tutorial.](#)

Situation 2: Firmware Version lower than V1.3.22

If your DWARFII firmware version is lower than V1.3.22, you need to perform a two-step upgrade.

1. Download the firmware file for version V1.3.22 manually.
2. Upload the downloaded firmware file to your DWARFII device to update it to V1.3.22.
3. Once the firmware is updated to V1.3.22, follow the OTA update tutorial for both iOS and Android devices to upgrade to V2.0.06. [Click here to view the tutorial.](#)

Contact Support

If you have any suggestions on how we can improve our tutorial or update process, please feel free to send them to support@dwarflab.com.

FAQ (Frequently Asked Questions)

- **Q: What is the latest firmware version for DWARFII?**

A: The latest firmware version for DWARFII is V2.0.06.

- **Q: How do I check my current firmware version?**

A: You can check your current firmware version by opening DWARFLAB App, navigating to My Device, and selecting Firmware Version.

- **Q: Can I directly upgrade from firmware version V1.3.22 to V2.0.06?**

A: Yes, if your firmware version is V1.3.22 or above, you can directly upgrade to V2.0.06 by following the OTA update tutorial.

- **Q: What should I do if my firmware version is lower than V1.3.22?**

A: If your firmware version is lower than V1.3.22, you need to first manually download and upload the firmware file for V1.3.22 before proceeding with the OTA update to V2.0.06.

How to Update DWARF II Firmware

Note: The latest firmware version for DWARF II is V2.0.06.

You can check your firmware version in DWARFLAB App-My Device-Firmware Version.

When updating the firmware, there are two situations

1. **When the DWARF II firmware version is equal to or greater than V1.3.22, you can directly upgrade it to V2.0.06.**

If your firmware version is V1.3.22 and above, please click here to view the OTA (Over The Air) DWARF II update tutorial for both iOS and Android.

2. **When the DWARF II firmware version is less than V1.3.22, first upgrade the firmware to V1.3.22, and then proceed to upgrade to V2.0.06.**

- If your firmware version is under V1.3.22, a download and upload manually of the firmware file is needed to update to V1.3.22 first.
 - For iOS, please click here to view the System Firmware update tutorial.
 - For Android, please click here to view the System Firmware update tutorial.
- After completing the update, your DWARF II version will be V1.3.22, then click here to continue with the OTA update to reach version V2.0.06.

If you have any suggestions on how we can improve our tutorial or update process, please feel free to send them to support@dwarflab.com.

Documents / Resources

How to Update DWARF II Firmware

Here The latest Firmware version for DWARF II is V2.0.6.

However, please pay attention to the following DWARF II steps for the Firmware Update.

When updating the Firmware, there are three situations:

- When the DWARF II Firmware version is equal to or greater than V2.0.3, and less than V2.0.6:
- When the DWARF II Firmware version is less than V2.0.3, and less than V2.0.6:
- When the DWARF II Firmware version is less than V2.0.3, and less than V2.0.6:

For the first two situations, the update process is as follows:

- Download the DWARF II Firmware Update File from the official website.
- Connect the DWARF II Telescope to the computer via the USB cable.
- Run the DWARF II Firmware Update Software.
- Follow the prompts to complete the update.

For the third situation, the update process is as follows:

- Download the DWARF II Firmware Update File from the official website.
- Connect the DWARF II Telescope to the computer via the USB cable.
- Run the DWARF II Firmware Update Software.
- Follow the prompts to complete the update.

If you have any questions, please contact our customer service team.

DWARF DWARF II Update Firmware Smart Digital Telescope [pdf] User Guide

DWARF II Update Firmware Smart Digital Telescope, DWARF II, Update Firmware Smart Digital Telescope, Firmware Smart Digital Telescope, Digital Telescope, Telescope

References

- [DWARF II OTA Firmware Update Tutorial](#)
- [Firmware Version Under 1.3.22 Update Tutorial - iOS](#)
- [Firmware Version Under 1.3.22 Update Tutorial - Android](#)
- [User Manual](#)