



Dwyer TID Series Temperature-Process Indicator Instruction Manual

[Home](#) » [Dwyer](#) » Dwyer TID Series Temperature-Process Indicator Instruction Manual 





**TID Series Temperature-Process Indicator
Instruction Manual**


Contents

- [1 Specifications – Installation and Operating Instructions](#)
- [2 Parameter Programming](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Specifications – Installation and Operating Instructions

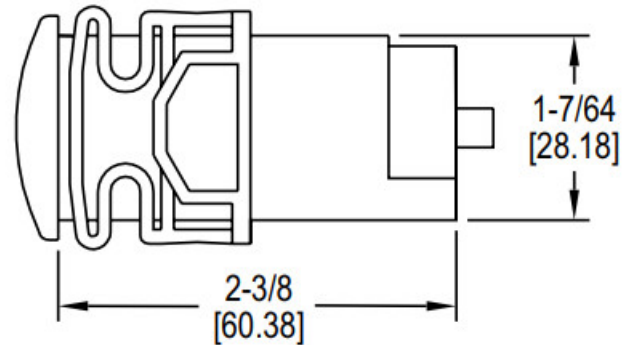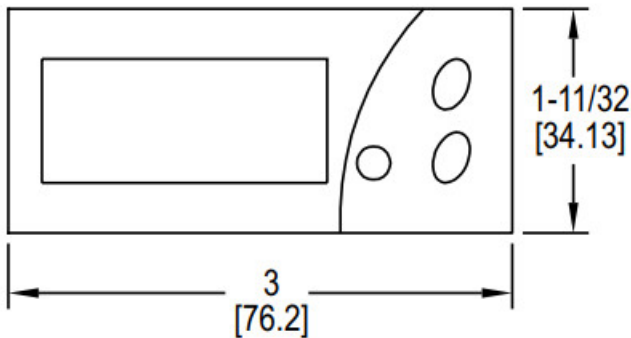

The affordable Series TID allows users to monitor temperature or a process value. Temperature ranges are available from -58 to 302°F using one of our PTC or NTC thermistors. Process values can be displayed from -999 to 999 counts using a 4-20 mA signal from one of our various transmitters. The process indicator has an adjustable span and zeroes on the 4-20 mA models.

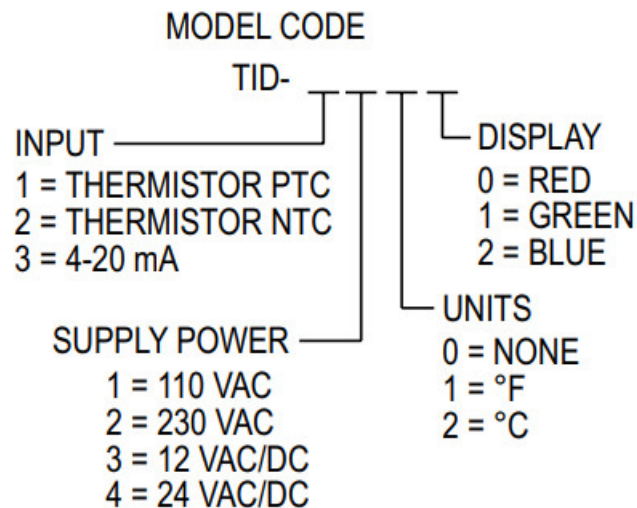

Installation

Note: The unit must be mounted away from vibration, impacts, water, and corrosive gases.

- Cut hole in panel 2.80 x 1.14 in (71 x 29 mm).
- Apply silicone (or rubber gasket) around the perimeter of the hole to prevent leakage.
- Insert the unit into the hole of the panel.
- Slide removable fitting clips onto the unit from the back until secure to the panel.
- Remove the back cover to the wire unit.

- A wiring diagram is displayed on the top of the unit.

SPECIFICATIONS

Range: -58 to 302°F (thermistor); -999 to 999 counts (4-20 mA).

Input: PTC/NTC thermistor or 4-20 mA.

Power Requirements: 115 VAC, 230 VAC, 24 VAC/DC.

Accuracy: > 1%.

Display: 3-digits; red, green or blue display.


Resolution: 1° or 0.1 count.

Front Panel Rating: IP64 (NEMA 3R).


Output: 5/12 VDC (model dependent).

Weight: 2.3 oz (65 g).

Compliance: CE, cURus.

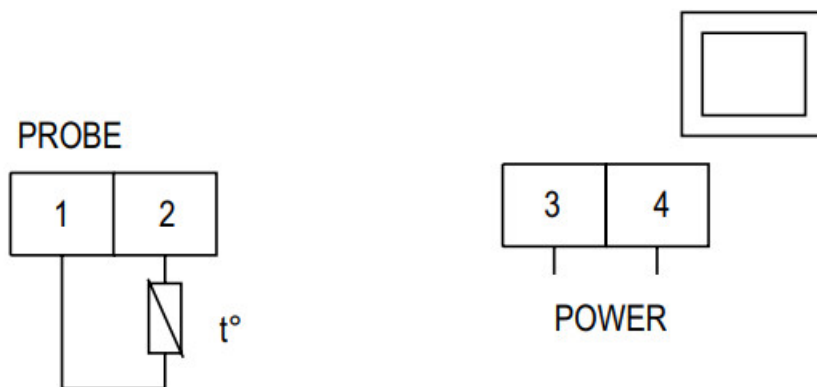

Thermistor connection diagram

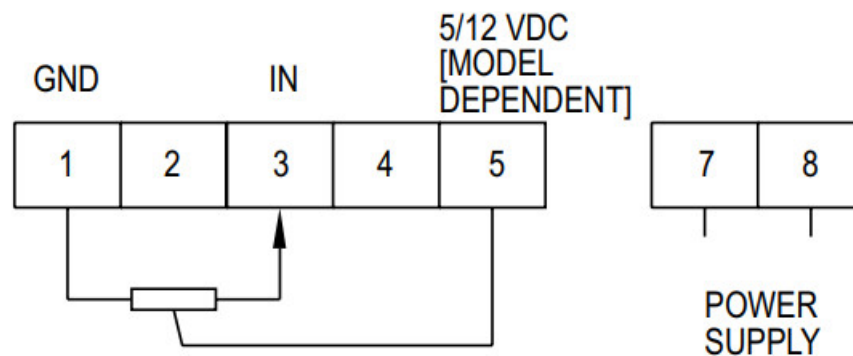

Current connection diagram

LIST OF PARAMETERS (CURRENT MODELS ONLY)			
	Description	Units	Range
Lc	Value for 4 mA input	Range	-999 to 999
He	Value for 20 mA input	Range	-999 to 999
P1	Decimal point	Selection	No/yes
H5	Access code	Numeric	0 to 99

Parameter Descriptions

Lc = Value for 4 mA input

If P1 = Yes the value is displayed with a decimal point

Hc = Value for 20 mA input

If P1 = Yes the value is displayed with a decimal point

P1 = Decimal Point

If P1= Yes LC, Hc, and probe values are displayed with a decimal point

H5 = Access code to parameters

Parameter Programming

- Press SET for 8 seconds. The Access code value 00 is shown on the display (the unit comes with a code set at 00 from the factory).
- With the UP and DOWN arrows, code can be set to user needs.
- Press SET to enter the code. If the code is correct, the first parameter label is shown on the display (Lc).
- Move to the desired parameter with the UP and DOWN arrow keys.
- Press SET to view the value on the display.
- The value can be modified with the UP and DOWN arrows.
- Press ENTER to enter the value and exit.
- Repeat until all necessary parameters are modified.
- Press SET and DOWN at the same time to quit programming or wait one minute and the display will automatically exit programming mode.

Note: The keyboard code can be reset to ZERO by turning off the controller and turning it on again while keeping the SET key depressed.

Display Message

The display normally shows the temperature of the probe. In case of error the following messages are shown:

- Er = Memory error
- 00 = Open probe
- — = Short circuit probe

©Copyright 2022 Dwyer Instruments, Inc.

DWYER INSTRUMENTS, INC.

P.O. BOX 373 • MICHIGAN CITY, INDIANA 46360, U.S.A.


Phone: 219-879-8000

Fax: 219-872-9057

www.dwyer-inst.com

e-mail: info@dwyermail.com

Documents / Resources

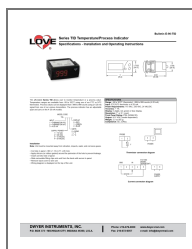

[Dwyer TID Series Temperature-Process Indicator](#) [pdf] Instruction Manual
TID Series Temperature-Process Indicator, TID Series, Temperature-Process Indicator,
Process Indicator, Indicator

References

-  [Dwyer Home](#)

Manuals+.