



Dynamax AV System User Guide

[Home](#) » [Dynamax](#) » Dynamax AV System User Guide 

Dynamax AV System User Guide

Dynamax AV Systems – A Quick-Look Guide

There are FOUR Types of AV:

(1) OVER-THE-AIR (OTA) CHANNELS



- Turn ON the HD OTA Signal Booster. Press the left button on the Winegard Connect 2.0's cover plate – labelled "Antenna")
 - *Note – A green light above the button indicates booster is on
- Set TV Source to "TV", then go to:
 - i. Menu → Channel → Air → Auto Scan *Note – HD channels end in ".1"

(2) PARK CABLE/SATELLITE (PROVIDED AT CAMPGROUNDS)

- Turn OFF the HD OTA Signal Booster
- Plug in the park cable coax to the exterior Park Cable/Satellite Coax Recept (driver side rear)
- Set TV Source to “TV”, then go to Menu → Channel → Cable → Auto Scan

(3) DVD/BLU-RAY PLAYER – USING 4X4 HDMI MATRIX *SEE EXAMPLE AT BOTTOM

- Set TV Source to HDMI 1
- Identify Desired TV Output on the HDMI Matrix – there are four outputs (we use three of them):
 - i. Output A = Living Area TV – Output B = Bedroom TV – Output C = Outside TV (if equipped)
- Use Toggle Button on left to select the desired Input
- The DVD player is Input #1 (the first input light from the left)
- To play the DVD player on a desired TV, go to the desired Output and use its toggle button to make the first input light go RED (i.e. if you want to play the DVD player on the bedroom TV, go to Output 2 and toggle through the input panel below to make sure the first input from the left turns red).

(4) ROOF-MOUNTED SATELLITE (IF EQUIPPED) – USING 4X4 HDMI MATRIX *SEE EXAMPLE AT BOTTOM

- Set TV Source (same as DVD Player – see above)
- On the HDMI Matrix – the satellite receiver is Input #2 (the second input light from the left)
 - *Note – the satellite receiver is supplied/installed by the customer. During installation, the satellite receiver must be connected to Input #2.
- To play the satellite on a desired TV, go to the desired Output and use its toggle button to make the second input light go RED (i.e. if you want to play the satellite on the outside TV, go to Output 3 and toggle through the input panel below to make sure the second input from the left turns red).



*In this example – The Living Room TV (Output A) is connected to the DVD Player (Input #1); the Bedroom TV (Output B) is connected to the Satellite Receiver (Input #2); and, the Outside TV (Output C) is connected to the DVD Player (Input #1).

Contents

- 1 Documents / Resources
- 2 Related Posts

Documents / Resources

	<p>Dynamax AV System [pdf] User Guide AV System</p>
---	---