



Dynamic Aqua Flusher User Manual

[Home](#) » [Dynamic](#) » Dynamic Aqua Flusher User Manual 

Contents

- [1 Dynamic Aqua Flusher](#)
- [2 CHARGING INSTRUCTIONS](#)
- [3 OVERVIEW](#)
- [4 INSTRUCTIONS FOR USE](#)
- [5 TROUBLESHOOTING GUIDE](#)
- [6 MORE INFORMATION](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



Dynamic Aqua Flusher



CHARGING INSTRUCTIONS

- THE AQUA FLUSHER MUST BE FULLY CHARGED BEFORE IT'S FIRST USE
- NEVER LEAVE UNATTENDED WHILST CHARGING
- MUST ONLY BE CHARGED USING THE SUPPLIED CHARGER AND CONNECTOR. WHEN CHARGING, A RED LIGHT IS SHOWN ON THE UNIT. WHEN FULLY CHARGED, THE LIGHT WILL TURN TO GREEN AND THE UNIT SHOULD BE UNPLUGGED
- CHARGING TIME: 9 HOURS.
- DO NOT USE IF THE CABLE OR CHARGER IS DAMAGED

OVERVIEW



INSTRUCTIONS FOR USE

1. Lower the inlet pipe and filter into a bucket of clean water.
2. Connect the trigger handle by pulling back the spring loaded connector on the blue outlet pipe and insert the trigger handle male connector and you will hear it 'click' into place.
3. Connect the lance to the trigger handle in the same way.
4. To turn pump on:
 - Press the red button only if pressure regulation is required. Pressing the red and green buttons provides maximum power and water pressure. Pressure can be increased by turning the pressure regulator dial

clockwise and decreased by turning the dial anti-clockwise.

5. The flusher is now ready for use.
6. **IMPORTANT.** Once finished, remove the inlet pipe from the water and whilst pressing the trigger for 5 seconds, all water should be pumped through and out of the lance.
7. To turn the pump off:
 - Both power buttons to off.
8. Disconnect the lance from the trigger handle. Gently shake any residual water off any parts. Clean and dry with a towel before putting away

TROUBLESHOOTING GUIDE

• PUMP STARTS, BUT NO WATER FLOWS OUT

- **Water filter blocked** Unblock
- **Lance nozzle blocked** Unblock
- **Low battery** Re-charge

• PUMP WONT START OR RUN

- **Flat battery** Re-charge

• PUMP STOP SUDDENLY

- The pump has gotten too hot. Leave for 10 minutes to cool down. The unit will cut out automatically if the motor gets too hot.
- **Nozzle of the lance is blocked** Unblock

• PUMP STARTS AND THEN STOPS

- No water supply Check for blockages in pipes, filter and lance nozzle, unblock.

• PUMP DOES NOT REACH REQUIRED PRESSURE

- **Unit leaks** Check for blockages and leakages
- **Battery is low.** Recharge.

FOR ANY OTHER PROBLEMS, CONTACT YOUR DYNAMIC DENTAL EQUIPMENT SUPPLIER FOR FURTHER ASSISTANCE

MORE INFORMATION


Your local 'Dynamic Service Centre' is :



FAQs

- **Q: How do I know when the Aqua Flusher is fully charged?**
 - A: The red light on the unit will turn green when the Aqua Flusher is fully charged.

Documents / Resources

	<p>DYNAMIC Dynamic Aqua Flusher [pdf] User Manual Dynamic Aqua Flusher, Aqua Flusher, Flusher</p>
---	---

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.