



DynaScan DS431LT4 2500 Nits High Brightness Display User Manual

[Home](#) » [DynaScan](#) » DynaScan DS431LT4 2500 Nits High Brightness Display User Manual 

Contents

- 1 DynaScan DS431LT4 2500 Nits High Brightness Display
- 2 Material Contents Declaration
- 3 Recycling and Energy Information
- 4 Declaration of Conformity
- 5 Safety Precautions
- 6 Important Safety Information
- 7 Getting Started
- 8 Installing and Replacing Remote Control Batteries
- 9 Installation
- 10 Maintenance
- 11 Wall Mounting
- 12 Input / Output Terminals
- 13 Operating Instructions
- 14 Using the Remote Control
- 15 Using the built-in keypad
- 16 Navigating the On Screen Display (OSD) Menu
- 17 Specifications
- 18 Input Mode
- 19 Pin Assignments
- 20 Troubleshooting
- 21 About DSM365
- 22 Documents / Resources
 - 22.1 References
- 23 Related Posts

DynaScan

DynaScan DS431LT4 2500 Nits High Brightness Display



DS431LT4 USER MANUAL

- 43" 2500 nits High Brightness Display
- Please read this manual carefully before operating the product and keep it for future reference. The use of diagrams and illustrations in the manual are for coherence only the actual product may be different

FOR MORE INFORMATION

For more information about DynaScan, visit our website at www.dynascandisplay.com. Copyright © DynaScan Technology Inc. All rights reserved. All specifications and descriptions are subject to change without notice. Reproduction without permission is prohibited.

Material Contents Declaration

Part Name	Hazardous Substances					
	Lead	Mercury	Cadmium	Hexavalent Chromium	Polybrominated Biphenyls	Polybromodiphenyl Ethers
	Pb	Hg	Cd	Cr ⁶⁺	PBB	PBDE
PCBA	O	O	O	O	O	O
CHASSIS	O	O	O	O	O	O
ACCESSORY	O	O	O	O	O	O
PACKAGE	O	O	O	O	O	O
"O" indicates that the level of the specified chemical substance is less than the threshold level specified in the standards of SJ/T-11363-2006 and EU 2005/618/EC. "X" indicates that the level of the specified chemical substance exceeds the threshold level specified in the standards of SJ/T-11363-2006 and EU 2005/618/EC.						

Recycling and Energy Information

DynaScan is firmly committed to its environmental protection efforts and we believe that reducing our products' impact on the environment is of the utmost importance. We are dedicated to meet the latest environmental protection regulations.

Energy usage

Mode	Energy Consumption
Normal	Max. 220 W
Standby	< 1 W

Disposal

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new one, the retailer is legally obligated to take back your old appliances for disposal at least for free of charge.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Declaration of Conformity

FCC

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

• FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

• CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

• RF exposure warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s)

used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

- **Manufacturer Name**

- DynaScan Technology Corp.

- **Manufacturer Address**

- 6F, No. 88 Wenmao Rd., Guishan Dist, Taoyuan City 333001, Taiwan




This device complies with Directive 2014/53/EU issued by the Commission of the European Community.


Article 3.1(a) EN 62368-1 IEC 62368-1 Airticle 3.2 EN 300 328 EN 301 893 EN 62311	Article 3.1 EN 55032, Class A EN 61000-3-2 EN 61000-3-3 EN 55035 :2017 EN 301 489-1 EN 301 489-17
---	--

- **Frequency bands and Powers**

- WIFI 2.4G-2412~2462MHz.
 - Maximum radio-frequency power transmitted in the 2.4GHz is 50mW.

Safety Precautions

CAUTION	
	Do not install near flammable material or any heat sources.
	Do not defeat the safety purpose of the grounding-type plug.
	Do not disassemble the display to avoid electrical shock or burn.
	Normal operating condition considers installation at an altitude below 2000m; some abnormalities may be experienced when installed at an altitude above 2000m.

WARNING	
	Please power off the LCD and the video source before plugging in the DP or HDMI cable.
	Please installed the display in well-ventilated place, do not install in a confined space.
	Suitable for mounting on concrete or other non-combustible surface only.
	If it gives off smoke, strange smell, or unusual noise, or when it gets too hot to touch, immediately unplug the display and contact the dealer.
	Clean only with soft, dry cloth but not use chemical liquids, and unplug while cleaning.
	Do not use extreme force or any sharp or pointed objects to touch the display.
	Do not drop or allow any object to fall to the display.
	Do not operate the display with wet hands to avoid electric shock.
	Do not discard this product with general household waste. Please be sure to comply with the local waste regulations.
	This device uses, generates and radiated radio frequency energy. The radio frequency energy produced by this device is well below the maximum exposure allows by Federal Communications Commission (FCC).
	When a stationary or fixed image is displayed on the screen for a long time, the image may be permanently imprinted on the screen. This phenomenon is known as image burn-in and is not covered by the manufacturer's warranty.
	In order to avoid burn-in, avoid prolonged display of static or fixed images on the screen.
	Power supply cord must not be attached to the building surface, nor run through walls, ceilings, floors and similar openings in the building structure.
	Power cord shall be connected to a socket-outlet with earthing connection.

Important Safety Information

- Disassembling the LCD is strictly prohibited. Opening the cover may expose the user to electric shock or other hazards. Please contact DynaScan certified service professionals for all maintenance requirements.
- Do not allow any liquid to enter the LCD. Also avoid placing the LCD close to water sources.
- Do not place heavy objects on the power cord. A damaged power cord might cause electric shock or fire.
- Do not bend, twist, or damage the power cord.
- The power cord must comply with the local safety regulations.
- Do not damage or modify the prongs/pins and the ground contact on the power cord plug.
- Do not place the LCD on an unlevelled surface or an unstable vehicle. The LCD could fall over and cause substantial damage.
- Do not cover the vents and/or the heat sink.
- Do not install the LCD beside radiators or other heat sources. The installation site should have sufficient ventilation so the heat generated by the LCD can be dissipated.
- Do not use the Signage in a hot, humid, dusty, or fummy environment.
- Handle the LCD with care. Save the packaging materials for transport later.
- Clean the LCD backside at least once a month for dust and other particles.

Unplug the LCD immediately and contact a DynaScan certified service professional as soon as possible when any of the following situations occurs:

- Damaged power cord or power plug.
- If liquid or foreign object has entered the LCD.
- If the LCD has been exposed to rain or water.
- If the LCD has been dropped or the casing has become damaged.

- If any structural damage such as cracks or unnatural vibration is found.
- If the LCD cannot be operated following the steps outlined in this manual.
- If the LCD emits smoke or other odors, or generates strange noises.

Operating Suggestions

Avoid displaying a stationary image for a long period of time in order to prevent image sticking.

Cleaning the Panel

- Use a soft, lint-free cloth to gently wipe the dust off from the screen panel.
- Do not use any hard material to wipe the panel.
- Do not poke the panel with your hand or any sharp object (such as a pen or a nail) or exert excessive pressure on the panel to prevent any damage.
- Do not use any cleaning solutions on the panel as it might cause discoloration.

Cleaning the Casing

- Unplug the power cord.
- Gently wipe the casing with a soft cloth.

Attention

Do not use any of the following solutions to clean the casing as they may damage the paint and cause it to crack or peel: benzene solution, alkaline solution, alcohol-based cleaning solution, glass cleaner, wax, polisher, or detergent.






Getting Started

Contents

Confirm that the accessories below are shipped along with the display. If any item is missing, please contact your dealer. The color and shape of the accessories may vary with the products.

- DS431LT4 Professional LCD.
- Remote Control x 1 pc.
- Batteries (1.5V / AAA) x2 pcs.
- Power cable x1 pc.
- Quick Start Guide x1 pc.
- ESK302 x1 pc.

Attention: Please use the following table to check whether the included power cord is suitable for your region. If the power cord does not match your region, please contact your local supplier. Please use matching AC socket in order to meet your local safety regulations.

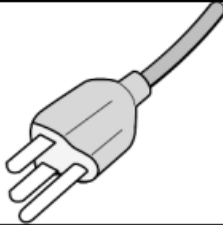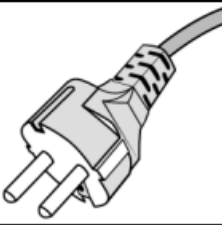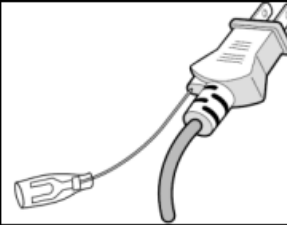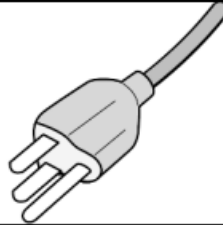Plug Type	North America	European Continental	Japan	Taiwan
Plug Shape				
Region	U.S.A. / Canada	EU (Except U.K.)	Japan	Taiwan
Voltage	120V	230V	100V	110V
NEMA TYPE	NEMA 5-15	CEE 7/7	NEMA 1-15	NEMA 5-15
IEC Display Plug				
IEC Plug TYPE	IEC320 C13			

Model Number	VESA (mm)		Screw Specification	Screw Length	Number
DS431LT4	(A * B)	200 * 400	M6	Greater than 10mm Smaller than 12mm (not including wall mount thickness)	4

Installing and Replacing Remote Control Batteries

1. Open the battery compartment cover.
2. Insert 2 new AAA batteries.
3. Close the battery compartment cover.

Warning:

- Incorrect usage of batteries may cause leakage or explosion.
- Pay attention to the polarity when installing the batteries.
- Do not mix different types of batteries or new and used batteries. Doing so may shorten the battery life or cause leakage.
- Remove or replace the batteries when they are empty in order to prevent acid leaking in the battery compartment.
- Do not touch the leaked substance from the batteries in case of a battery leakage. Doing so may hurt human skin.

Note: If the remote control is not going to be used for a long time, we recommend removing the batteries from the remote control.

Installation

The LCD must be properly installed using a wall mount. Incorrect installation may cause injury or damage the equipment. Product warranty does not cover the damage caused by improper installation and DynaScan shall not be held responsible in such incident. Refer to the mount manufacturer's instructions for proper installation.

Mounting


- We recommend for at least four people to handle and mount the display.
- Mounting the Professional LCD on the wall is the responsibility of the user. Not all walls provide enough strength to support the LCD. The LCD may drop and cause serious injury if it is mounted on a slanted wall. Product warranty does not cover improper installation, modification, or damage caused by natural disasters. DynaScan recommends having certified professionals to evaluate the installation site and perform the mounting operation.
- Do not to cover the vent and/or the heat sink in order to ensure proper heat dissipation.
- Refer to the installation guide provided by the manufacturer for proper mounting.

When mounting on a wall

- A wall mount is not included in the accessory. Please purchase a VESA Standard wall mount to secure the LCD. DynaScan is not responsible for the damage caused by using non-standard wall mounts.
- Verify that the mounting location can support the weight of the LCD before installation.
- The installation angle must be within 15 degrees of the vertical axis.
- Do not install the wall mount while the power is turned on as it may cause serious injury due to electrical shock.


Model Number	VESA (mm)		Screw Specification	Screw Length	Number
DS431LT4	(A * B)	200 * 400	M6	Greater than 10mm Smaller than 12mm (not including wall mount thickness)	4

Unit: mm

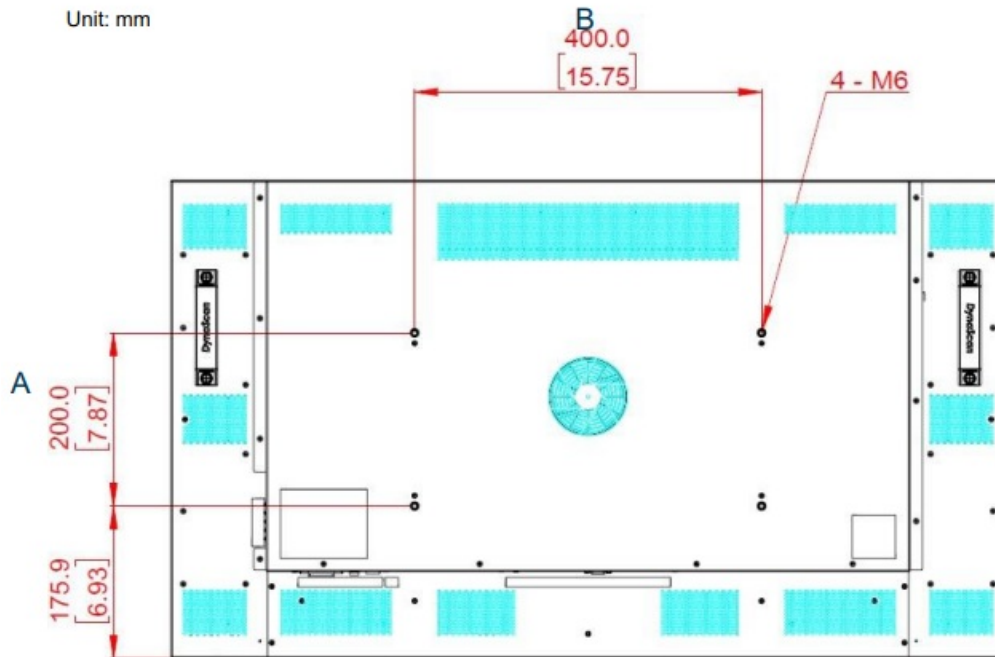

Orientation

When used in the portrait orientation, the LCD should be rotated clockwise when looking at the front of the display such that the left edge becomes the top edge.

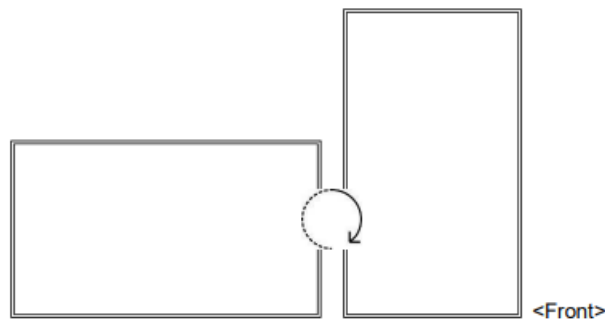


Portrait mode: Rotate the set clockwise 90° (mandatory)

The orientation sticker can be found on the rear of display, which is for distinguishing the direction of installation.



Installation Location

- The wall and mount must have enough strength to support the LCD and its accessories.
- Do not install in a location with strong vibrations or dusty.
- Do not install near the building's main electric panel.
- Ensure the LCD is secured in such a manner that it cannot be easily removed by the general public.
- Leave clearance around the outer edge of the LCD (or video wall matrix) from other objects to ensure proper ventilation.

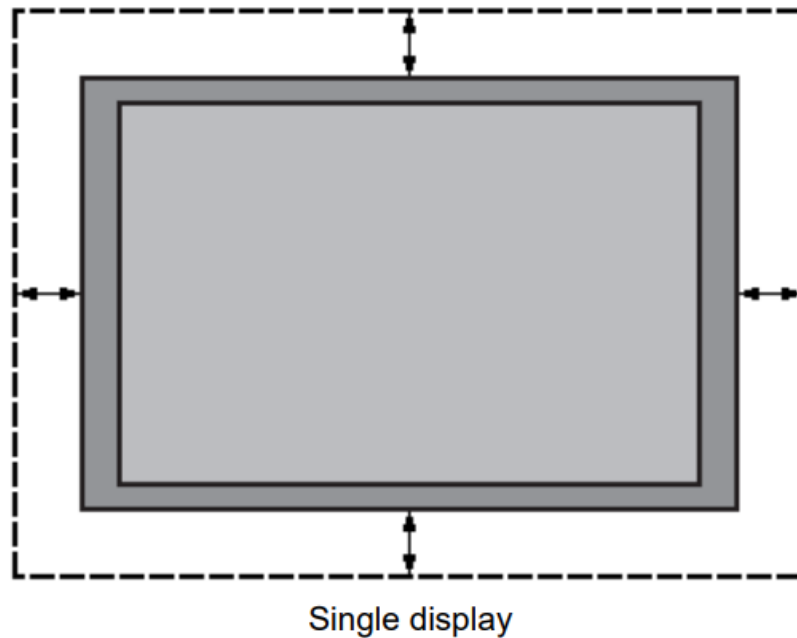


Maintenance

- Inspect the fasteners regularly for signs of loosening or deformation. Please perform appropriate corrective measures when a problem is identified. Neglecting the problem may worsen the situation.
- Increase the inspection frequency on areas where previous maintenance had occurred to ensure the problems do not occur again.

Wall Mounting

- A wall mount is not included. Please purchase a VESA Standard wall mount to secure the LCD. DynaScan is not responsible for damages caused by using non-standard wall mounts.
- Verify that the mounting location can support the weight of the LCD before installation.
- The installation angle must be within 15 degrees of the vertical axis.
- Do not install the wall mount while the power is turned on as it may cause serious injury from electrical shock.

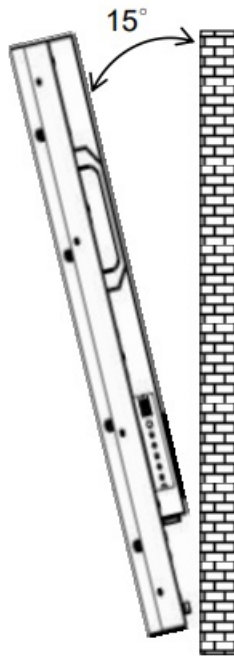

Connecting to a Power Source


Using the power cable provided, plug it in the power inlet on the back of the display shown in the diagram below.

- Connect the power cable to a 100-240 volt, 50 / 60Hz AC power outlet.
- Insert the plug completely into the socket. A loose power connection may cause damage to the display and/or lead to a fire hazard.



Connecting an External Video Source


Turn OFF the power of both LCD and external video device. Using the HDMI cable provided, insert one end into the HDMI-IN on the back of the display shown the in the diagram below. Connect the other end of the HDMI cable to the HDMI output of the video source. Refer to your video device's manual for additional information

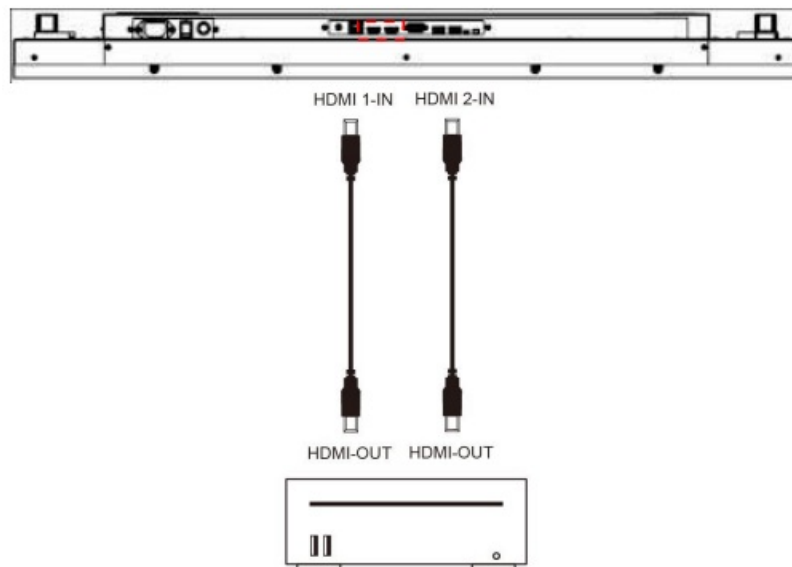

Input / Output Terminals

- **A. AC (IN):** Connect the supplied power cord to the wall outlet.
- **B. Power Switch:** Press to switch the main power on/off.
- **C. Audio (OUT):** Connect the audio signal output from Audio IN jack to an external AV device.
- **D. RJ-45 1 (IN):** RJ45 network input connection.
- **E. HDMI 1 (IN):** Connect the HDMI output of a PC or an AV device via a HDMI cable.
- **F. HDMI 2 (IN):** Connect the HDMI output of a PC or an AV device via a HDMI cable.
- **G. RS-232 (IN):** RS232C network input connection for remote control from PC.
- **H. USB 2.0 port 1:** Support for USB flash drive storage, mouse and keyboard.
- **I. USB 2.0 port 2:** Support for USB flash drive storage, mouse and keyboard.
- **J. Extension Connector:** Extension Connector for optional IR Extension sensor kit (ESK302).
- **K. Thermal:** Extension Connector for optional Extension thermal kit (ETK302).


USB 2.0 port: A standardized port to connect a variety of devices like mouse, keyboard, and flash drive. Support USB storage devices formatted with NTFS, FAT32 (32G) file system.

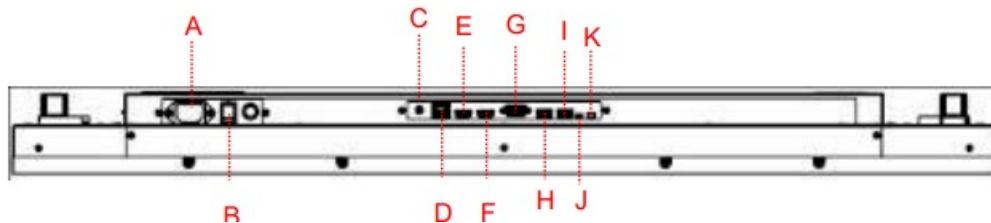

Operating Instructions

Powering On/Off the Display


To turn on/off the display, press the power switch on the back of the display as shown in the diagram below.

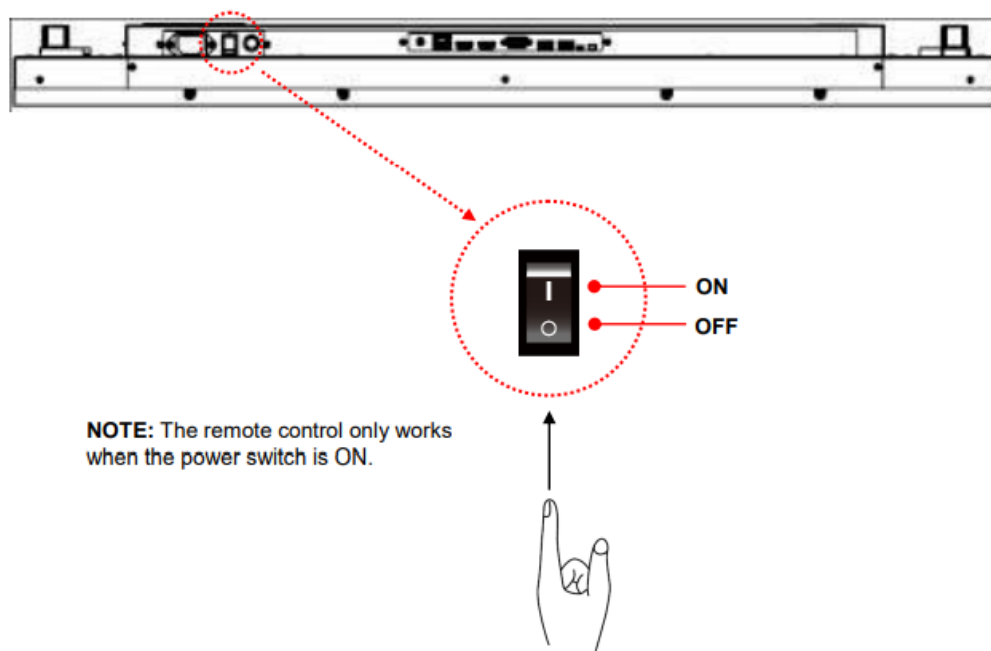


Using the Remote Control

Connection using an External Sensor Kit (ESK302)

Connect the ESK302 cable to the mini USB port on the side of the display, and aim the remote at the IR receiver as shown below. Meanwhile, the IR receiver on the display will be disabled. The operating range of the remote control is 2.5 meters (8 feet).

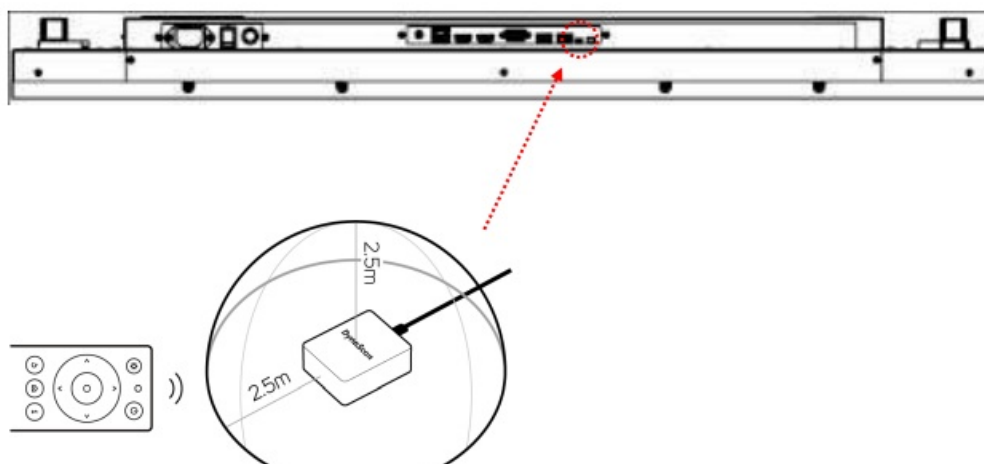


NOTE: Ambient light may affect the performance of the remote control. Avoid fluorescent or neon lights in the vicinity.

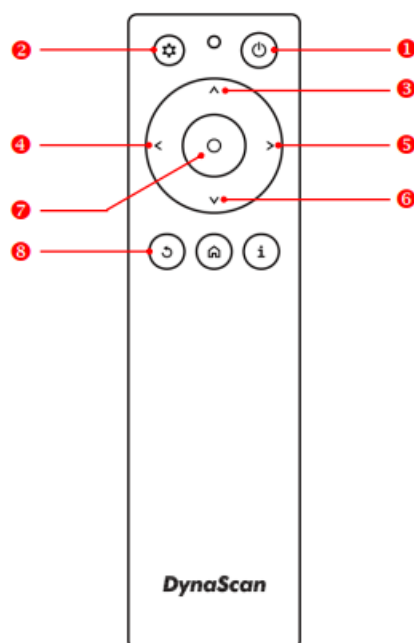

Color and shape may vary by model.

ITEM		DESCRIPTION
❶	POWER	Power On / Off
❷	MENU	OSD On / Off
❸	UP	Move the cursor up or change the setting of selected item.
❹	LEFT	Exit the current selection.
❺	RIGHT	Select the highlighted item.
❻	DOWN	Move the cursor down or change the setting of selected item.
❼	OK	Enter (for DSM365 only)
❽	BACK	Return to the last page. (for DSM365 only)

Using the built-in keypad

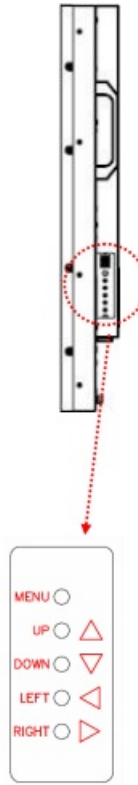


ITEM	DESCRIPTION
MENU	OSD On / Off, Power On / Off.
UP	Move the cursor up or change the setting of selected item.
DOWN	Move the cursor down or change the setting of selected item.
LEFT	Exit the current selection.
RIGHT	Select the highlighted item.

Navigating the On Screen Display (OSD) Menu

Press the MENU button on the built-in keypad or remote control to show the OSD. Use the navigation arrows to select and adjust the menu items.


The change of each setting can only enable when you press “LEFT” (refer to p.19) to back to the last menu layer.

1. Input Source

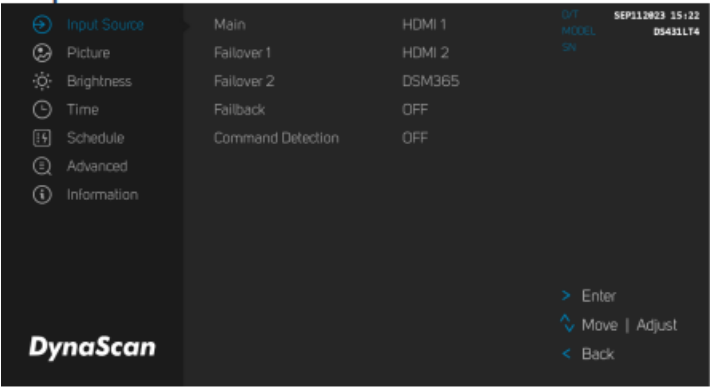


ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Input Source	Main	HDMI 1	Set the Main input to display.
	Failover 1	HDMI 2	Set the Failover 1 input to display.
	Failover 2	DSM365	Set the Failover 2 input to display.
	Failback	OFF	Set the time (hour),when the Input Source is failover , it will redetection the Main Source per few hour.
	Command Detection	OFF	Only effective in Main input source. If the display didn't get both of commend and the input signal, it will change to Failover1 input.

2. Picture

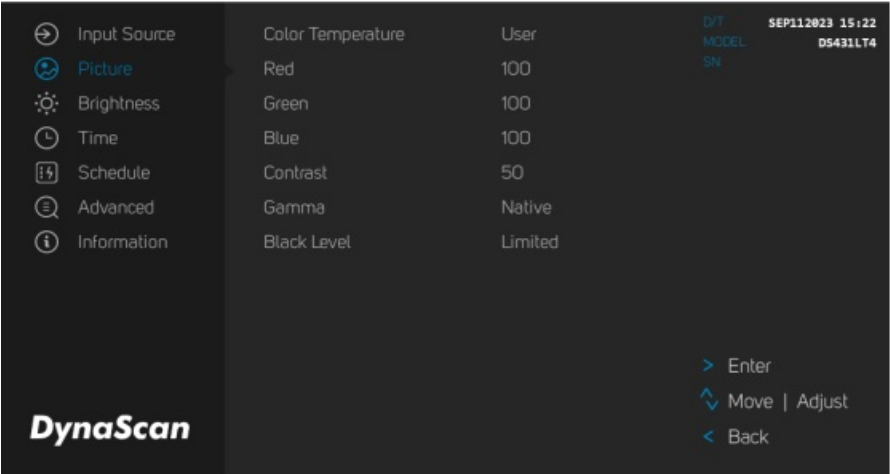


ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Picture	Color Temperature	USER	Adjusts the color temperature to preset or user determined values. (User, D55, D65, D93, Balanced)
	Red	100	<ul style="list-style-type: none"> Adjust the red light level. Range 0 – 100. Note: The feature is only supported on User mode.
	Green	100	<ul style="list-style-type: none"> Adjust the green light level. Range 0 – 100. Note: The feature is only supported on User mode.
	Blue	100	<ul style="list-style-type: none"> Adjust the blue light level. Range 0 – 100. Note: The feature is only supported on User mode.
	Contrast	50	Adjust the contrast level. Range 0 – 100.
	Gamma	Native	Adjusts the Gamma value. (Native, 2.2, 2.4 and gamma)
	Black Level	Limited	<ul style="list-style-type: none"> Selects the black level to adjust the screen gray scale. “Limited” for video source uses 16 to 235 levels for R/G/B, such as HDMI. “RGB Full” for video source uses all levels from 0 to 255 levels. “Auto” is for detecting the video source to determine its value is applicable for “Limited” or “RGB Full”.

Brightness

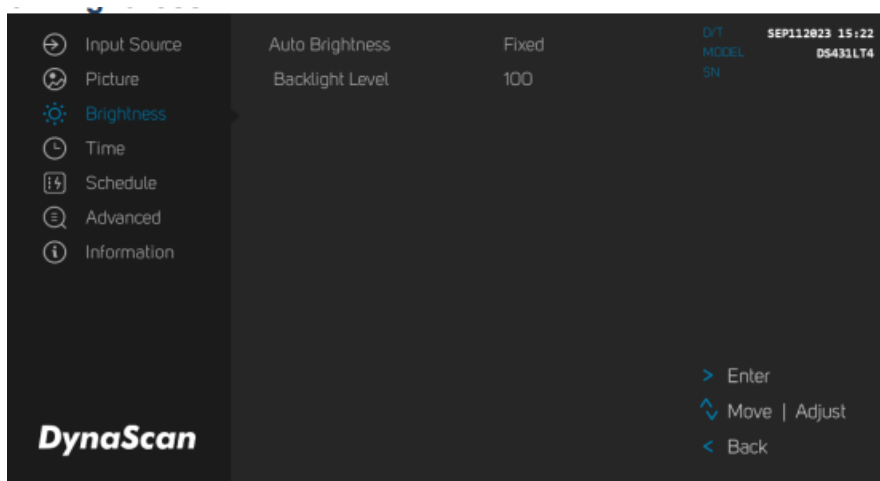


ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Brightness	Auto Brightness	Fixed	<ul style="list-style-type: none"> • Brightness Setting Fixed: screen brightness remains at one level. • Timer: Screen brightness is determined by the time of day. Auto: Screen brightness is determined by an extension sensor kit (ESK). • Mix: Mix Timer & Auto Mode, Autosensor time screen brightness determined by an extension sensor kit (ESK); fixed time by timer. • By Light Value: Screen brightness determined by ambient light values, up to 4 levels. • By Time: Screen brightness determined by scheduled values, up to 4 levels.
	Backlight Level	100	

Time

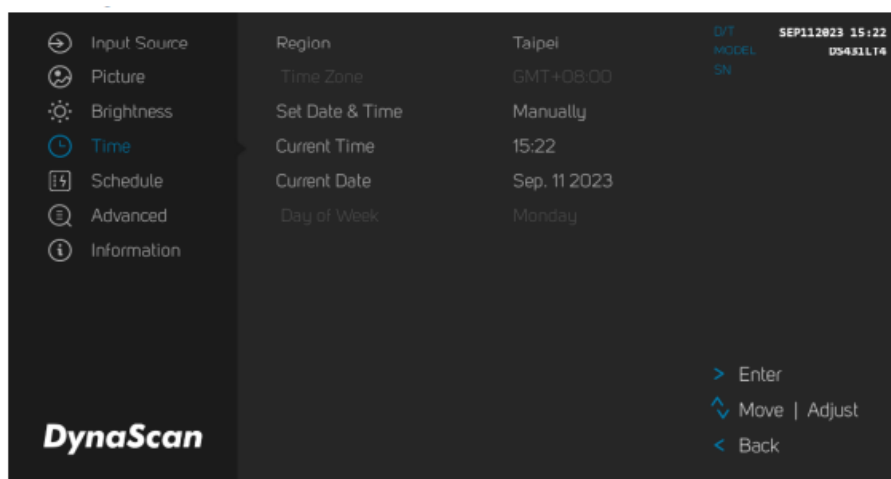


ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Time	Region		
	Time Zone		Set the Time Zone.
	Set Date & Time		Set the mode.
	Current Date		Set the date.
	Current Time		Set the clock. Note: The internal clock will continue to function when the power is turned off.
	Day Of Week		Set the day of week. (Monday to Sunday)

Schedule

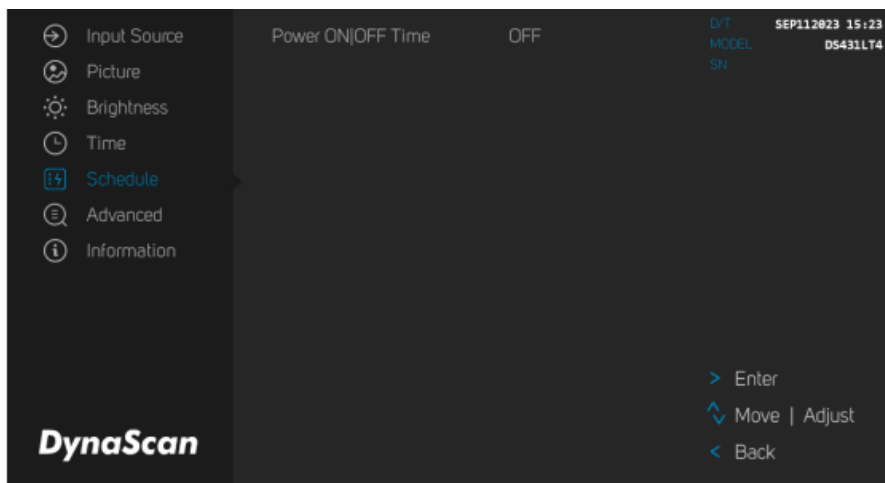

ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Schedule	Power ON OFF Time	OFF	Automatic power on / off schedule function.

Advanced

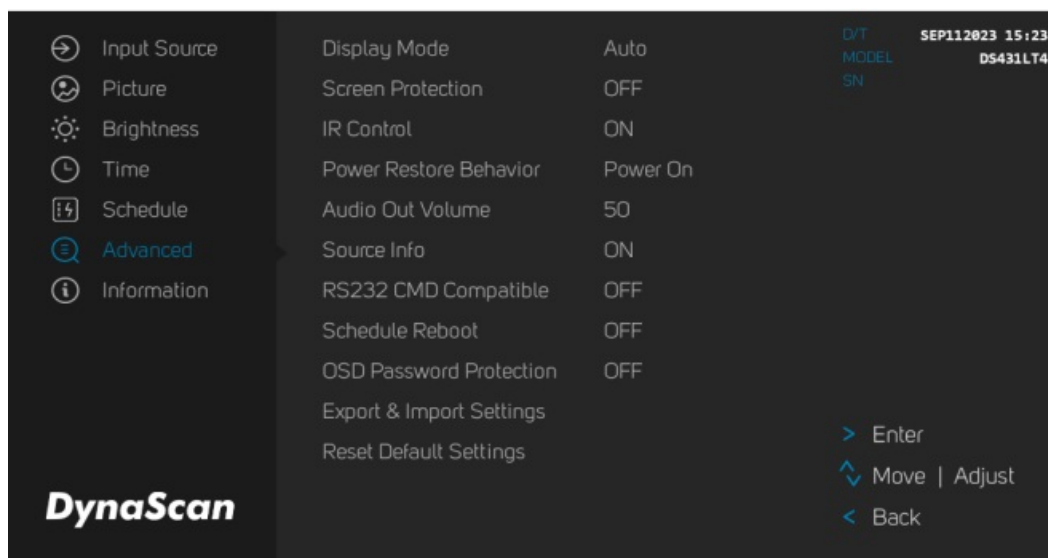

ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
	Display Mode	Auto	Change the Menu orientation. The Menu can be displayed in either LANDSCAPE, or PORTRAIT mode.
	Screen Protection	OFF	<ul style="list-style-type: none"> • Turn on / off image burn-in protection. • Set image burn-in protection interval. Range 0 – 100 minutes.

Advanced	IR Control	ON	<ul style="list-style-type: none"> • Enable/disable the remote control for Menu. • Note: When disabled, the remote control function can be enabled again from the control panel on the display or through the DynaScan “Display Manager” application.
	Power Restore Behavior	Power On	<ul style="list-style-type: none"> • Choose to use the Power Restore Behavior function. • Power On: Display booting up when the power back after an outage. • Standby: Display keeps soft-off status when the power back after an outage. • Memory: Display will back to the last state when the power back after an outage.
	Audio Out Volume	50	Set volume. Range 100 – 0.
	Source Info	ON	Enable/disable the Source Information.
	RS232 CMD Compatible	OFF	<ul style="list-style-type: none"> • RS232 Command compatibility between the current and last generation* model. • * last generation model: DS371BT4 DS491LT4 DS552LT4-1 DS552LT4-M DS552LT5 DS552LT6-1 DS552LT7 DS551DR4 DI551ST2 DW551LR5 • DO552LR4 DO551LR4 DO552LR4-M • DI651ST2 DP652ST2 DP652LT5
	Schedule Reboot	OFF	Enable/disable the Schedule Reboot, And set the Time.
	OSD Password Protection	OFF	Turn On: Create Password > Confirm Password > Password Protection On

			Turn Off: Enter Password > Password Protection Off
	Export & Import Settings		Export or Import OSD Setting by USB.
	Reset Default Setting		Restore all settings to default. <ul style="list-style-type: none"> • Note: It does not modify CURRENT DATE, CURRENT TIME, DATE OF WEEK, • TIME ZONE, POWER ON TIME and POWER OFF TIME.

Information



ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Information	Resolution		Input resolution
	MCB Version		The MCB version.
	FW Version		The F/W version.
	OS Version		The OS Version.
	Thermal Kit Temp.		The Extension Thermal Kit (ETK302) is for ambient temperature monitoring.

Some functions may not be available for all models

Specifications

MODEL		DS431LT4
PANEL	LCD Panel Size	42.5 inches
	Native Resolution	1920 x 1080
	Brightness	2,500 cd/m ² (Typ.)
	Contrast Ratio	4,000:1
	Response Time	8 ms (Typ.)
	Viewing Angle	178°/ 178°
	Life Time	100,000 hrs (Typ.)
	Panel Surface	AG 28%
POWER	Power Supply	Internal
	Rated Voltage	100 – 240V, 50 / 60Hz
	Power On Mode	220W (Max.)
	Standby Mode	< 1W
MECHANICAL SPECS	Bezel Width (T/B/L/R)	8.7 / 8.7 / 8.7 / 8.7 mm
	Cabinet Color	Black
	Monitor Dimension (LxHxD)	962.1 x 552.0 x 77.4 mm
	Monitor Weight (set / package)	18.1 kg / 21.5 kg
	VESA Mounting (Dimension)	4 Holes (400×200 mm)
USER INTERFACE	OSD Language	English
ENVIRONMENT	Operation Temperature	0°C ~ 45°C
	Storage Temperature	-20°C ~ 60°C
	Humidity	10%~80% RH Non-Condensing
I/O Ports	HDMI	IN *2
	RS-232	IN *1
	Audio	OUT *1
	USB port	IN *2
	RJ-45	IN *1
	Extension Connector (Mini USB)	IN *1 (ESK only)
	External temp. sensor	IN *1 (ETK only)
Fuse		5A


Design and specifications are subject to change without notice.

Input Mode

Active Resolution		Refresh Rate
H Pixels	V Lines	
640	480	60 Hz
720	480	60 Hz
800	600	60 Hz
960	600	60 Hz
1024	768	60 Hz
1280	720	60 Hz
1280	768	60 Hz
1280	960	60 Hz
1280	1024	60 Hz
1366	768	60 Hz
1400	1050	60 Hz
1440	900	60 Hz
1600	1200	60 Hz
1680	1050	60 Hz
1920	720	60 Hz
1920	1080	60 Hz

Pin Assignments

RS-232 Input

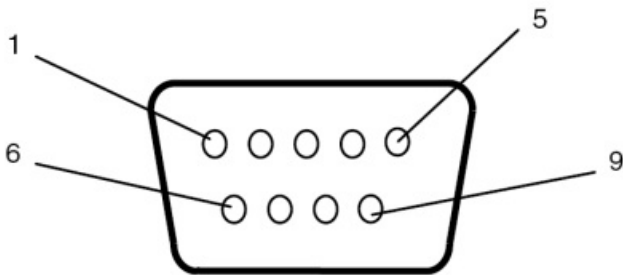

PIN No.	NAME
01	Connected to 7&8
02	TXD
03	RXD
04	Connected to 6
05	GND
06	Connected to 4
07	Connected to 1&8
08	Connected to 1&7
09	NC

Troubleshooting

ISSUE	RECOMMENDED SOLUTION
No image is displayed.	<ul style="list-style-type: none"> • Check whether the cable is completely plugged in. • Check whether the main switch is in the ON position, and the power cord is completely plugged in. • Check whether the image source's resolution is set as the supported format (refer to section "Input Mode", p.27). • Check whether the cable is damaged or bent excessively.
Nothing happens when switching the main switch on.	Unplug the power cord from the socket and plug it in again after a few seconds to reset the Signage. Note: Unplugging the power cord will not change the settings.
Image is unstable.	Check whether the cable is completely plugged in.
The remote control does not work.	<ul style="list-style-type: none"> • Check whether there are batteries in the remote control. • Check the batteries for freshness, polarity, etc. • Check whether the remote is in the operation range. • Bright light may interfere with the remote control. Please avoid using the remote control near special fluorescent lights or neon lights.
Auto on/off does not work or does not function properly.	<ul style="list-style-type: none"> • Check whether the TIMER setting in the menu is set to "OFF". • Check whether the "Power On Time" and "Power Off Time" settings are set correctly.
Cannot control the display remotely via RS-232.	Check whether the RS-232 cable is connected properly.



If you are still having trouble with your DynaScan DS² Professional LCD, contact your dealer or DynaScan directly for more assistance.

About DSM365

- DSM365 is an internal operating system as Android, which can install the applications via USB flash drive storage, SD card or Internet.

How to Switch to DSM365

- Press the MENU button on either the rear panel control or remote control to show the OSD.
- Use the navigation arrows to select and adjust the Input Source. [Input Source → Main → DSM365]

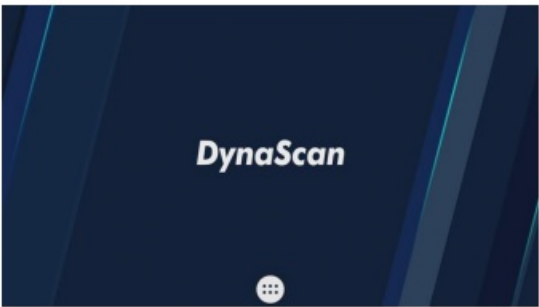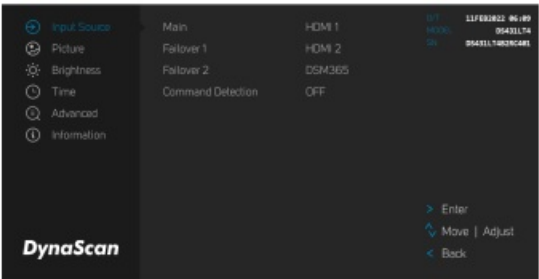


ITEM		DESCRIPTION
1	APPS	Show the Installed APPS.

www.dynascandisplay.com

Copyright © DynaScan Technology, Inc. All Rights Reserved.
DS431LT4 User Manual 30

Documents / Resources



[DynaScan DS431LT4 2500 Nits High Brightness Display](#) [pdf] User Manual
DS431LT4 2500 Nits High Brightness Display, DS431LT4, 2500 Nits High Brightness Display, High Brightness Display, Brightness Display, Display

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.