



DYNOJET 17-086 Power Commander V User Guide

[Home](#) » [Dynojet](#) » DYNOJET 17-086 Power Commander V User Guide 

DYNOJET 17-086 Power Commander V



Model coverage: 2022 Kawasaki KLR650

Contents

- 1 PARTS LIST**
- 2 INPUT ACCESSORY GUIDE**
 - 2.1 ACCESSORY INPUTS**
 - 2.2 WIRE CONNECTIONS**
- 3 INSTALLING THE POWER COMMANDER V**
- 4 Documents / Resources**
 - 4.1 References**
- 5 Related Posts**


PARTS LIST

- 1 POWER COMMANDER V
- 1 INSTALLATION GUIDE
- 1 USB CABLE
- 2 DYNOJET DECALS
- 2 POWER COMMANDER DECALS

- 2 VELCRO STRIPS
- 1 ALCOHOL SWAB

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION.
THE IGNITION MUST BE TURNED OFF BEFORE INSTALLATION.

INPUT ACCESSORY GUIDE

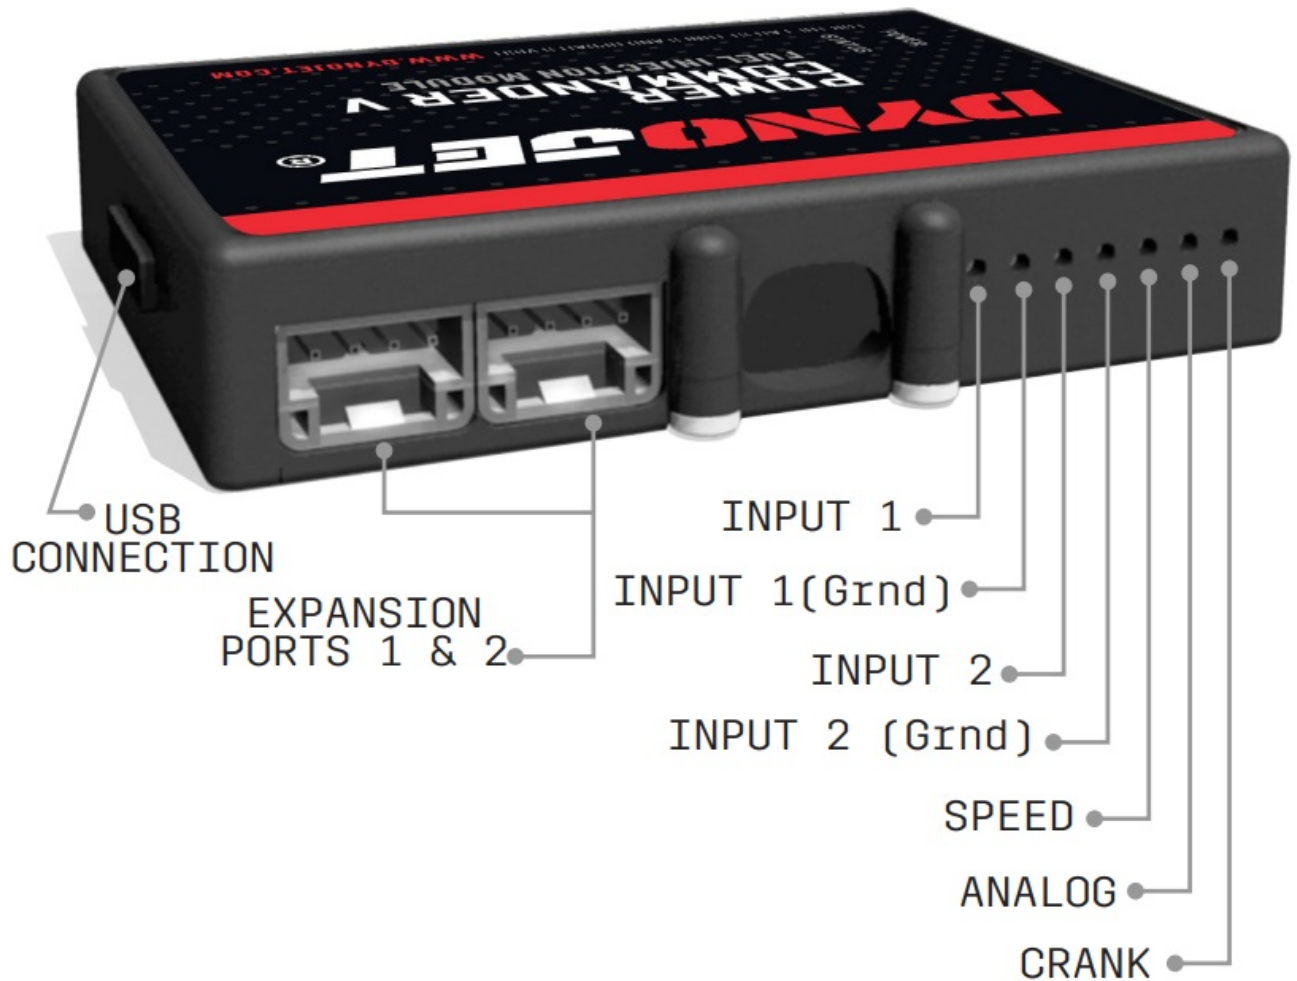


ACCESSORY INPUTS

Map	(Input 1 or 2) The PCV has the ability to hold two different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important. When using the Autotune kit, one position will hold a base map and the other position will let you activate the learning mode. When the switch is "CLOSED" Autotune will be activated.
Shifter	(Input 1 or 2) These inputs are for use with the Dynojet quick shifter. Insert the wires from the Dynojet quick shifter into the SHIFTER inputs. The polarity of the wires is not important.
Speed	If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Power Core software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quick shifter.
Analog	This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the Power Core software.
Crank	Do NOT connect anything to this port unless instructed to do so by Dynojet. It is used to transfer crank trigger data from one module to another.

WIRE CONNECTIONS


To input wires into the PCV first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire, strip about 10mm from its end. Push the wire into the hole of the PCV until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.

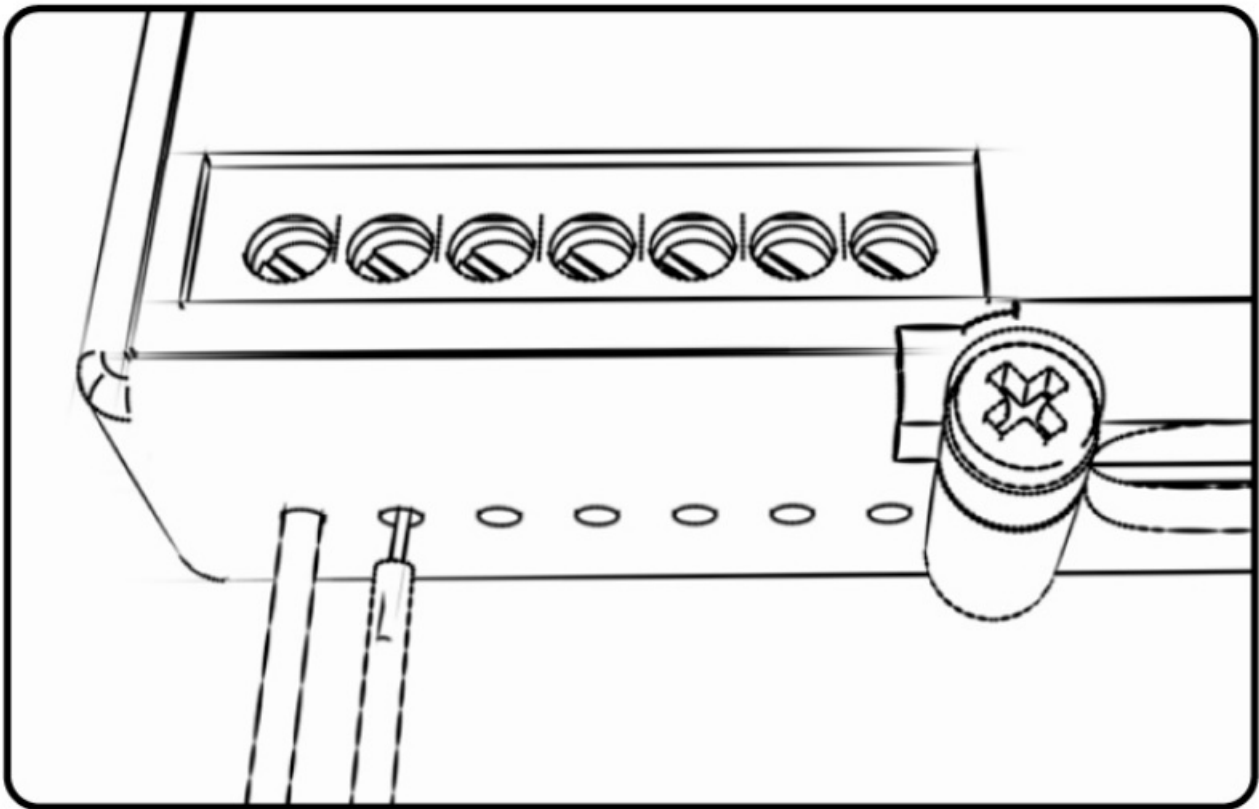

INSTALLING THE POWER COMMANDER V


1. Remove the seat.
2. Remove the luggage brackets and top rack if installed.

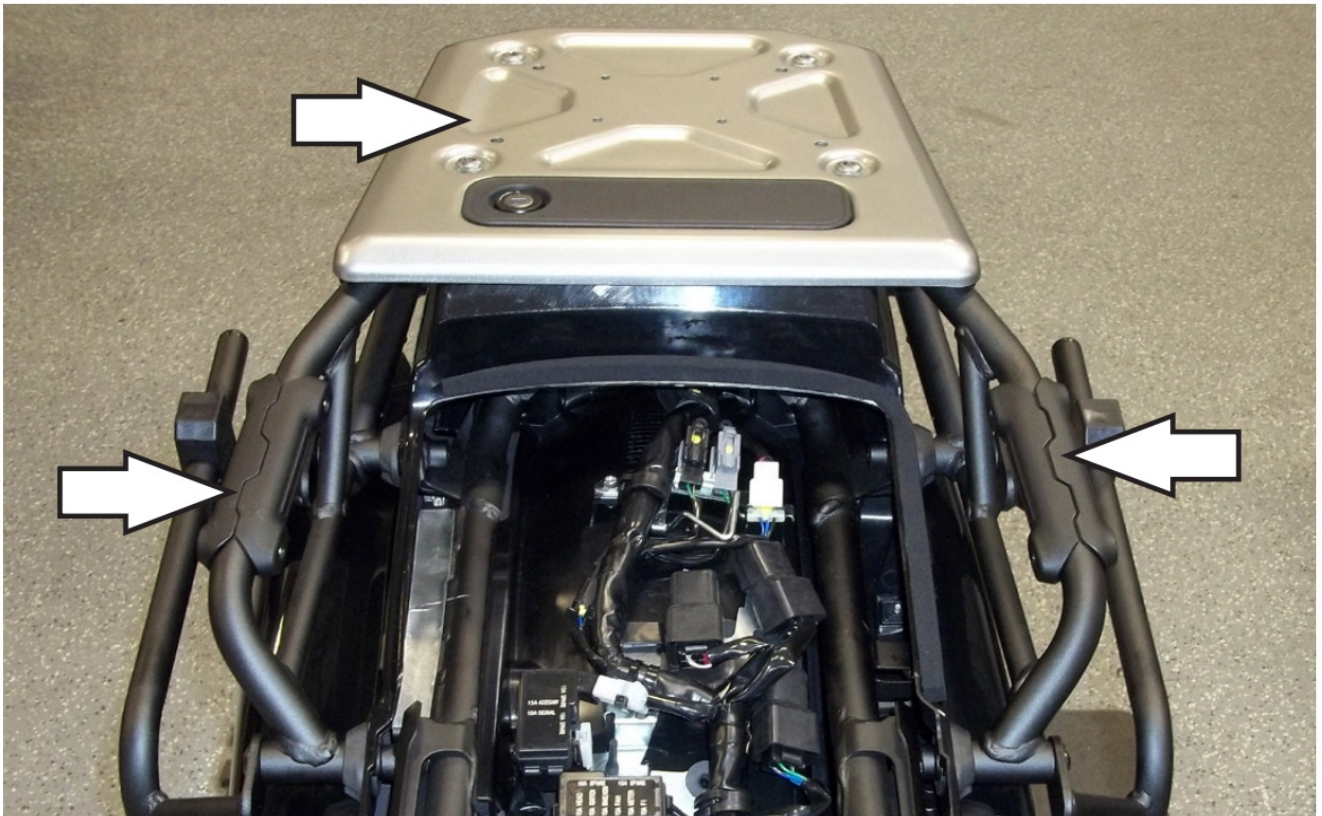


3. Remove the side panels.
4. Remove the rear cowl section.



5. Unplug the stock wiring harness from the ECU.

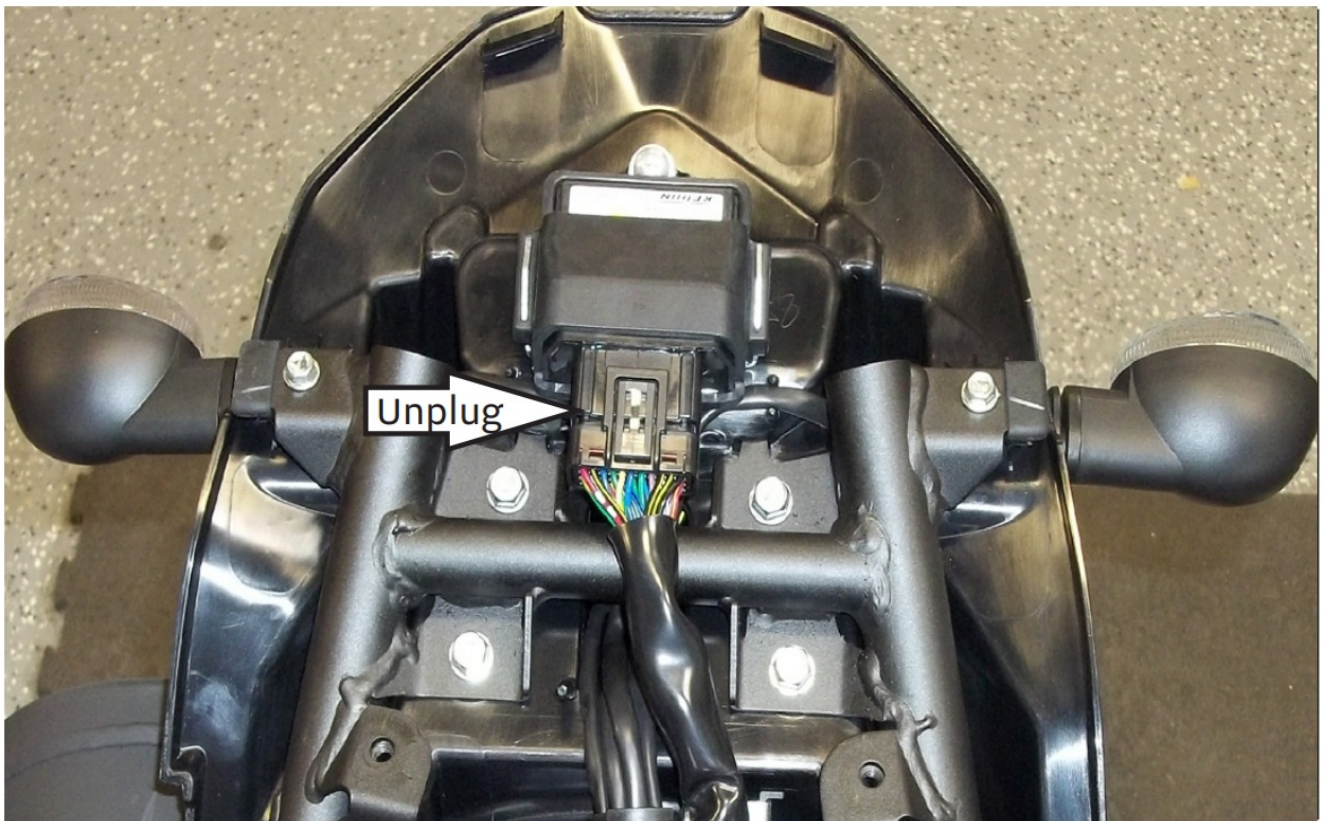

6. Plug the PCV in-line of the stock wiring harness and ECU.
7. Using the supplied velcro secure the PCV to the inner rear fender. Make sure to use the alcohol swab to clean the surface before attaching.
8. Reinstall bodywork.

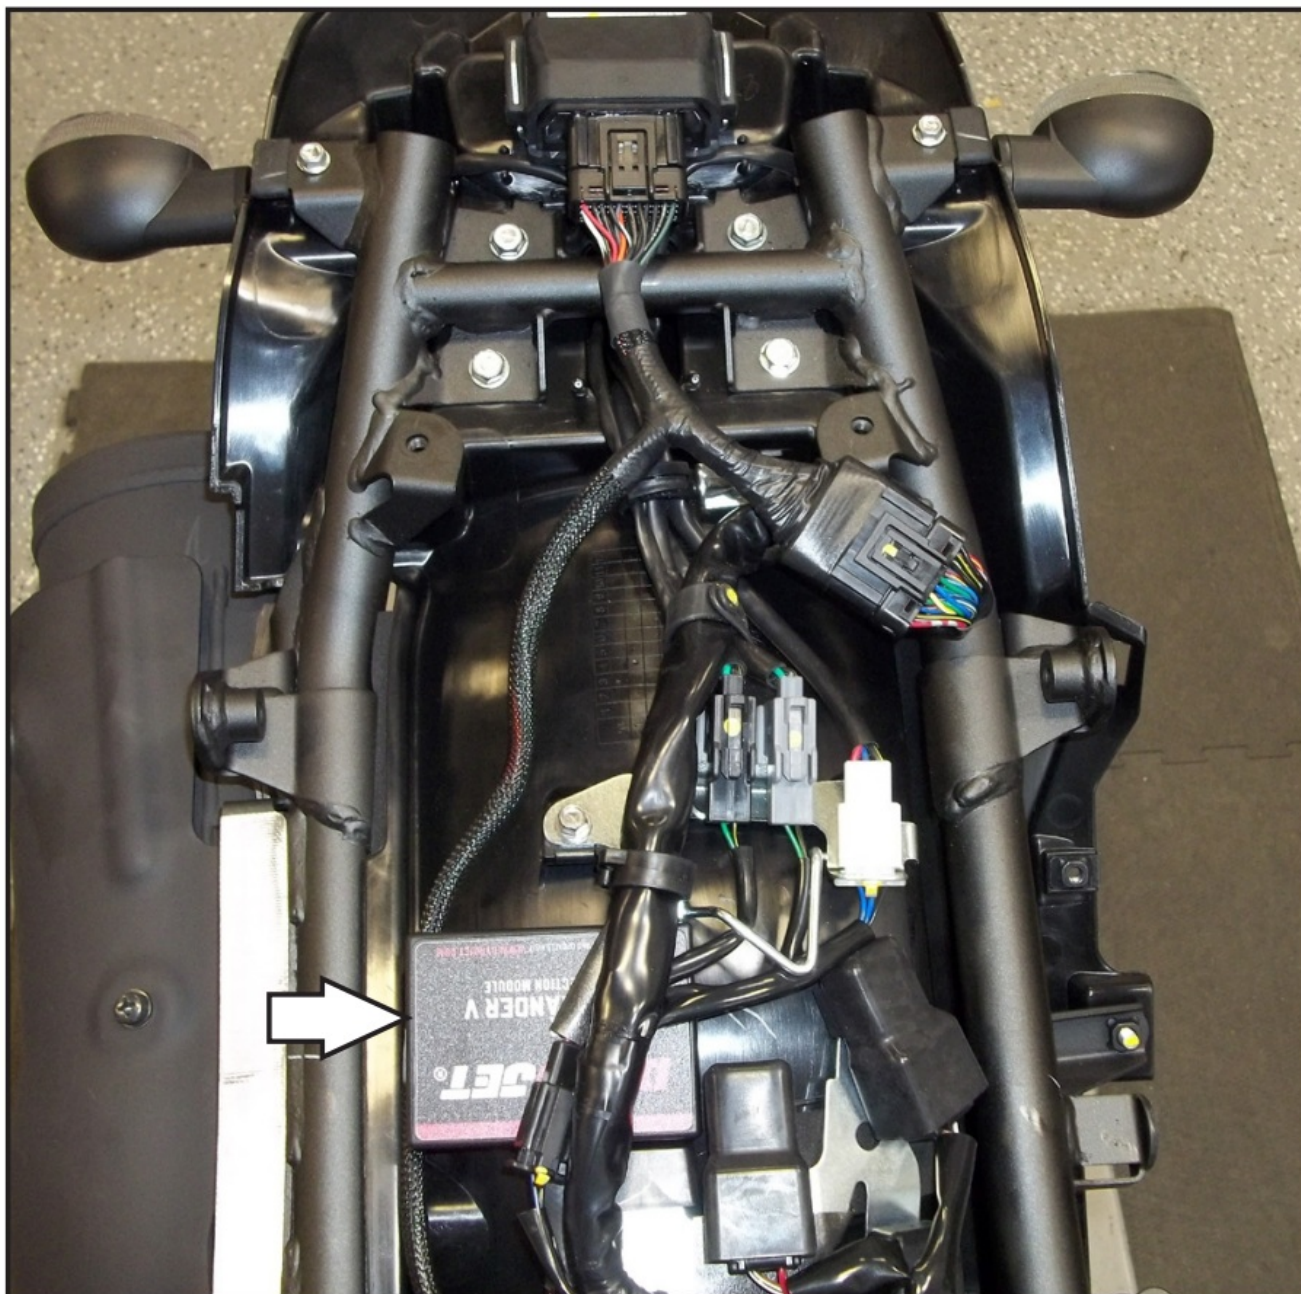

PUSH
THE
LIMIT

2191 MENDENHALL DRIVE, NORTH LAS VEGAS, NV 89081 – 800-992-4993 – [DYNOJET.COM](https://www.dynojet.com)
© 2020-2021 DYNOJET RESEARCH ALL RIGHTS RESERVED

DYNOJET®

Documents / Resources



[DYNOJET 17-086 Power Commander V](#) [pdf] User Guide

17-086 Power Commander V, 17-086, Power Commander V, Commander V, Power Commander, 2022 Kawasaki KLR650

References

- [D Powersports Vehicle Parts | Performance Ignition & Fuel Parts | Dynojet](#)

[Manuals+](#).