

[Skip to content](#)

## **Manuals+**

User Manuals Simplified.



# Dyson V6 Trigger Vacuum Cleaner Operating Manual

[Home](#) » [dyson](#) » Dyson V6 Trigger Vacuum Cleaner Operating Manual 

Contents [hide](#)

[1 Dyson V6 Trigger Vacuum Cleaner Operating Manual](#)

[2 ASSEMBLY](#)

[3 DYSON CUSTOMER CARE](#)

[4 IMPORTANT SAFETY INSTRUCTIONS](#)

[5 IMPORTANT WASH FILTER](#)

[6 USING YOUR DYSON APPLIANCE](#)

[7 OPERATION](#)

[7.1 CARPETS OR HARD FLOORS](#)

[7.2 LOOKING AFTER YOUR DYSON APPLIANCE](#)

[7.3 VACUUMING](#)

[7.4 DIAGNOSTICS – MAIN BODY](#)

[7.5 EMPTYING THE CLEAR BIN](#)

[7.6 CLEANING THE CLEAR BIN](#)

[7.7 DIAGNOSTICS – BATTERY](#)

[7.8 BATTERY SAFETY INSTRUCTIONS](#)

[8 DISPOSAL INFORMATION](#)

[8.1 GUARANTEE TERMS AND CONDITIONS](#)

[9 WHAT IS COVERED](#)

[10 WHAT IS NOT COVERED](#)

[10.1 SUMMARY OF COVER](#)

 
[10.2 ABOUT YOUR PRIVACY](#)

[11 Dyson V6 Trigger Vacuum Cleaner Operating Manual](#)

[12 Related Posts](#)



**Dyson V6 Trigger Vacuum Cleaner Operating Manual**

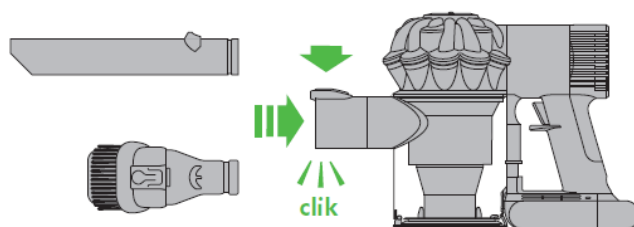

**IMPORTANT!**  
WASH FILTER

LAVAGE DU FILTRE  
FILTER WASCHEN  
FILTER WASSEN  
LAVADO DEL FILTRO  
LAVAGGIO DEL FILTRO  
ПРОМЫВАЙТЕ ФИЛЬТР  
OPERITE FILTER

**REGISTER**  
YOUR GUARANTEE TODAY

Enregistrez maintenant votre garantie  
Registrieren Sie am besten noch heute Ihre Garantie  
Registreer uw garantie vandaag  
Registre lo garanzija hoy mismo  
Registri oggi stesso la garanzia  
Вы можете зарегистрировать изделие  
Registrujte vašo garancijo še danes

**Charging.**  
En cours de chargement.  
Gerät wird geladen.  
Opladen.  
Caricando.  
Ricarica.  
Постоянно горит - идет процесс зарядки.  
Polnjenje.

**Fully charged.**  
Complètement chargé.  
Komplett geladen.  
Volladig opgeladen.  
Carica completa.  
Ricarica completa.  
Индикатор не горит - прибор полностью заряжен.  
Napolnjen.


3.5 hrs

## ASSEMBLY
 
## DYSON CUSTOMER CARE

### THANK YOU FOR CHOOSING TO BUY A DYSON APPLIANCE

After registering your free 2 year guarantee, your Dyson appliance will be covered for parts and labour for 2 years from the date of purchase, subject to the terms of the guarantee. If you have any questions about your Dyson appliance, call the Dyson Helpline with your serial number and details of where/when you bought the appliance. Most questions can be solved over the phone by one of our trained Dyson Helpline staff. Your serial number can be found on your rating plate which is on the main body of the appliance behind the clear bin.

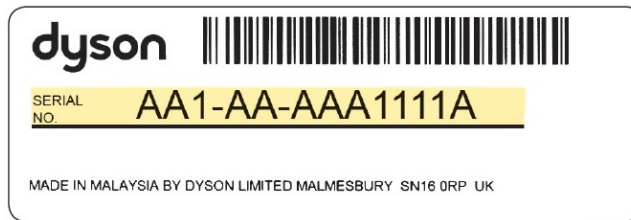

Note your serial number for future reference.

This illustration is for example purposes only.

## IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE APPLIANCE

When using an electrical appliance, basic precautions should always be followed, including the following:

### WARNING

These warnings apply to the appliance, and also where applicable, to all tools, accessories, chargers or mains adaptors.

### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

1. This Dyson appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the appliance.
3. Use only as described in this Dyson Operating Manual. Do not carry out any maintenance other than that shown in this manual, or advised by the Dyson Helpline.
4. Suitable for dry locations ONLY. Do not use outdoors or on wet surfaces.
5. Do not handle any part of the plug or appliance with wet hands.
6. Do not use with a damaged cable or plug. If the supply cable is damaged it must be replaced by Dyson, its service agent or similarly qualified person in order to avoid a hazard.
7. If the appliance is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the Dyson Helpline.
8. Contact the Dyson Helpline when service or repair is required. Do not disassemble the appliance as incorrect reassembly may result in an electric shock or fire.
9. Do not stretch the cable or place the cable under strain. Keep the cable away from heated surfaces. Do not close a door on the cable, or pull the cable around sharp edges or corners. Arrange the cable away from traffic areas and where it will not be stepped on or tripped over. Do not run over the cable.
10. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable. The use of an extension cable is not recommended.
11. Do not use to pick up water.
12. Do not use to pick up flammable or combustible liquids, such as petrol, or use in areas where they or their vapours may be present.
13. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
14. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts, such as the brush bar. Do not point the hose, wand or tools at your eyes or ears or put them in your mouth.
15. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
16. Use only Dyson recommended accessories and replacement parts.
17. Do not use without the clear bin and filter in place.
18. Unplug when not in use for extended periods and before maintenance or servicing.
19. Use extra care when cleaning on stairs.
20. Do not install, charge or use this appliance outdoors, in a bathroom or within 3 metres (10 feet) of a pool. Do not use on wet surfaces and do not expose to moisture, rain or snow.
21. Use only Dyson chargers for charging this Dyson appliance. Use only Dyson batteries: other types of batteries may burst, causing injury to persons and damage.

22. Do not incinerate this appliance even if it is severely damaged. The battery may explode in a fire.
23. Always turn 'OFF' the appliance before connecting or disconnecting the motorised brush bar.

**READ AND SAVE THESE INSTRUCTIONS**

THIS DYSON APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY



Do not use near naked flames.



Do not store near heat sources.



 
Do not pick up water or liquids.




Do not pick up burning objects.




Do not put hands near the brush bar when the appliance is in use.

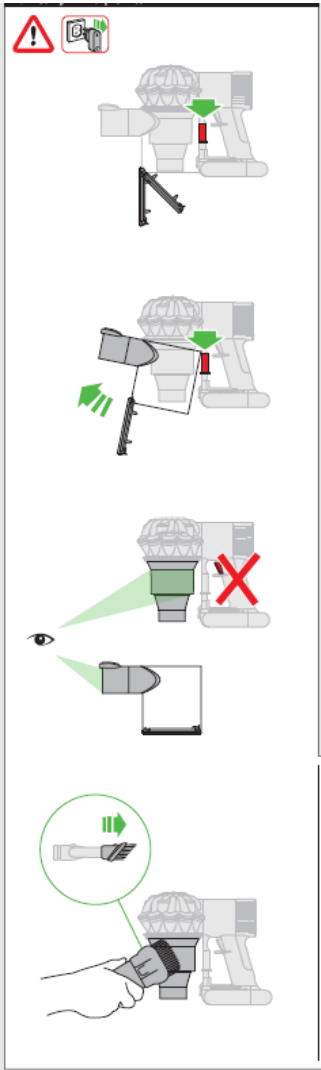


Looking for blockages.

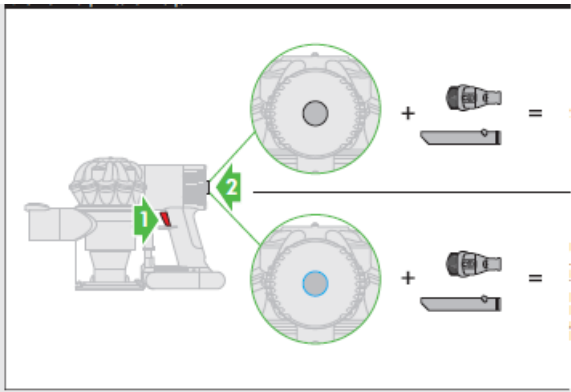 


Power mode and run-time.

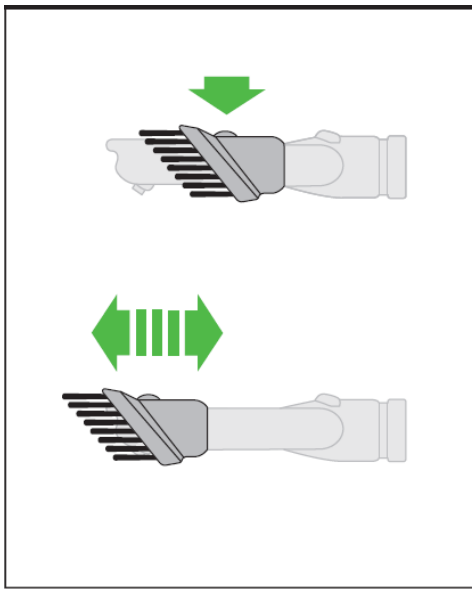 


Combination tool.

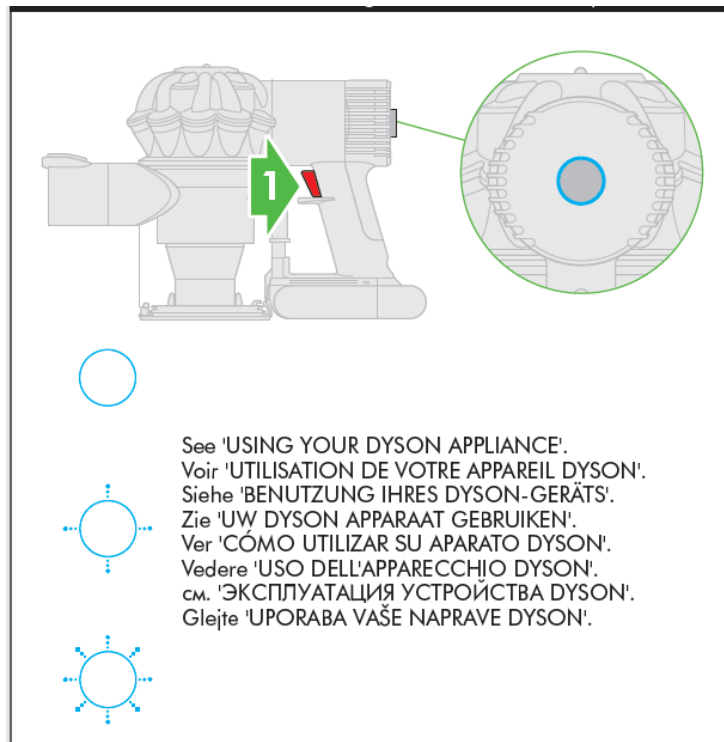 



Diagnostics – main body.

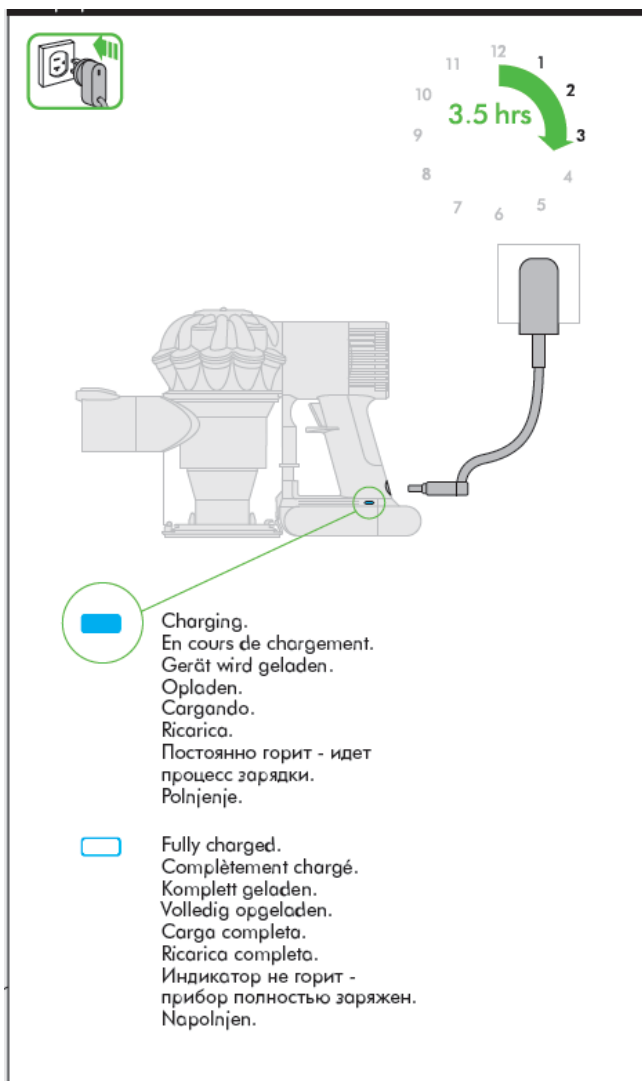 

Charging.

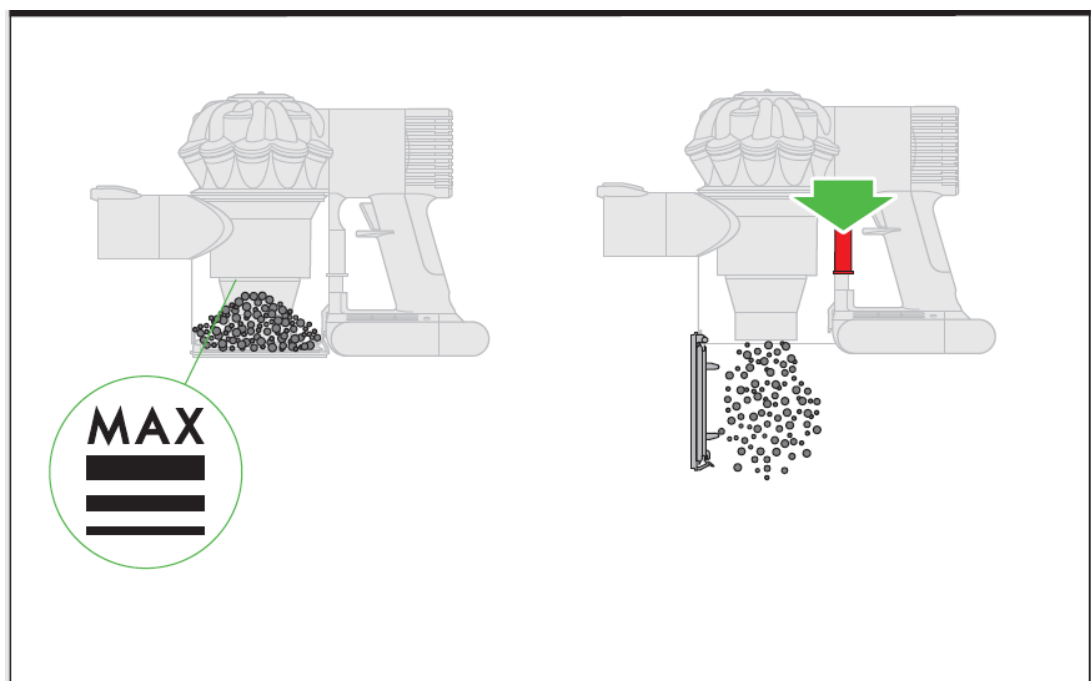 


Emptying. Vidage.

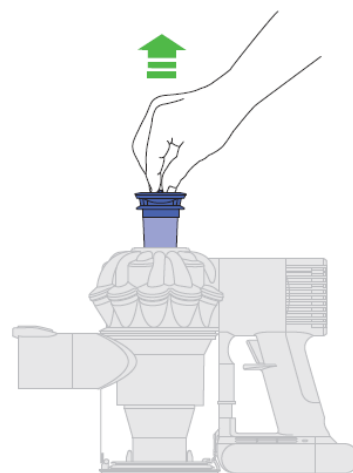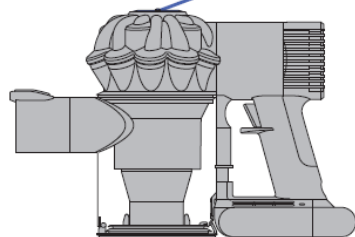  

## IMPORTANT WASH FILTER

 Wash filter with cold water at least every month.

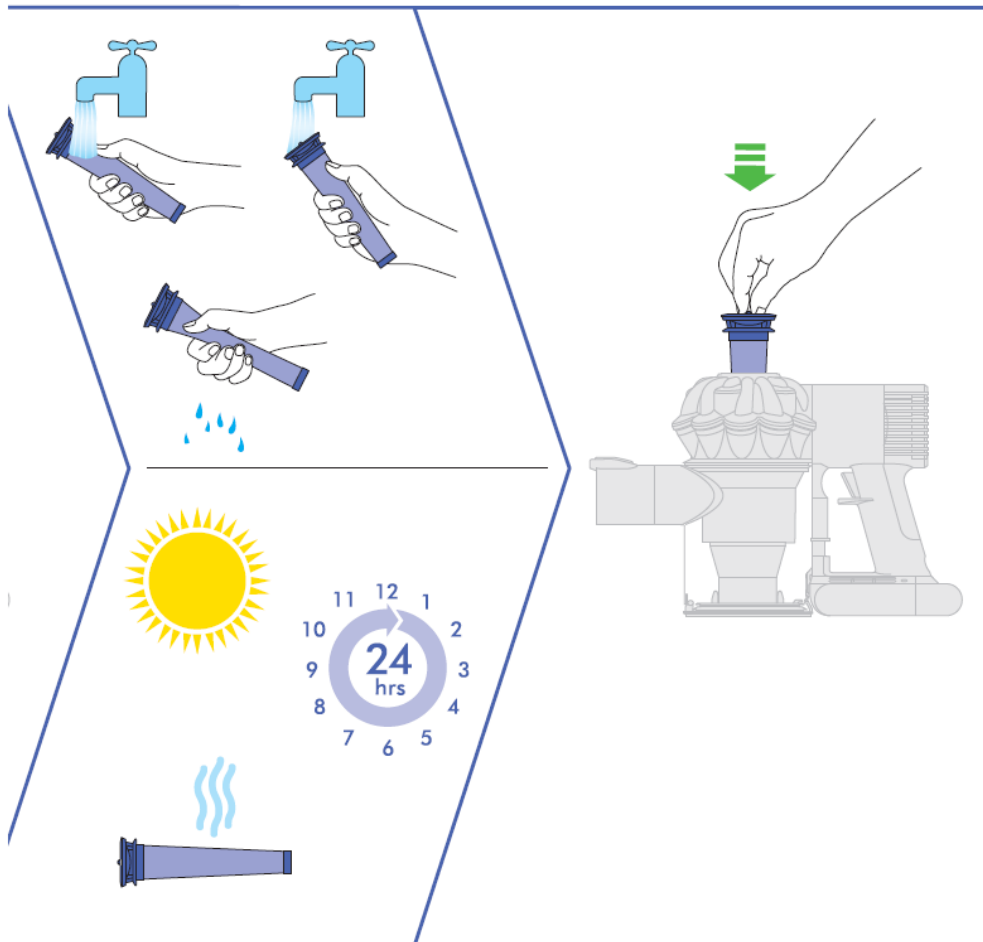

## USING YOUR DYSON APPLIANCE

PLEASE READ THE IMPORTANT SAFETY INSTRUCTIONS IN THIS DYSON OPERATING MANUAL BEFORE PROCEEDING

### OPERATION

- Do not use outdoors or on wet surfaces or to vacuum water or other liquids
- Ensure the appliance remains upright in use and in storage. Dirt and debris may while driving
- To operate the Max mode, hold the trigger down and press the 'Max' button
- The 'Max' button will light up if the trigger down and press the 'Max' button when you use min mode and do not disengage the appliance will operate in Max mode when it

### CARPETS OR HARD FLOORS

- Before vacuuming your flooring, rugs and carpets, check the manufacturer's recommended cleaning instructions.
- The brush bar on the appliance can damage certain carpet types and floors.

### LOOKING AFTER YOUR DYSON APPLIANCE

- Do not carry out any maintenance or repair work other than that shown in this manual by Orion. If you do not this could involve

### VACUUMING

- When vacuuming, certain carpets may generate small static charges in the clear
- To minimise any effect from this, do not put your hand or insert any object into or with the clear
- Use extra care when cleaning on stairs wait for it to dry

### DIAGNOSTICS – MAIN BODY



Solid blue: Max 'ON'.



Light off: Powerful suction.



Flashing blue: Low battery warning.



Fast flashing blue: No power, temporary fault (e.g. check filter or for blockages).

When in use, trigger pressed:

### EMPTYING THE CLEAR BIN

- Empty as soon as the dirt reaches the level of the MAX mark – do not overfill.
- Ensure the appliance is disconnected from the charger before emptying the clear bin. Be careful not to pull the 'ON' trigger.
- To release the dirt, push the red button by the clear bin: Press once to open the bin base. Press a second time to release the clear bin from the main body of the appliance.
- To minimise dust/allergen contact when emptying, encase the clear bin tightly in a plastic bag and empty.
- Remove the clear bin carefully from the bag.
- Seal the bag tightly, dispose as normal.



- Close the clear bin base so it clicks into place and is secure.

## **CLEANING THE CLEAR BIN**

- Ensure the appliance is disconnected from the charger before removing the clear bin. Be careful not to pull the 'ON' trigger.
- Push the red button by the clear bin: Press once to open the bin base. Press a second time to release the clear bin from the main body of the appliance.
- Remove the clear bin carefully.
- Clean the clear bin with a damp cloth only.
- Do not use detergents, polishes or air fresheners to clean the clear bin.
- Do not put the clear bin in a dishwasher.
- Clean the cyclone shroud with the brush on the combination tool to remove lint and dust.
- Ensure the clear bin is completely dry before replacing.
- To replace the clear bin, push the clear bin up and in to the main body of the appliance. It will click into place.
- Close the clear bin base so it clicks into place and is secure.

## **WASHING YOUR FILTER**

- Ensure the appliance is disconnected from the charger before removing the filter. Be careful not to pull the 'ON' trigger.
- Your appliance has one washable filter, located as shown.
- To remove the filter, lift it out of the top of the appliance.
- Check and wash the filter regularly according to instructions to maintain performance.
- The filter may require more frequent washing if vacuuming fine dust or if used mainly in 'Powerful suction' mode.
- Wash the filter with cold water only.
- Run water over the outside of the filter until the water runs clear.
- Squeeze and twist with both hands to make sure the excess water is removed.
- Lay the filter on its side to dry. Leave to dry completely for a minimum of 24 hours.
- Do not put the filter in a dishwasher, washing machine, tumble dryer, oven, microwave or near a naked flame.
- To refit, place the dry filter back into the top of the appliance. Make sure it is seated properly.

## **LOOKING FOR BLOCKAGES**

- Ensure the appliance is disconnected from the charger before looking for blockages. Be careful not to pull the 'ON' trigger.
- Do not operate while checking for blockages. Doing so could result in personal injury.
- Beware of sharp objects when checking for blockages.
- If you cannot clear an obstruction you may need to remove the brush bar. Use a coin to unlock the fastener marked with a padlock. Remove the obstruction. Replace the brush bar and secure it by tightening the fastener. Ensure it is fixed firmly before operating the appliance.
- Refit all parts securely before using.
- Clearing blockages is not covered by your guarantee.

## **BLOCKAGES – AUTOMATIC CUT-OUT**

 
- This appliance is fitted with an automatic cut-out.
- If any part becomes blocked the appliance may automatically cut out.
- This will happen after the motor pulses a number of times (ie switches on and off in quick succession).
- If this happens, follow the instructions below in 'Looking for blockages'.
- NOTE: Large items may block the tools or wand inlet. If this happens, do not operate the wand release catch. Switch 'OFF' and unplug. Failure to do so could result in personal injury.

## **CHARGING AND STORING**


- This appliance will switch 'OFF' if the battery temperature is below 3°C (37.4°F). This is designed to protect the motor and battery. Do not charge the appliance and then move it to an area with a temperature below 3°C (37.4°F) for storage purposes.
- To help prolong battery life, avoid recharging immediately after a full discharge.
- Allow to cool for a few minutes.

- Avoid using the appliance with the battery flush to a surface. This will help it run cooler and prolong battery run time and life.

## DIAGNOSTICS – BATTERY

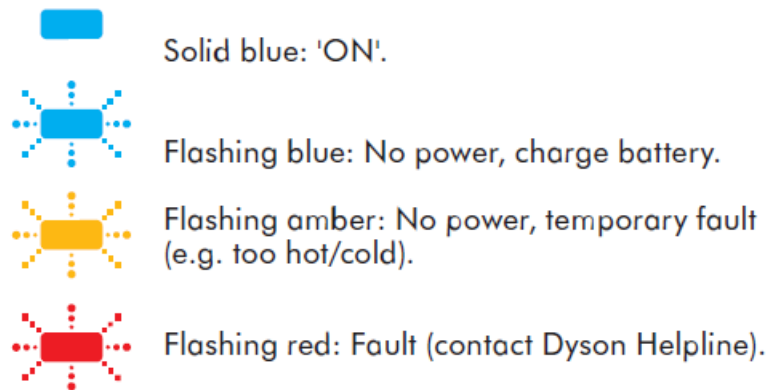

### When in use, trigger pressed:

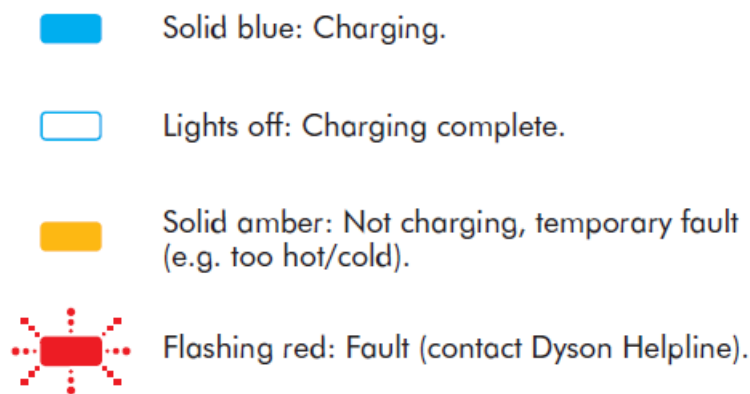 

### When charging battery:

## BATTERY SAFETY INSTRUCTIONS

- If the battery needs replacing please contact the Dyson Helpline.
- Use only Dyson chargers for charging this Dyson appliance.
- The battery is a sealed unit and under normal circumstances poses no safety concerns.

**In the unlikely event that liquid leaks from the battery do not touch the liquid and observe the following precautions:**

- Skin contact – can cause irritation. Wash with soap and water.
- Inhalation – can cause respiratory irritation. Expose to fresh air and seek medical advice.
- Eye contact – can cause irritation. Immediately flush eyes thoroughly with water for at least 15 minutes. Seek medical attention.
- Disposal – wear gloves to handle the battery and dispose of immediately, following local ordinances or regulations.

## CAUTION

The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, short contacts, heat above 60°C (140°F), or incinerate. Keep away from children. Do not disassemble and do not dispose of in fire.

## DISPOSAL INFORMATION

- Dyson products are made from high grade recyclable materials. Recycle where possible.
- The battery should be removed from the product before disposal.
- Dispose of or recycle the battery in accordance with local ordinances or regulations.
- This marking indicates that this product should not be disposed with other household wastes throughout the EU.
- To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

- To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

## **GUARANTEE TERMS AND CONDITIONS**

### **THANK YOU FOR CHOOSING TO BUY A DYSON APPLIANCE**

After registering your free 2 year guarantee, your Dyson appliance will be covered for parts and labour for 2 years from the date of purchase, subject to the terms of the guarantee. If you have any questions about your Dyson appliance, call the Dyson Helpline with your serial number and details of where/ when you bought the appliance. Most questions can be solved over the phone by one of our trained Dyson Helpline staff. Alternatively, visit [www.dyson.com](http://www.dyson.com) for online help, general tips and useful information about Dyson. Your serial number can be found on your rating plate which is on the main body of the appliance behind the clear bin. If your Dyson appliance needs a service, call the Dyson Helpline so we can discuss the available options. If your Dyson appliance is under guarantee, and the repair is covered, it will be repaired at no cost.

### **PLEASE REGISTER AS A DYSON APPLIANCE OWNER**

To help us ensure you receive prompt and efficient service, please register as a Dyson appliance owner. **There are two ways to do this:**

- Online at [www.dyson.com](http://www.dyson.com)
- Telephone the Dyson Helpline

This will confirm ownership of your Dyson appliance in the event of an insurance loss, and enable us to contact you if necessary.

### **LIMITED 2 YEAR GUARANTEE**

#### **TERMS AND CONDITIONS OF THE DYSON 2 YEAR LIMITED GUARANTEE**

### **WHAT IS COVERED**

- The repair or replacement of your Dyson appliance (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within 2 years of purchase or delivery (if any part is no longer available or out of manufacture Dyson will replace it with a functional replacement part).
- Where this machine is sold outside of the EU, this warranty will only be valid if the appliance is used in the country in which it was sold
- Where this machine is sold within the EU, this warranty will only be valid (i) if the appliance is used in the country in which it was sold or (ii) if the appliance is used in Austria, Belgium, France, Germany, Ireland, Italy, Netherlands, Spain or the United Kingdom and the same model as this appliance is sold at the same voltage rating in the relevant country.

### **WHAT IS NOT COVERED**

- Dyson does not guarantee the repair or replacement of a product where a defect is the result of:
- Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the appliance which is not in accordance with the Dyson Operating Manual.
- Use of the appliance for anything other than normal domestic household purposes.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Blockages – please refer to the Dyson Operating Manual for details of how to look for and clear blockages
- Normal wear and tear (e.g. fuse, brush bar etc.).
- Use of this appliance on rubble, ash, plaster.
- Reduction in battery discharge time due to battery age or use (where applicable).
- If you are in any doubt as to what is covered by your guarantee, please contact Dyson

### **SUMMARY OF COVER**

- The guarantee becomes effective at the date of purchase (or the date of delivery if this is later).

- You must provide proof of (both the original and any subsequent) delivery/ purchase before any work can be carried out on your Dyson appliance. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson appliance under guarantee will not extend the period of guarantee.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer.

#### **ABOUT YOUR PRIVACY**

- Your information will be held by Dyson and its agents for promotional, marketing and servicing purposes.
- If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please contact the Dyson Helpline.
- For more information on how we protect your privacy, please see our privacy policy on the Dyson website

**Wash filter with cold water at least every month.**

TO REGISTER YOUR FREE 2 YEAR GUARANTEE PLEASE CONTACT YOUR LOCAL DYSON EXPERT ON THE NUMBER LISTED BELOW. ON-LINE REGISTRATION IS AVAILABLE IN MOST AREAS.

#### **Dyson Customer Care**

If you have a question about your Dyson appliance, call the Dyson Customer Care Helpline with your serial number and details of where and when you bought the appliance, or contact us via the Dyson website.

#### **UK**

Dyson Customer Care

[askdyson@dyson.co.uk](mailto:askdyson@dyson.co.uk)

0800 298 0298

Dyson Ltd, Tetbury Hill, Malmesbury, Wiltshire, SN16 0RP

[www.dyson.com](http://www.dyson.com)

Downloaded from [www.Manualslib.com](http://www.Manualslib.com) manuals search engine

#### **REGISTER ONLINE OR BY PHONE**

Online of telefonisch registreren

8-800-100-100-2,

[info.russia@dyson.com](mailto:info.russia@dyson.com)

[www.dyson.com](http://www.dyson.com)

#### **Dyson V6 Trigger Vacuum Cleaner Operating Manual**

Download PDF: [Dyson V6 Trigger Vacuum Cleaner Operating Manual](#)

[Manuals+](#),

- [home](#)
- [privacy](#)