

E-build B7001 Laebuild Walkie Talkie Instructions

Home » E-build » E-build B7001 Laebuild Walkie Talkie Instructions



Contents

- 1 E-build B7001 Laebuild Walkie Talkie
- **2 BATTERY INSTALLATION INSTRUCTIONS**
- **3 HOW TO OPERATE YOUR WALKIE TALKIE**
- **4 BATTERY SAFETY INFORMATION**
- 5 Care
- 6 Documents / Resources
- **7 Related Posts**



E-build B7001 Laebuild Walkie Talkie



BATTERY INSTALLATION INSTRUCTIONS


Each Walkie Talkie requires 3 x "AAA" (R03] Batteries (Not Included]

ADULT INSTALLATION REQUIRED

If performance diminishes after purchase, replace with fresh batteries.

- 1. Locate battery compartment.
- 2. Using a Phillips Head screwdriver, remove the screw and the battery door.
- 3. Install new batteries.
- 4. Replace the battery cover and the screw

HOW TO OPERATE YOUR WALKIE TALKIE

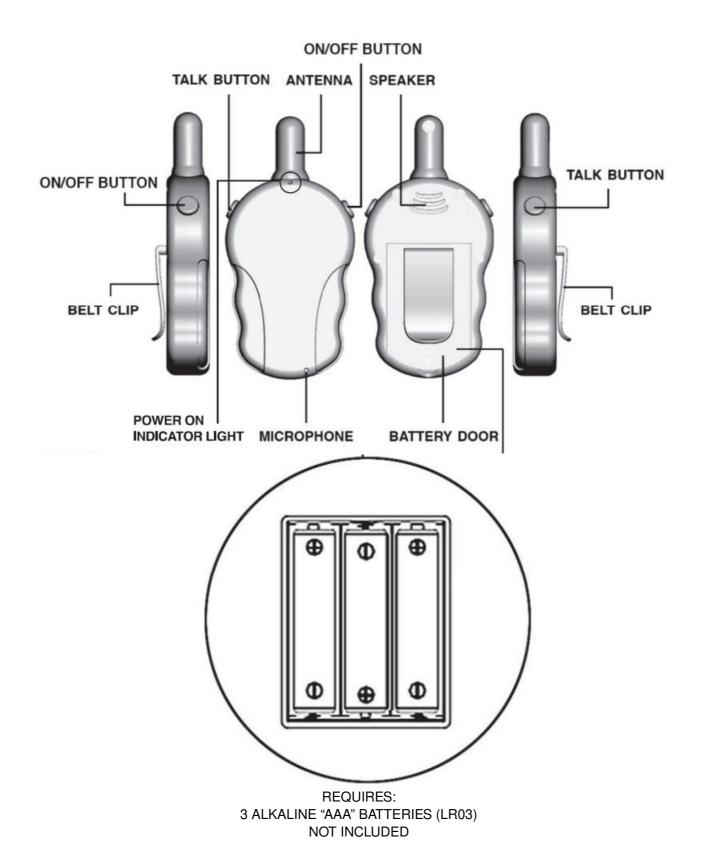

- 1. Open the battery cover and snap-in 3 x AAA batteries (not included]
- 2. Turn the "ON/OFF" switch to "ON" position. Your transceiver is now ready to operate.
- 3. Press the "TALK BUTTON" switch for transmitting.
- 4. Release the "TALK BUTTON" switch for receiving.
- 5. When transmitting, speak clearly in a normal voice, holding the set about 3 inches from your mouth.
- 6. Best transmission and reception are obtained when the antenna is held in a vertical position.

BATTERY SAFETY INFORMATION

CONSUMER INFORMATION: SAFETY AND DISPOSAL

Do not dispose of Waste Electrical Electronic Equipment (WEEE), including batteries, in unsorted municipal waste; collect separately. Dispose of at WEEE collection sites per local regulation. WEEE contains chemicals that are hazardous to the environment and human health. The end-user's participation is critical to the success of the WEEE collection.

- · Do not burn batteries.
- Dispose of batteries in a safe and appropriate manner.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Different types of batteries or new and used/old batteries are not to be mixed
- Rechargeable batteries are to be removed from the toy before being changed
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Batteries are to be inserted with the correct polarity. To prolong the life of this product, remove batteries when toy is in storage.

Note: All controls, adjustments and switches that s instructed in the manual or follow-up instruction provided by the manufacturer that may be operated or adjusted without resulting in a violation of FCC rules

WARNING: Any adjustment that could result in a violation of FCC rules and it s recommended that could be performed only by or under the immediate supervision and responsibility of a person certified as technically qualified to perform

transmitter maintenance and repair duties in this radio service by an

CAUTION: Changes or modifications i.e. replacing any transmitter component (crystal, semiconductor, etc.) not expressly approved by the party responsible for compliance could void the user s authority to operate the product.

- Please keep this instruction sheet for future reference, as it contains important information,
- · Adult assembly is required for batlery installation.
- Tool required for battery installation: Phillips screwdriver (not included I.
- The transmission carrier frequency is 462 MHz.
- Walkie talkie range is up to 2,000 feet
- Recommended use distance: minimum 6 feet.
- Field strength: 9.45dBm at 3m.
- If there is no play activity within a 15 minute time frame, the walkie-talkie has been programmed to automatically go into sleep mode. To reactivate simply press the talk button.

ICES-003

This Closs B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: m this device may not cause harmful interference and 121 this device must accept any interference received, including interference that may cause undesired operation.

This Category II radiocommunication device complies with Industry Canada Standard RSS-310.

IMPORTANT! Always remember that you are using public frequencies when using these walkie talkies. You may find that this product will occasionally pick up transmissions from other transmitting devices using the same frequency.

- Wipe the loy with a dropcloth dampened with o mild soap and water solution.
- Do not immerse the toy.
- This product has no consumer serviceable parts. Do not take this product apart.

Documents / Resources



E-build B7001 Laebuild Walkie Talkie [pdf] Instructions B7001, 2AZQXB7001, B7001 Laebuild Walkie Talkie, Laebuild Walkie Talkie

Manuals+,