

e-smarteck M2D Plug Smart Wi-Fi Doorbell Chime Instruction **Manual**

Home » e-smarteck » e-smarteck M2D Plug Smart Wi-Fi Doorbell Chime Instruction Manual



Contents

- 1 e-smarteck M2D Plug Smart Wi-Fi Doorbell **Chime**
- **2 Instruction Manual**
- 3 Safety Instructions
 - 3.1 What's Included in Your Kit
- 4 Specifications:
- **5 Overview**
- **6 Installing Plug-in Chimein Chime**
- 7 Documents / Resources
- **8 Related Posts**



e-smarteck M2D Plug Smart Wi-Fi Doorbell Chime



Instruction Manual

Thank you for choosing our Plug-in Chime. Please read this instruction carefully before assembling & using the product. Keep your owner's manual for future reference.

Safety Instructions

- 1. Please install the Chime according to this manual to avoid any malfunctions or damage.
- 2. The Chime is designed for indoor use only.
- 3. The Chime is not user-serviceable, there is a danger of electric shock if opened.
- 4. Do not expose to rain/dripping or immerse in water.
- 5. Do not mount it close to a fireplace or expose it to high temperatures.
- 6. Never use any cleaning chemicals or wet cloth to clean the unit. Only use a dry, clean and soft cloth/microfiber cloth.


What's Included in Your Kit

- 1 x Plug-in Chime
- 1xin 1xinsst instruction manual

Specifications:


Voltage	AC90~260V	Frequency	433MHz
Output Power	0.15W	Standby Power	≦10mW
Sensitivity	-112dbm	Volume	Up to 100db

Overview

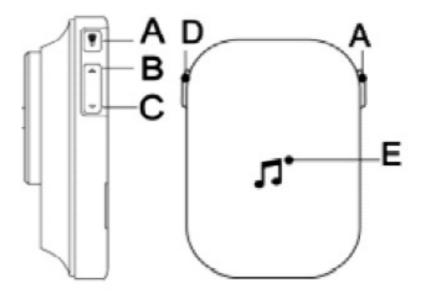

- Volume control
- Forward Button
- Backward Button
- Music Selection
- · LED indicator

Note: Diagrams are only for information, take practicality as standard.

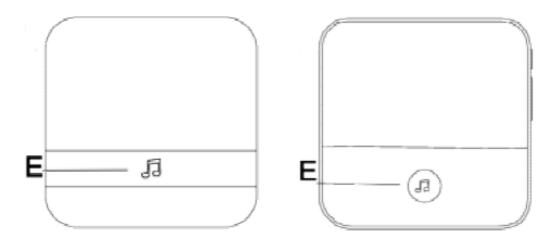

Installing Plug-in Chimein Chime

Plug into any regular household regular household socket. Please tear metal strip protective film off before using).

Melody Selection

This Chime provides more than 50 pieces of music (it's up to the Plug-in Chime you bought) When it is plugged in, press the button to choose desired music forwards to play previous music and backward to play next music until you hear a chime you like. (If you want the Chime to remember selected music, please refer to below point 5~6 if any expanded units exist).

• Sound Volume Selection

Press the volume control repeatedly until the desired volume is achieved – 5 levels are available as a circle, lowest level is mute.

· Pairing with your

Wi-Fi video doorbell Press and hold the Volume button for 4 seconds until the LED indicator lights up, Wi-Fi enters into pairing status. Then press the button on the Wi-Fi video doorbell within 5 seconds, pairing is completed once the LED indicator on the Chime is flashing. When the above procedure is finished, pairing is quite automatic.

• Two or above Wi-Fi video doorbells pairing with the Same Music or Same Chime Unit

Choose one favorite music by pressing the music select button, then long-press the Volume button for 4 seconds to enter pairing status. Press the Wi-Fi video doorbell within 5 seconds to get a connection, once the LED indicator on Chime is flashing, the pairing is completed. Repeat this operation to get other required Wi-Fi video doorbell connected with the same music or same Chime unit. When the above procedure is finished, quits automatically.

· Two or above Wi-Fi video doorbells Pairing with different Music

Choose one favorite melody first, long press 4 seconds on the Volume button to enter pairing status, then press the first Wi-Fi video doorbell to pair. Press the music select button to change melody and pair with different Wi-Fi video doorbells one by one. When the above procedure is finished, pairing is quite automatic.

• Two or above Chimes Unit Pairing with Same Wi-Fi video doorbell

The long press Volume button on the first Chime Unit for 4 seconds to enter pairing status, press the Wi-Fi video doorbell within 5 seconds to get the connection. Repeat the above operation to pair the Wi-Fi video doorbell with required Chime Unit one by one.

All Pairing Memory Clearance

Press and hold Volume button until plug into household socket for 5~10 seconds to erase all pairing memory, when Plug-in Chime LED indicator long light up that means setting successfully, thus program returns to default.

Documents / Resources



<u>e-smarteck M2D Plug Smart Wi-Fi Doorbell Chime</u> [pdf] Instruction Manual M2D Plug Smart Wi-Fi Doorbell Chime, M2D, Plug Smart Wi-Fi Doorbell Chime

Manuals+.