

EAGLE E304CM Count Down Timer Instruction Manual

Home » EAGLE » EAGLE E304CM Count Down Timer Instruction Manual







E304CM Count Down Timer

Contents

- 1 E304CM Count Down Timer
- **2 SAFETY**
- **3 USAGE INSTRUCTIONS**
- **4 MAINTENANCE AND**
- **CLEANING**
- **5 SPECIFICATIONS**
- 6 Documents / Resources
 - **6.1 References**


This manual forms part of the product and should be kept with it at all times, If the product is sold or moved on then the manual should also be included.

SAFETY

Please read these instructions carefully before use.

This product must be checked before use for any signs of damage. If any is detected then do not use and contact your supplier.

- · Not Suitable for children under the age of 16 years
- · Children shall not play with the appliance
- · For indoor use only
- Do not use in bathrooms, wet rooms or other damp locations
- · Do not operate the timer with wet hands to reduce the risk of electric shock
- Do not use this appliance in locations where paint, petrol or other flammable liquids are used or stored
- Please ensure the unit is switched off and unplugged when not in use
- Do not use the appliance for other than its intended use
- Do not use this product in close proximity to gas appliances
- Periodically check this product for any signs of damage. If any damage is detected stop using it immediately and consult your supplier
- · Only install in well ventilated areas
- Do not leave this product unattended when in use
- There are no user serviceable parts in this product
- Do not move or knock this product while in use
- Do Not overload. Maximum load is 13A (3000W) Resistive or 2 Amp Inductive
- This product must only be used in an upright position
- · Do not cover
- Do not use in areas with high concentrations of dust or fibre particles
- · Care should be taken when fitting this product
- Must NOT be used with heating products such as convertor or fan heaters
- · Do not use with extension leads and reels
- Timer temperature range of -10 to 50 deg C

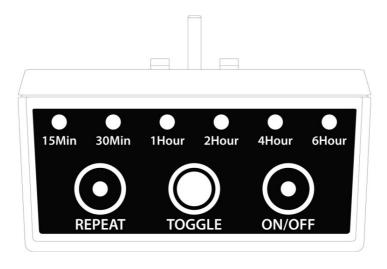

- Insert the unit into a UK power socket and switch on. The green indicator lights will illuminate and then go out.

 There is no power output at this stage
- Pressing the On/off button will turn the unit to always on. Press again and the unit will turn to always off
- Press the toggle button to choose from intervals of 15 minutes, 30 minutes, 1 hour, 2 hours, 4 hours, or 6 hours. The unit will remain active for the selected duration
- Pressing the repeat button while a program is in progress will cause the unit to replay the program at the same time on the following day
- To stop a program while it is running simply press the on/off button

MAINTENANCE AND CLEANING

- There are no user serviceable parts in this product. Any maintainance must be carried out by a qualified and approved supplier
- The item must be switched off and disconnected from the mains before cleaning
- · Clean only with a dry cloth.
- Dust and debris can be removed using a soft bristle brush

SPECIFICATIONS



St. Helens, Merseyside WA9 3EX website: www.electrovision.co.uk



Documents / Resources



EAGLE E304CM Count Down Timer [pdf] Instruction Manual E304CM Count Down Timer, E304CM, Count Down Timer, Down Timer, Timer

References

User Manual

Manuals+, Privacy Policy