EAGLE P649BD Public Address Amplifier with Bluetooth and Remote Control





EAGLE P649BD Public Address Amplifier with Bluetooth and Remote Control Instruction Manual

Home » EAGLE » EAGLE P649BD Public Address Amplifier with Bluetooth and Remote Control Instruction

Manual

Contents

- 1 EAGLE P649BD Public Address Amplifier with Bluetooth and Remote Control
- **2 SAFETY AND WARNINGS**
- **3 Product Overview**
- **4 SPEAKER CONNECTIONS**
- **5 TECHNICAL SPECIFICATION**
- 6 Documents / Resources
 - **6.1 References**



EAGLE P649BD Public Address Amplifier with Bluetooth and Remote Control



This manual forms part of the product and should be kept with the unit at all times. Should the unit be sold or

moved on then the manual must be included.


SAFETY AND WARNINGS

Please read these instructions carefully before use. This product and its mains lead must be checked before use for any signs of damage. If any is detected, then do not use and contact your supplier.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- · Children shall not play with the appliance.
- · For indoor use only.
- Do not use in bathrooms, wet rooms or other damp locations.
- Do not place the mains lead beneath a carpet or rug.
- Do not use this appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Please ensure the appliance is switched off and unplugged when not in use.
- Do not use the appliance for other than its intended use.
- Do not insert any object into the appliance through the grilles. This may damage the product or result in overheating or electric shock.
- Periodically check this product and its mains lead for any signs of damage. If any damage is detected stop
 using it immediately and consult your supplier.
- Only use this product on a flat, stable surface.
- Do not leave this product unattended when in use.
- There are no user serviceable parts in this product
- Do not move or knock this product while in use.
- Do not obstruct the air intakes or exhaust vents
- This product must only be used in an upright position.
- Do Not Cover
- Do not use in areas with high concentrations of dust or fibre particles.

Product Overview

FRONT PANEL OVERVIEW

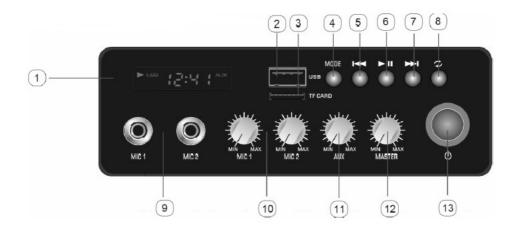


- 1. LED Display
- 2. USB Interface: Mobile disk memory must be less than 64GB
- 3. TF card reader: TF Card memory must be less than 64GB
- 4. Mode Button: Selects input from Bluetooth, USB and TF Card
- 5. Back Button
- 6. Pause Button
- 7. Forward Button
- 8. Repeat Button
- 9. Microphone Input 1 & 2: 6.35mm Unbalanced
- 10. Microphone 1 & 2 Volume Control
- 11. Auxiliary input level control
- 12. Overall Volume Control
- 13. On/Off Button

DIGITAL MUSIC PLAYER

This is an All-In-One Digital audio source device that accommodates three different kinds of audio sources into one single device. It includes a lossless MP3 player, Bluetooth & EXT. AUX. The MP3 player can play audio files, such as MP3, WMA, WAV, FLAC and audio formats. On the front side there is a small screen, a USB slot, an SD memory card slot, an 1/8" EXT. audio jack and 5 control buttons provided.

Button	Function
MODE	Switch the operation mode between USB, TF card, Bluetooth; Press and hold a few seconds to turn off the player
~	Previous track when in USB, TF card, Bluetooth Mode; Press and hold for a few seconds to reduce player volume
	Play and pause the track when in USB, TF card, or Bluetooth Mode
>>	Next track when in USB, TF card, Bluetooth Mode; Press and hold for a few seconds to increase player volume
	Switch between Repeat One, Repeat Folder, Repeat All

BACK PANEL OVERVIEW

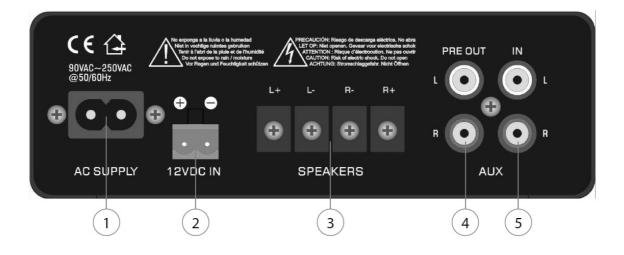


- 2. DC Power input DC12V
- 3. Speaker Output
- 4. Phono Line Level Output
- 5. Phone Line Level Input

Notes

- The unit should only be connected to one power source at a time.
- Make sure the unit is switched off before selection of 12Vdc of 230Vac
- Do not use the USB socket to charge other devices.


SPEAKER CONNECTIONS

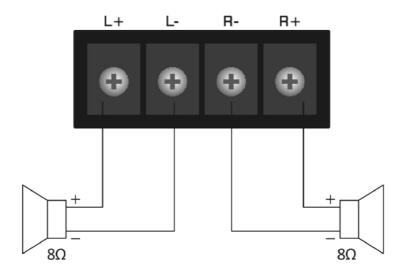

- The device must be switched off before any connections are made.
- Only connect speakers that are 8 Ohms or greater.

REMOTE CONTROL

CR2025 battery

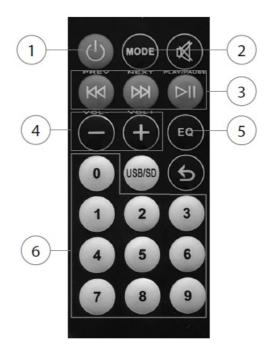

- 1. On/Off
- 2. Mode: Select between: Bluetooth/USB/TF Card
- 3. Media Controller
- 4. Volume Up and Down
- 5. EQ Control
- 6. Track Select

CLEANING AND MAINTENCE

There are no user servicable parts in this product. Before undertaking any cleaning make sure the unit is switched off and disconnected from its power supply. Clean with a slightly damp cloth. Dust and grime can be removed from grills and vents using a soft bristle paint brush or similar.

TECHNICAL SPECIFICATION

Rated Output Power	1 x 30W 8
Ohms	
Frequency Response	20Hz-
20kHz	
Signal to Noise	
Ratio	>70db
• THD+N	
< 0.5%	
• Mic 1	Balanced 6.35mm Mic 2k
Ohms	
• Mic 2	Balanced 6.35mm Mic 2k
Ohms	
• Line 2	Balanced Line RCA Phone
Stereo	
Media Player	USB 2.0 Type A, Full-speed controller

SD Card	
SD Card slot	
Bluetooth Version	4 10m
Range	
Music Formats	
File System	Fat16
or FAT32	
Outputs	Low Impedance 8
Ohm	
Protection	Short Circuit, Over heating, Over Load
Power	230Vac@50Hz
or 12Vdc	
• Dims	
200x180x65mm	
Weight	
1.08kg	

Electrovision Ltd., Lancots Lane, Sutton Oak, St. Helens, Merseyside WA9 3EX.

website: www.electrovision.co.uk

Documents / Resources



EAGLE P649BD Public Address Amplifier with Bluetooth and Remote Control [pdf] Instruct ion Manual

P649BD Public Address Amplifier with Bluetooth and Remote Control, P649BD, Public Address Amplifier with Bluetooth and Remote Control, Address Amplifier with Bluetooth and Remote Control, Amplifier with Bluetooth and Remote Control, Bluetooth and Remote Control, Public Address Amplifier, Address Amplifier, Amplifier

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.