



EarFun UBOOM Portable Bluetooth Speaker User Manual

[Home](#) » [EarFun](#) » EarFun UBOOM Portable Bluetooth Speaker User Manual 

Contents

- 1 EarFun UBOOM Portable Bluetooth Speaker User Manual
- 2 1. What's in the Box
- 3 2. Buttons & Indicators
- 4 3. Connections
- 5 4. Bluetooth Pairing
- 6 5. Battery Indicator
- 7 6. Speaker LED Indicator
- 8 7. True Wireless Stereo Connection with Two UBOOMs
- 9 8. Functions
- 10 9. Reset and Reconnect
- 11 Specifications
- 12 Customer Service
- 13 Download
- 14 Related Posts

EarFun UBOOM Portable Bluetooth Speaker User Manual



1. What's in the Box



EarFun UBOOM




User Manual




Type-C USB Cable

2. Buttons & Indicators

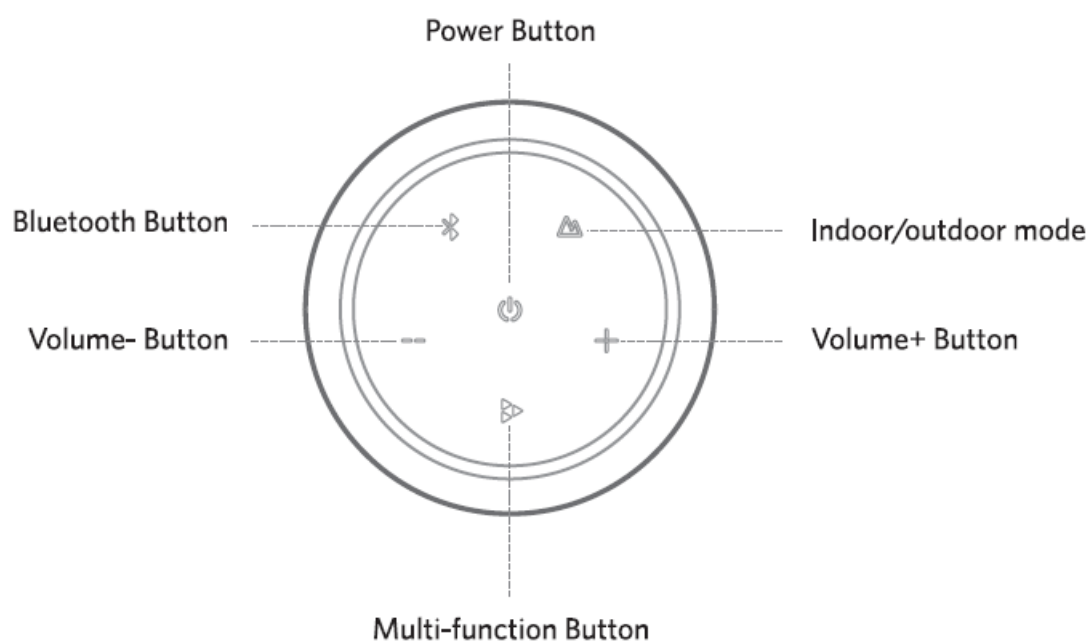


3. Connections

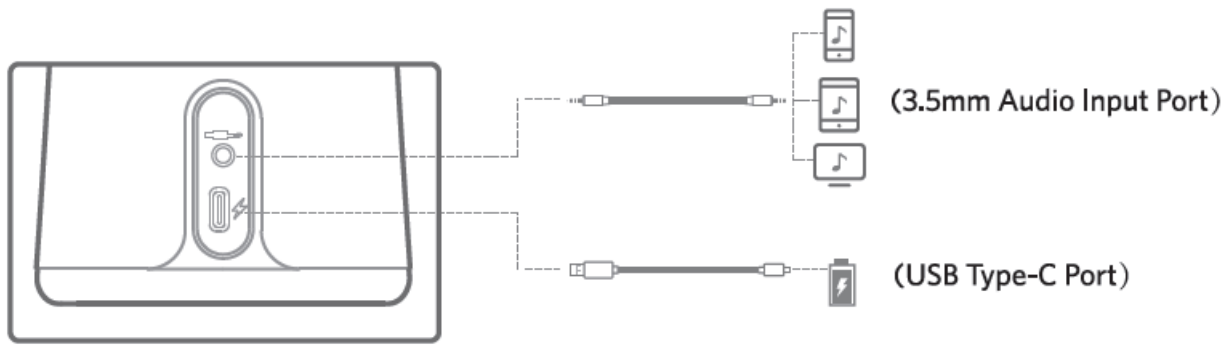

Notes:

Plugging in an audio cable will automatically switch to AUX mode. When using AUX mode, control audio playback via the connected device.

 4. Bluetooth Pairing

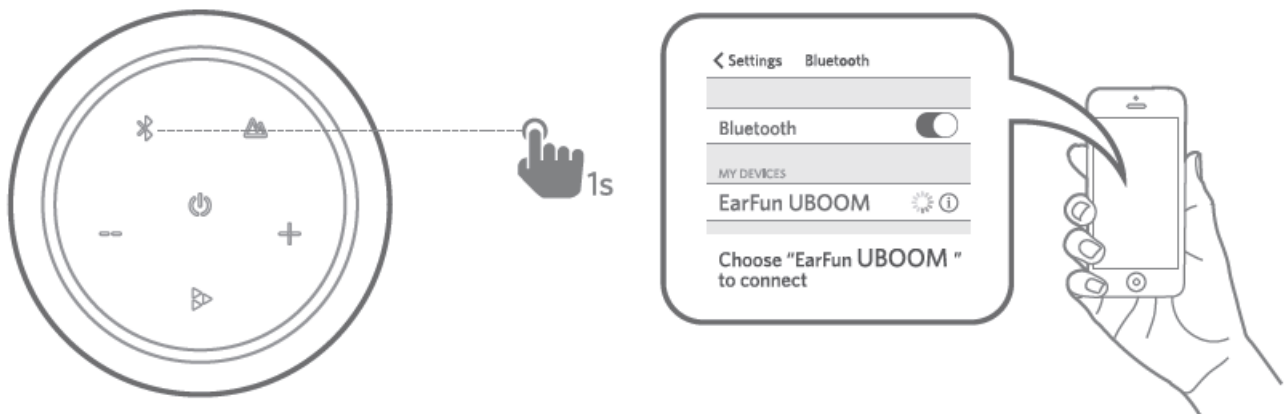

Note:

If the speaker didn't pair with any device and no-operation in 30 minutes, it will shut down automatically.

5. Battery Indicator

 
Step 1:

Click the 'Edit' and add the 'Batteries' widget, then click 'Done'.



Step 2:

The battery remaining capacity has been shown on your device.

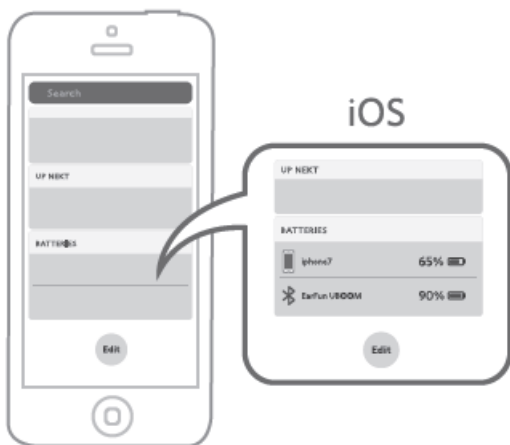

For Android (Support Android 8.0 or higher):


It varies from the Android device, please refer to the instruction manual of your device.

6. Speaker LED Indicator


Flashing Blue	Bluetooth Pairing Mode
Solid Blue	Connected to a device
Battery Level	Battery Level < 15%: indicator stays on red Battery Level < 2%: Indicator flashes red for 8 seconds, then the speaker turns off.
Charging	Indicator stays on red
Fully Charged	Indicator stays on white

7. True Wireless Stereo Connection with Two UBOOMS


Step 1: Pair and connect UBOOM A to your Bluetooth device.

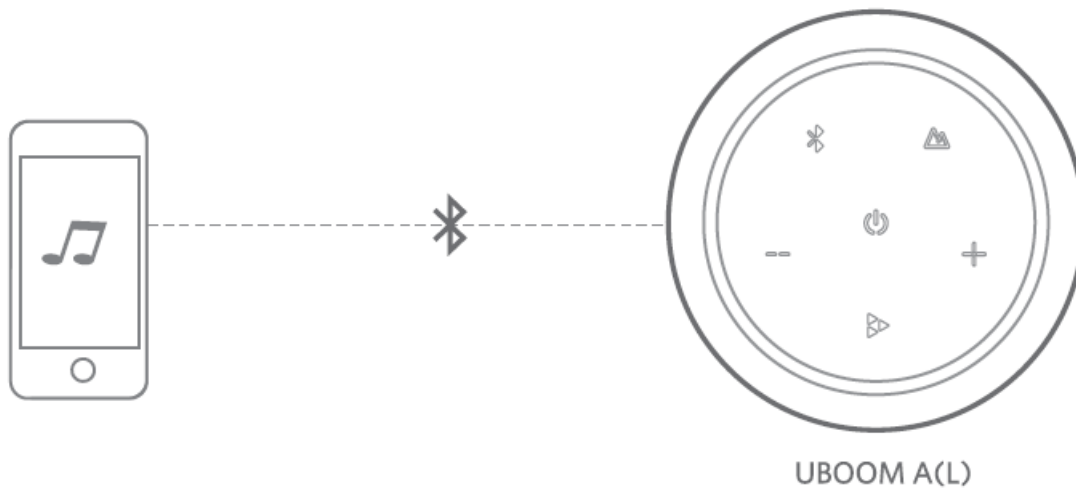

Step 2: Power on UBLOOM B, and press the Bluetooth buttons of the two speakers simultaneously for 5 seconds.

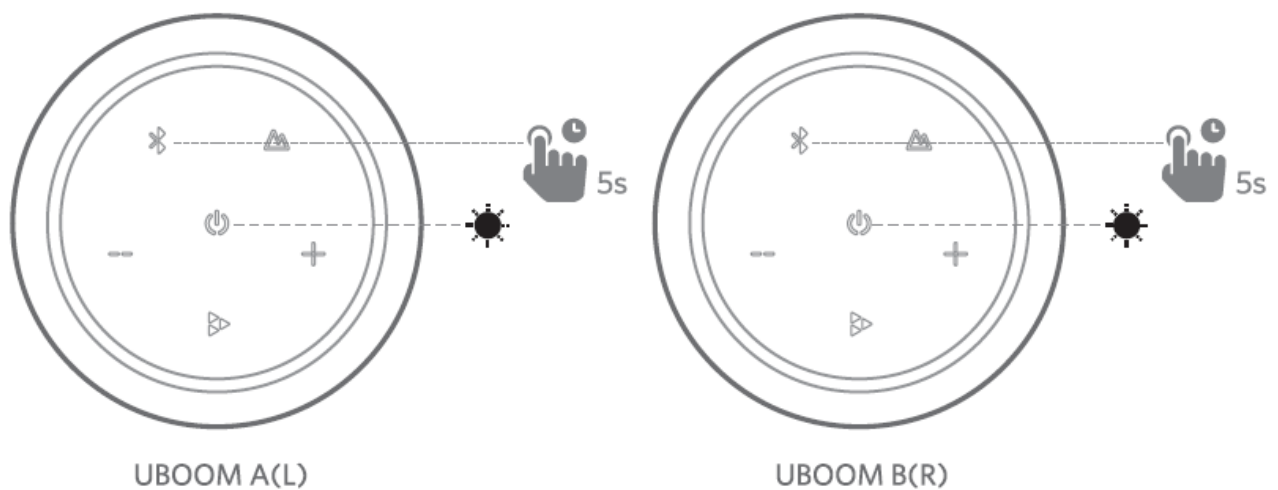


Step 3: The two indicators stay blue, and the speakers enter True Wireless Stereo Mode.

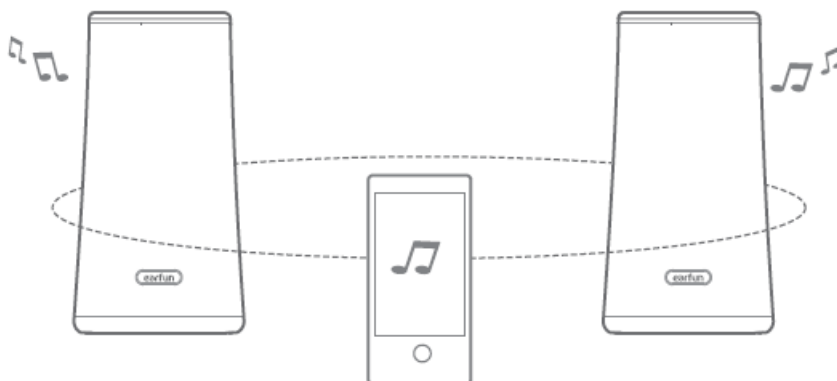

Note:

Once the two UBLOOMs have entered wireless stereo pairing mode before, you don't need to pair them as the first pairing. Simply power on the two UBLOOMs and they will connect to each other automatically.



8. Functions

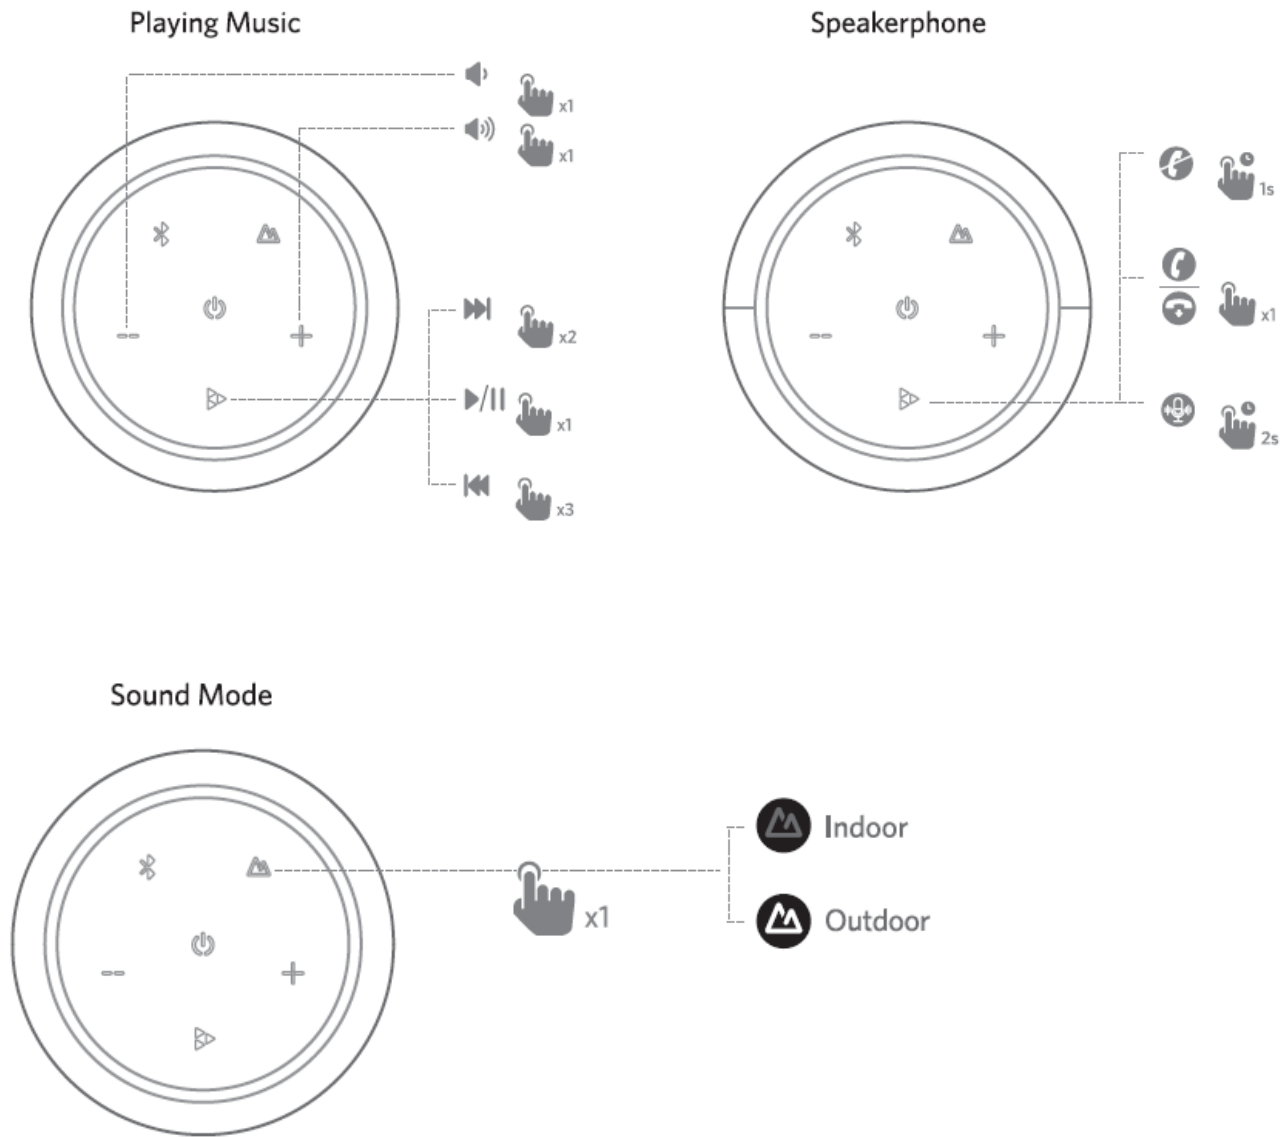

9. Reset and Reconnect

If this speaker becomes disconnected or has another connecting problem, you can press and hold “**Volume +**” and “**Volume -**” buttons simultaneously for 5s at least to clear the pairing of speaker and remove the old pairing in your Bluetooth device, and then pair again.

If this speaker becomes out of control and can't be powered off, you can press and hold power button for 8s at least to reboot.

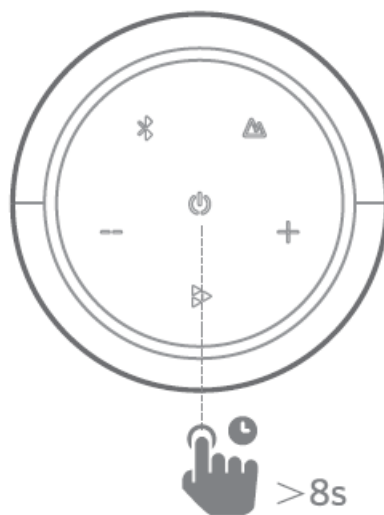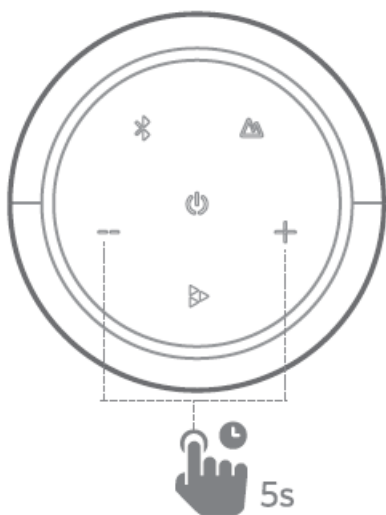

Specifications

Bluetooth Version	VS.0
Bluetooth Profile	A2DP, AVRCP, HFP, HSP
Transducer	2 x 45mm
Output Power	2 x 12W
Signal-to-noise Ratio	BOdB
Battery	(7.4V, 2200mAh)
Play Time	Up to 16 hours
Charging Time	About 4 hours
Dimensions	166.5 x 88 x 88 (mm)
Weight	585g

Customer Service

- 18-month Limited Warranty
- For FAQs and more information, please email to:
service@myearfun.com
www.myearfun.com



Facebook

Download

EarFun UBOOM Portable Bluetooth Speaker User Manual – [[Download PDF](#)]
