



EASY HOME IN03C Home Security Window Door Magnetic Sensor Alarm Instructions

[Home](#) » [EASY HOME](#) » EASY HOME IN03C Home Security Window Door Magnetic Sensor Alarm Instructions 

Contents

- [1 EASY HOME IN03C Home Security Window Door Magnetic Sensor Alarm](#)
- [2 Contents](#)
- [3 Installation](#)
- [4 Operation](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



EASY HOME IN03C Home Security Window Door Magnetic Sensor Alarm



Contents

Please keep these instructions in a safe place for future reference

- 2 sets of window/door alarms (batteries installed)
- 3 x LR44 batteries (installed)


The window/door alarm is especially designed for to provide extra security and peace of mind by sounding an alarm when an intruder tries to open a window or door.
There is no assembly required.

Installation

No tools are required.

- When you are ready to install, place each piece of 1 set on the window or door you wish to secure.
- Double check that the 2 pieces will not be more than ½" apart.
- Remove the backing on the adhesive strip on the back of the Magnetic Contact and firmly press into place on the door or window.

- Pull the plastic tab between the battery compartment and battery to activate the battery.
- Remove the backing on the Main Unit, line up the 2 arrows (see below) and press firmly into place on the window or door frame.

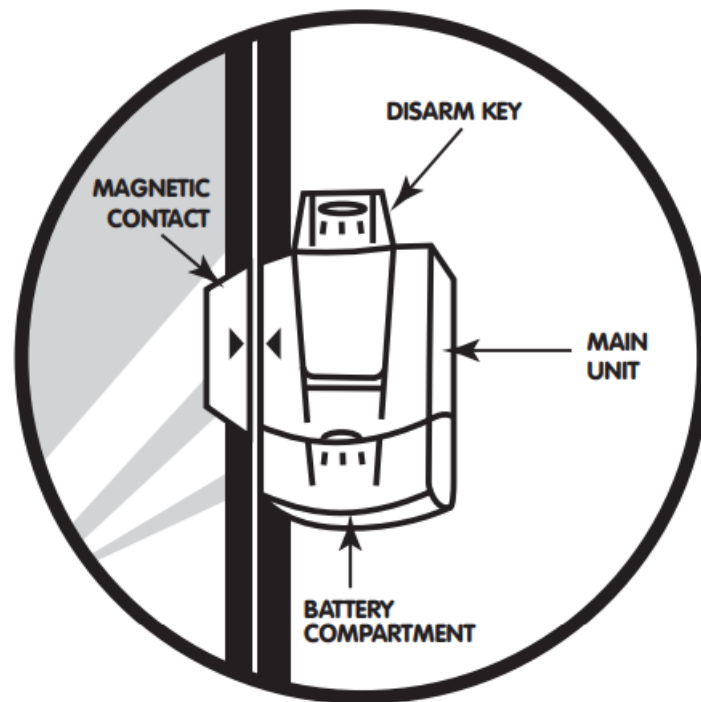

Operation

- When the 2 arrows are lined up and the units are securely in place, remove the Disarm Key by pulling up on the Key.

When the window or door is opened or the Disarm Key is removed, it will sound a loud alarm.

- Keep the Disarm Key close by to use when you want to disarm the unit or after the alarm has been tripped.
- Alarm volume: 89 dB(A) measured at a distance of 3 feet.

Battery Replacement

- Open the battery compartment cover (shown above) by sliding the cover down.
- Remove the 3 old batteries and replace with 3 new LR44 button cell alkaline batteries following the polarity diagram.
- Replace the battery compartment cover.


Caution:

- Batteries may leak harmful liquids or ignitable materials or explode causing injury and product damage.
- Do not mix old and new batteries or other battery types
- Replace all batteries of the same kind at the same time
- Replace fully discharged batteries immediately

Note: This product is designed to be a deterrent. It is an alarm signal. It does not guarantee protection.

DIST. & SOLD EXCLUSIVELY BY:
ALDI
BATAVIA, IL 60510

Documents / Resources

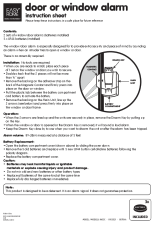	<p>EASY HOME IN03C Home Security Window Door Magnetic Sensor Alarm [pdf] Instructions IN03C, Home Security Window Door Magnetic Sensor Alarm, Door Magnetic Sensor Alarm, Ma gnetic Sensor Alarm, Sensor Alarm, Alarm, IN03C</p>
---	--

[Manuals+](#)