

EASYLINE SM-CJ5A Cone Juicer Fimar Instructions


Home » EASYLINE » EASYLINE SM-CJ5A Cone Juicer Fimar Instructions

EASYLINE SM-CJ5A Cone Juicer Fimar Instructions



Contents

- 1 key to main components of the appliance
- 2 Safety information
- 3 Technical information
- **4 Operation Instruction**
- 5 Cleaning
- 6 Correct disposal of this product
- 7 Documents / Resources
- **8 Related Posts**

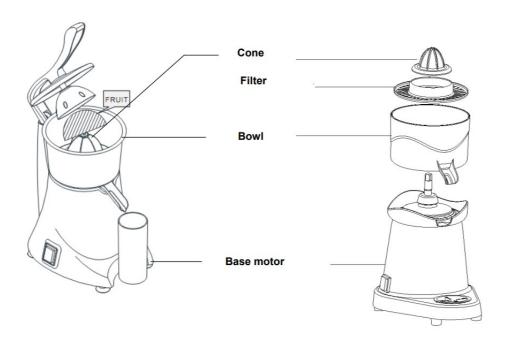

Safety information

WARNING

Please read and understand this entire manual before attempting to assemble, operate or install the product. This manual contains important information about the assembly, operation and maintenance. General safety information is presented in these first few pages. Please keep this manual for future reference and to educate new users of this product.

! WARNING

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, otherwise, the potential risk of fire, electric shock and/or injury will be occurred.

When using electrical appliances, basic precautions should always be followed, including the following:

- 1. Read all instructions, and save it for future reference.
- 2. Before use, check that the voltage of wall outlet corresponds to the one shown on the rating plate.
- 3. Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning. Clean motor housing with wet cloth, and wipe dry. Don't dip in water for rinse.
- 4. The instrument is not intended to be used by persons disabled, with mental aberration or without related experiences and knowledge (including children), except they are supervised and directed by persons who are responsible for their safety to use the product.
- 5. Colse supervision is necessary for any appliance being used by or near children.
- 6. Do not operate any appliance with a damaged supply cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- 7. Don't let supply cord hang over edge of table or worktop, or touch hot surface.
- 8. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly

- qualified person in order to avoid hazard.
- 9. Don't use the appliance if the rotating cone is damaged.
- 10. Switch off the appliance before changing accessories or approaching parts which move in use.
- 11. Keep hands, hair, clothing, as well as scraper and other utensils away from juicer during operation to reduce the risk of injury to persons, and damage to the juicer.
- 12. Wash all parts and components contact with juice. Flush them with water and cool for dry.

Technical information

MODELLO	SM-CJ4	SM-CJ5	SM-CJ5A	SM-CJ6
POWERINPUT	180W	180W	230W	230W
RATED VOLTAGE	230V	230V	230V	230V
FREQUENCY	50-60Hz	50-60Hz	50-60Hz	50-60Hz
SPEED	1800rpm	1800rpm	1450rpm	980rpm
DIMENSIONS	310*220*360	340*340*420	340*210*480	360*280*470

Operation Instruction

- 1. Place a recipient with suitable capacity under the product ejection opening.
- 2. Press the button to start the appliance.
- 3. Cut product to be squeezed in half and place it on the juice cone.
- 4. Lightly press the product down to start juicing (for model SM-CJ4 SM CJ5 only).
- 5. Lower the presser to start juicing the product (for model SM-CJ5A SM CJ6 only).
- Press the button to stop the appliance when finished.
 If it is the first time the appliance is used, remove any protective linings and accurately clean to remove any construction material residue before starting it.

Cleaning

Before cleaning the appliance (at the end of the day or when necessary) turn the power off (or unplug the power cord)

- 1. Remove the cone and tank.
- 2. Wash parts with drinkable water, rinse and dry thoroughly and reassemble.
- 3. Accurately clean the work surface and all surrounding areas.
- 4. Clean external appliance surfaces with a damp cloth or sponge.

Caution – Precaution

Only clean with food safe detergents. Never use corrosive or flammable cleaning products or products that contain substances harmful to human health.

For long periods of disuse, after cleaning and turning off appliance power (or unplugging the power cord), adequately cover it to keep it clean.

Correct disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Documents / Resources



EASYLINE SM-CJ5A Cone Juicer Fimar [pdf] Instructions SM-CJ5A, Cone Juicer Fimar, Juicer Fimar, Cone Fimar, Fimar

Manuals+,