



EASYLINE WM1 Waffle Machine Instruction Manual

[Home](#) » [EASYLINE](#) » EASYLINE WM1 Waffle Machine Instruction Manual 

Contents



- [1 EASYLINE WM1 Waffle Machine Instruction](#)
- [2 Key to main components of the appliance](#)
- [3 SAFETY INFORMATION](#)
- [4 Technical information](#)
- [5 Operation Instruction](#)
- [6 Cleaning](#)
- [7 WARRANTY CONDITIONS](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



EASYLINE WM1 Waffle Machine Instruction



Key to main components of the appliance

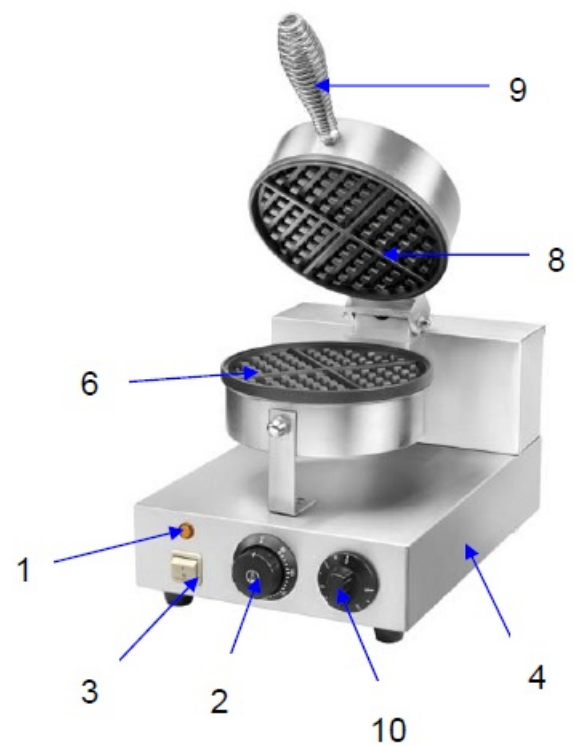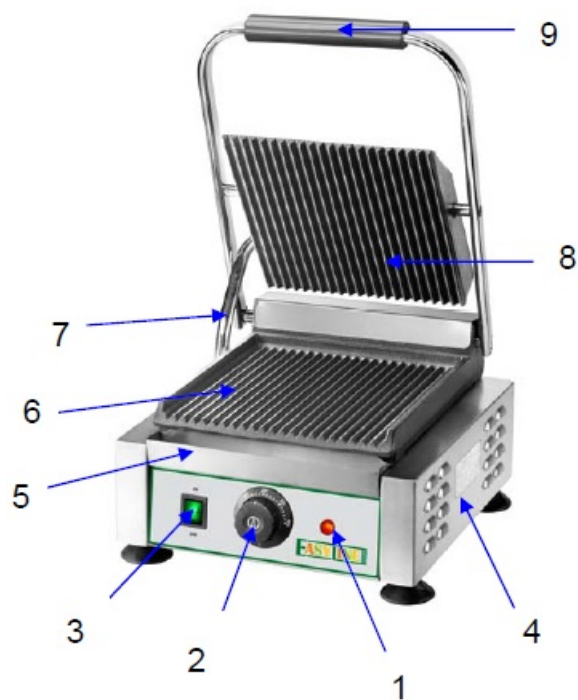

1. HEATING INDICATOR
2. TEMPERATURE CONTROLLER
3. POWER INDICATOR
4. BOTTOM BOX
5. OIL TRAY

6. LOWER MODULE PLATE
7. FEED WIRE TUBE
8. UPPER MODULE PLATE
9. OPERATION HANDEL
10. TIMER

SAFETY INFORMATION

WARNING:

READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE USING. SAVE THIS INSTRUCTION.

Please read and understand this entire manual before attempting to assemble, operate or install the product. This manual contains important information about the assembly, operation and maintenance. General safety information is presented in these first few pages. Please keep this manual for future reference and to educate new users of this product.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, otherwise, the potential risk of fire, electric shock and/or injury will be occurred.

When using electrical appliances, basic precautions should always be followed, including the following:

1. Do not touch hot surfaces, Use handles or knobs.
2. Close supervision is necessary when any appliances are used by or near children.
3. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquid.
4. Do not let cord hang over edge of table or counter, or touch hot surfaces.
5. Do not operate appliances with damaged cord or plug or after the appliances malfunctions, or has been damaged in any manner. Return appliances to the nearest Authorized Service Center for examination, repair, or adjustment.
6. The use of accessory attachments not recommended may cause hazard or injury.
7. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
8. Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts, and before cleaning.
9. To disconnect, turn the control to OFF, then remove the plug, Always hold the plug, but never pull the cord.
10. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
11. Do not use outdoors.
12. Do not use appliance for other than intended use.
13. Do not put or store any flammable liquid, gas or other objects around the product.
14. The working voltage of the equipment should match that of the power supply.
15. There is an earth bolt at the back of the equipment. Please connect the earth wire in compliance with the safety regulations reliably with copper cable of no less than 2mm.
16. Before using user should check whether connection is firm and voltage is regular and earth connection is safe.
17. Do not store any flammable objects near the equipment. The environment Temperature lower than 45°C, the humidity is under 85%.
18. The installation and maintenance of the equipment should be made by professional technicians.

Technical information

Model	EG-01	EG-02	EG-03	WM1
Voltage	220~240V	220~240V	220~240V	220~240V
Frequency	50/60Hz	50/60Hz	50/60Hz	50/60Hz
Power	1,8KW	2,2KW	3,6KW	1KW
Controller number	1	1	2	1
Temperature range	50~300°C	50~300°C	50~300°C	50~300°C
Dimension	290×395×210(mm))	410×370×220(mm))	570×395×210(mm)	440x260x260(mm)
Weight	14kg	15,5kg	28,5kg	6Kg

Operation Instruction

1. Before using, check whether the power supply installation is regular to make sure the supplied voltage is coordinated with the using one.
2. Put the plug in the socket and turn on the power.
3. Turn the temperature controller clockwise to the temperature needed. The yellow indicator is on that shows heating wire begins to heat and the upper and lower griddle begins to raise temperature.
4. Temperature can be adjusted according to different food preferably within 180°C 250°C. About 8 minutes is needed for the temperature to be raised to 250°C from the power is on.
5. When the temperature reaches 250°C, lift the upper module plate to a suitable place by operation handle. Put some edible vegetable oil on the lower module plate and constantly place the food on it. Close the plates and press the handle lightly. Keep an eye on the food until it is suitably done.
6. When temperature reaches the setting degree, temperature controller can cut Off power supply automatically. At the same time, yellow indicator is off and green indicator is on. It shows that electricity heating tube stops working for next turn.
7. At the lower front of the lower module is the oil tray. Substantial vegetable oil and the animal oil from the meat grilled flow to the oil tray from the lower module plate.
8. Lift the upper module plate to take the sandwich and other food already done.
9. When the temperature is a bit lower, the temperature controller can get through power supply automatically. The heating tubes restart to work to heat the module plates.
10. On completion of the work, temperature controller should be turned to the “off” place. Unplug the equipment and cut off the power.

Tips

Handle the griller carefully and cautiously in transportation and do not turn it upside down to prevent any damage to the shell and interior. The packed griller should be stored in the storehouse ventilation and non-corrosive gas. Any weatherproof measures should be applied when temporary storage.

KEEP OUT OF CHILDREN'S REACH

Special notes

- Do not dismantle and refit the machine.
- Do not lift the upper module plate with sudden force and tilted installation.
- The dismantlement and dismantlement and alteration can cause serious accident happens. Before cleaning, unplug the machine and cut off power supply.
- Do not spray water directly to the product.
- Do not pat the product and put heavy object onto the product.
- Incorrect operation can cause the equipment be damaged and dangerous.
- High temperature will cause scald.
- When the equipment is in use and before or after using it, do not touch the box and module plate because of high temperature.
- The box and module plate because of high temperature.
- Do not use any power supply which is not coordinated with safety standards.

Cleaning

1. Cut off the power supply before cleaning in case of accident.
2. Do not use wet towel with corrosive cleanser to clean the module plate, the surface of the equipment and power cord. Direct wash by water is not permitted in case of any damage of the functions.
3. If do not use it at any time, please turn off temperature controller and main switch.
4. Please store the equipment in a ventilated storehouse without corrosive gas after cleaning when ceasing its work for a long time.

INFORMATION ON DISPOSAL AND RECYCLING OF THIS PRODUCT




This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

WARRANTY CONDITIONS

- The warranty has duration of 12 months and is subject to the presentation of a copy of a suitable fiscal document or invoice proving the purchase date.
- The product is guaranteed against flaws and defects of the materials, manufacturing and assembly for 12 months from the date of the purchase invoice. The warranty consists in the replacement or repair of defective product components. It does not include the replacement of the product after breakdown repairs for any reason.
- Therefore the warranty is limited to the free replacement or repair of parts which, in the manufacturer's opinion, malfunction. Consumable materials and tools are not included.

- Warranty services are rendered by the dealer where the product was purchased or, alternately, by the manufacturer, it being understood that the relevant transport will be at the customer's full liability and expense.
- The warranty is invalidated if the product was tampered with or repaired by unauthorised personnel.
- This warranty substitutes and excludes any other warranty due by the dealer by law or contract and defines all the customer's rights regarding purchased product defects and faults and/or quality deficiencies.
- Any legal controversy will be submitted to the manufacturer's Court of residence.

Documents / Resources

	<p>EASYLINE WM1 Waffle Machine [pdf] Instruction Manual WM1 Waffle Machine, WM1, Waffle Machine, Machine</p>
---	--