



EasySMX 9013Pro Wireless PC Game Controller User Manual

[Home](#) » [EasySMX](#) » EasySMX 9013Pro Wireless PC Game Controller User Manual 

EasySMX 9013Pro Wireless PC Game Controller



Contents

- [1 Introduction](#)
- [2 Controller Button Layout](#)
- [3 Modes And Connections](#)
- [4 Turbo Button Setting](#)
- [5 Charging](#)
- [6 Resetting The Controller](#)
- [7 Package Contents](#)
- [8 Dear Customer](#)
- [9 Customer Support](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

 
 
 
Introduction

Thank you very much for purchasing our Bluetooth Controller.

This is a new design that is compatible with PC, Android, Apple phones (iOS 13.0 or above with MFI games). and the SWITCH platform. Before use, please read the user manual carefully and keep it for future reference.

Controller Button Layout

1. Left Joysticks
2. Right Joysticks
3. Back
4. Start
5. Turbo
6. HOME
7. A/B/X/Y
8. D-pad
9. LED Indicator
10. LB
11. RB
12. LT
13. RT
14. Type-C Charging Port
15. Reset Hole

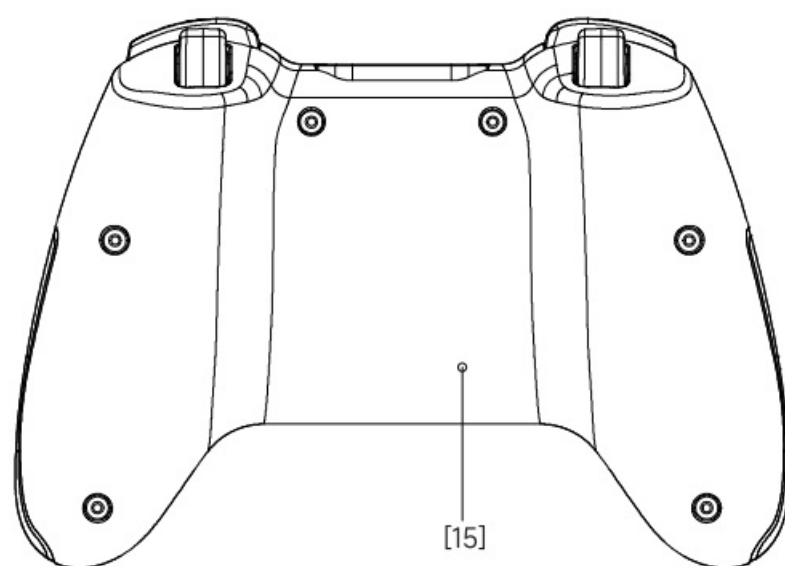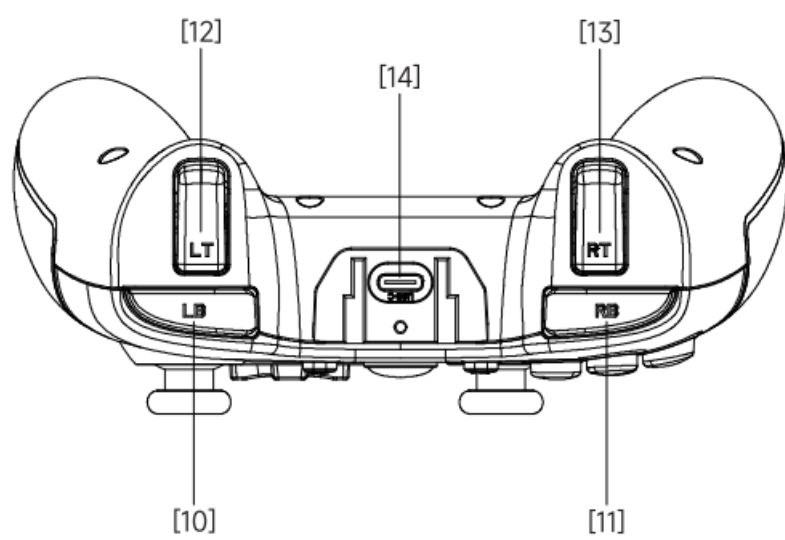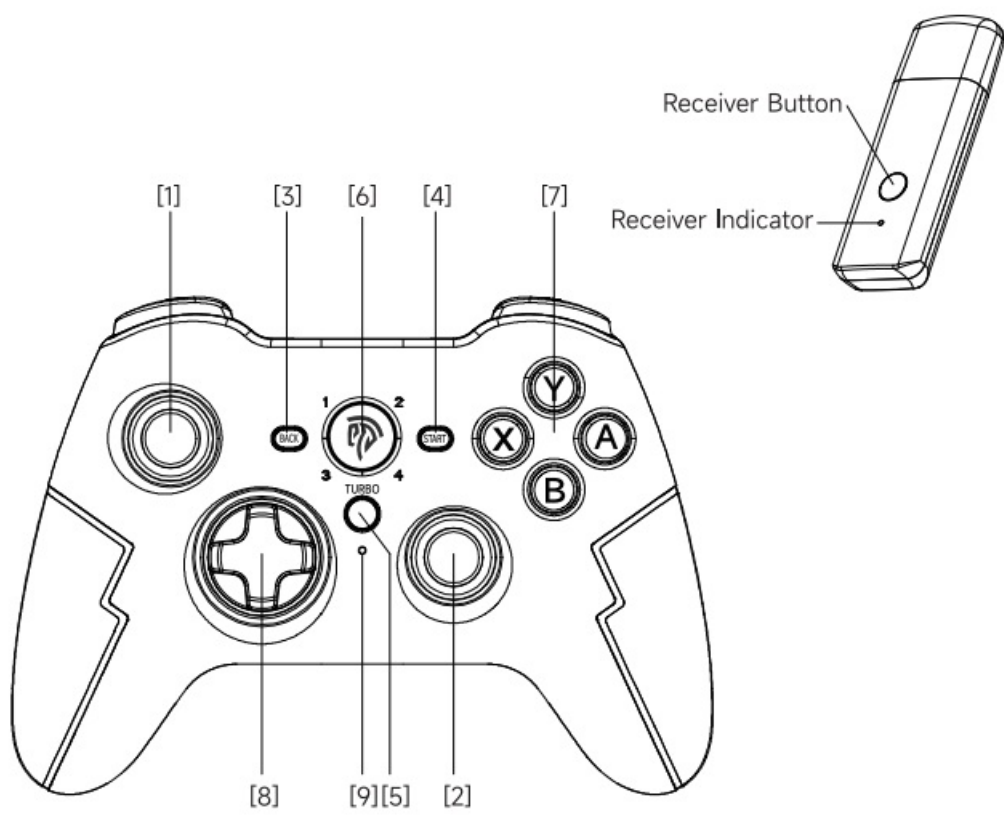

Modes And Connections

Connecting to PC

Wireless Connection

Plug the wireless receiver into the PC and press the button on the front of the receiver for quick pairing. Press and hold the logo button on the controller for 3 seconds to power it on. The controller indicator LED 1 and 2 will stay on, indicating the corresponding X input mode.

Wired Connection

Connect the controller to the pc via the USB cable, the controller indicator LED 1 and 2 will stay on, indicating the corresponding X input mode.

Mode Switching

Press and hold the LOGO button for 5 seconds to switch to D input mode; (analog mode) LED 1 and 3 will light up.

Bluetooth Connection

Press and hold the A + Home button for 3 seconds. The indicator LED2 will flash quickly to enter pairing mode. Search the Bluetooth name for "Xbox Wireless Controller" and click "Connect". If the connection is successful, LED2 will stay on.

Connecting to PS3 Console

First connect the controller to PS3 with the USB data cable.

After a successful connection, the controller disconnects the wired connection and reconnects to the PS3 via Bluetooth.

Bluetooth Connection to Phone/Tablet

1. **Android Mode:** With the controller turned off, press and hold the B + home button for 3 seconds, Enter Bluetooth pairing mode, LED1 light flashes quickly. After a successful connection, the LED 1 light will stay on. (The device name will be "Gamepad")
2. **IOS Mode:** With the controller turned off, press and hold the A + home button for 3 seconds, Enter Bluetooth pairing mode, LED2 light flashes quickly. After a successful connection, the LED2 light will stay on.

Bluetooth Connection to SWITCH

1. For the first connection, while the controller is powered off, press and hold the Y +HOME button for 3 seconds; for subsequent connections, simply press the HOME button to power on and it will automatically reconnect to the SWITCH. The controller's Home button can wake up the SWITCH.
2. On the SWITCH, select "Controllers," then choose "Change Grip/Order." The controller will be automatically recognized and paired with the SWITCH console. After a successful connection, the corresponding LED light will stay on.

Turbo Button Setting

1. Hold down the button you want to set as the TURBO function and then press the TURBO button once. The TURBO LED light will flash, indicating successful setting. Once set, holding down the assigned TURBO button in the game will achieve rapid firing.
2. Hold down the button set as the TURBO function and then press the TURBO button again to cancel this function.
3. In SWITCH mode, double-clicking the Turbo button will switch it to screenshot function.

Charging

1. When charging, all four LED lights will flash slowly.
2. When fully charged, all four LED lights will stay on.
3. When connected via a wired connection, the LED light indicates the current mode and will blink simultaneously to indicate the charging status. Once fully charged, the LED lights will stay on.
4. When the controller battery Power is below 20%, the indicator light of the current mode will blink.

Resetting The Controller

If the controller becomes unresponsive or malfunctions during use, you can reset it. Simply use a paperclip to press the RESET hole at the bottom of the controller until you hear a “click” sound. The controller will power off, indicating a successful reset.

Package Contents

- 1 x Easy SMX Game Controller
- 1 x USB Receiver
- 1 x USB Data Cable
- 1 x User Manual
- 1 x After-sales Card

Dear Customer

Thank you for purchasing our product.

Please read this user manual carefully and keep it for further reference.

If you have any problems or suggestions, please feel free to contact us and we will answer you as soon as possible.

Customer Support

Amazon US: support.us@easysmx.com

Amazon FR: support.fr@easysmx.com

Amazon IT: support.it@easysmx.com

Amazon ES: support.es@easysmx.com

Amazon JP: support.jp@easysmx.com

Amazon DE: leslie@easysmx.com

Amazon UK: jane@e.asysmx.com

 
Ali Express: aliexpress@easysmx.com

Walmart: walmart@easysmx.com
Official Website: official@easysmx.com

Follow us for the best after-sales service
and the latest news!
EasySMX Co., Limited
Email: support@easysmx.com
Web: www.easysmx.com



Documents / Resources

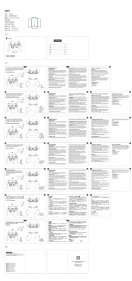	<p>EasySMX 9013Pro Wireless PC Game Controller [pdf] User Manual 9013Pro, 9013Pro Wireless PC Game Controller, Wireless PC Game Controller, PC Game Controller, Game Controller, Controller</p>
---	---

References

- [User Manual](#)