




EasySMX ESM-4108 Game Controller User Manual

[Home](#) » [EasySMX](#) » EasySMX ESM-4108 Game Controller User Manual 

Contents

- [1 ESM-4108 Game Controller](#)
- [2 Package List](#)
- [3 Product Sketch](#)
- [4 Specifications](#)
- [5 TURBO Button Setting](#)
- [6 How to Turn ON / OFF the Buttons Light](#)
- [7 Connect to the Switch](#)
- [8 Connect to PC](#)
- [9 Low Power Reminder](#)
- [10 FAQ](#)
- [11 Downloads](#)
- [12 Related Posts](#)

ESM-4108 Game Controller

User Manual


Dear customer:

Thank you for purchasing EasySMX product. Please read this user manual carefully and keep it for further reference.

Package List

This product belongs to Switch Pro wireless (Bluetooth) controller, with TURBO and Vibration function. It is compatible with Nintendo Switch and PC (XP system and above). This gamepad can be used to playing variety games such as ARMS, Mario Kart 8, the legend of Zelda and etc. It will create an immersive game experience for you, enjoy your games

Product Sketch

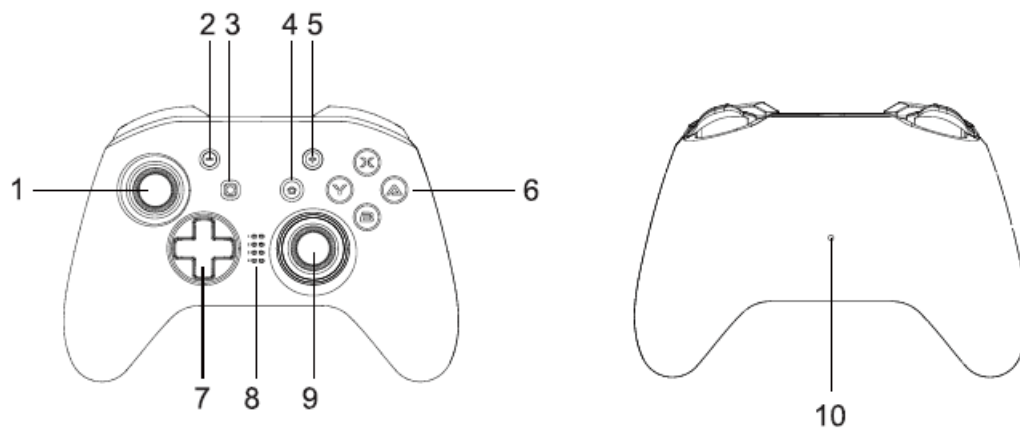

1. Left Joysticks/L3

2. - Button

3. Print Screen /TURBO Button

4. HOME Button

5. + Button

6. A B X Y Button

7. D-Pad

8. LED Indicators

9. Right Joysticks/R3

10. Reset

Specifications

Battery	Lithium Polymer Battery
Battery Capacity	600mAh
Battery Life time	≥8h
Charging Time	2.5h
Charging Port	Type-C

TURBO Button Setting

1. Press and hold Turbo button, then click the button you want to set with Turbo function, setting is done when the Round LED indicator keep in red. After that, you are free to hold this button to achieve fast strike during gaming.
2. Hold down Turbo button, then click the button that you have set with Turbo function, when Round LED him to

blue, TURBO function was disabled.

3. The red backlight circle of the button will change to blue when all the TURBO function keys are cancelled.

How to Turn ON / OFF the Buttons Light

Press and hold the L+ R button for 5 seconds to turn ON / OFF the buttons light.

Backlight Adjustment

ZL+ZR+R3+D-pad up and down button to adjust the controller backlight, 5 levels available

Vibration Function Setting

TURBO+D-pad up and down button to adjust the controller vibration, 5 levels available

Connect to the Switch

1. Open your Switch host, choice Menu “controller” — ” Change Grip and Order
2. Press Y and HOME Button, the LED indicators will flashing
3. Connect successfully, when the LED indicators stay on

Connect to PC

1. Connect the controller to PC with the USB cable.
2. Connect successfully when Led 1 and LED 4 stay on.

Low Power Reminder

The controller is connected to device, when the LED indicators flashing slowly, the vibration function disappeared, indicating that the controller is running low on battery.

FAQ

1. Why buttons do not function correctly?

- a. Check whether the button was set with Turbo Function
- b. Press the reset button to reset the controller

2. Why the controller does not vibrate at all?

- a. The game itself does not support vibration
- b. The vibration function was not turned on in the game settings.

Downloads

EasySMX ESM-4108 Game Controller User Manual -[[Downloads PDF](#)]

EasySMX Game Controllers Drivers – [[Downloads Driver](#)]

