




EasySMX ESM-9013 Game Controller User Manual

[Home](#) » [EasySMX](#) » EasySMX ESM-9013 Game Controller User Manual 

Contents

- [1 ESM-9013 Wireless Game Controller](#)
- [2 Dear customer:](#)
- [3 Introduction:](#)
- [4 Content:](#)
- [5 Specification](#)
- [6 Tips:](#)
- [7 Product sketch:](#)
- [8 Operation:](#)
- [9 Connect to PS3](#)
- [10 Connect to PC](#)
- [11 Connect to Android Smartphone / Tablet](#)
- [12 Button Test](#)
- [13 Low Battery Reminder](#)
- [14 TURBO Button Setting](#)
- [15 FAQ](#)
- [16 Download](#)
- [17 Related Posts](#)

ESM-9013 Wireless Game Controller

User Manual

Dear customer:

Thank you for purchasing EasySMX product Please read this user manual carefully and keep it for further reference.

Introduction:

Thank you for purchasing ESM-9013 Wireless Game Controller.

Please read this manual carefully and keep it for your reference before using it.

Before its first use, please visit: <http://www.easysmx.com> to download and Install the driver.

Content:

- 1 x Wireless Game Controller
- 1 x Wireless Adapter
- 1 x Manual

 
Specification

System	PS3/PC Windows 7 / Vista / 8 / 10 / Android 4.0
Model	ESM-9013
Product Name	Wireless Game Controller
Package Size	135*132*77MM
Product Size	146*105*65MM
Weight	220g
Operating Temperature	0°C~70°C
Operating Voltage	2V~3.5V
Power Supply	2AA Batteries
Operating Current	Non-vibrating<40mA Vibrating<150mA

Tips:

1. To avoid electricity accidents, please keep it away from water.
2. Do not dismantle.
3. Please keep the game controller and the accessories away from children or pets.
4. If you feel tired on your hands, please take a break.
5. Take breaks regularly to enjoy games.

Product sketch:

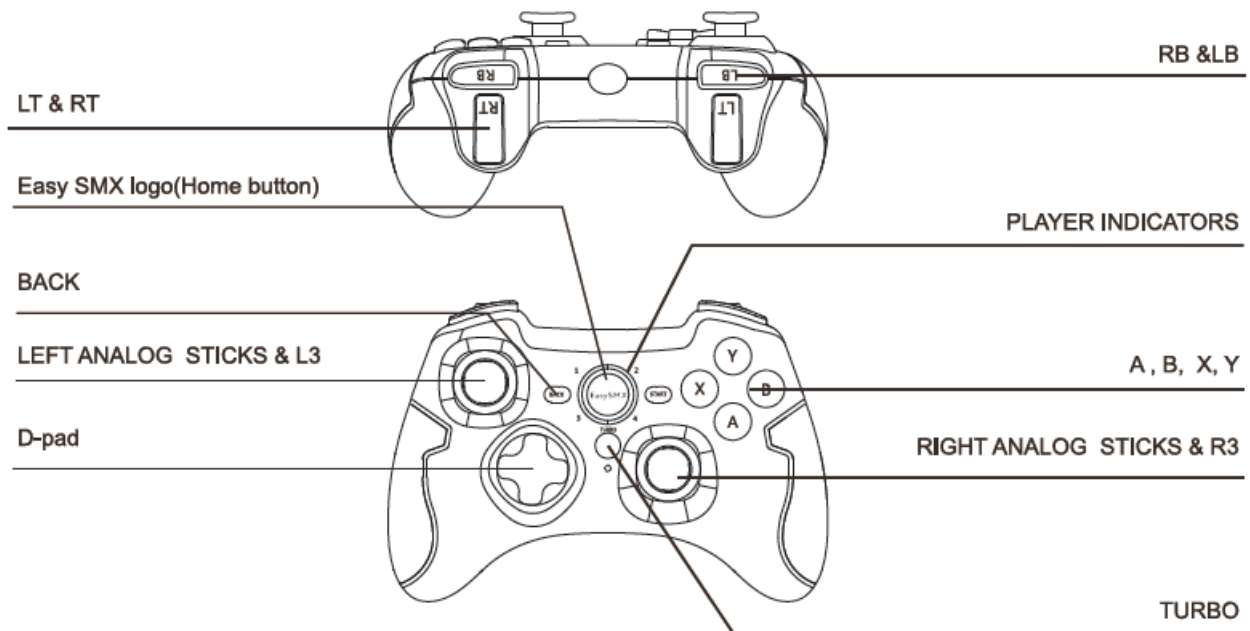

Operation:

Install the batteries properly.




Remove the battery cover and install the 2 AA batteries according to the instructions.

Note: The 1800mAh battery can work 20 hours for vibrating games and 90 hours for non-vibrating games.

Connect to PS3

Plug the USB receiver into one free USB port on the PS3 console. Press HOME Button and when LED 1 stays on, it means the connection is successful.

Connect to PC

1. Insert the USB receiver into your PC. Press HOME Button and when LED1 and LED2 stay on , it means that the connection is successful. At this time, the gamepad is in Xinput mode by default.
2. Under Xinput mode, press and hold the HOME Button for 5 seconds to switch to Dinput emulation mode. At this time, LED1 and LED3 will glow solid .
3. Under Dinput emulation mode, press the HOME Button once to switch to Dinput digit mode, and LED1 and LED4 will stay on .
4. Under Dinput digit mode, press the HOME Button for 5 seconds to switch to Android mode, and LED3 and LED4 will stay on. Press it for 5 seconds again to return to Xinput mode, and LED1 and LED2 stay on.

Note: one computer can pair with more & than one game controllers.

Connect to Android Smartphone / Tablet

1. Plug the Micro-B /Type C OTG adapter or OTG cable (Not Included) into the USB receiver.

2. Plug the OTG adapter or cable Into your phone or tablet.
3. Press HOME Button, and when LED3 end LED4 will sleep on, indicating the connection is successful.
4. If the game controller is not in Android mode, please refer to step2-step5 in the “Connect to PC chapter and make the controller in the right mode.

 
 
 
Note:

1. Your Android phone or tablet must fully support OTG functiion that needs lo be on first.
2. Android games does not support vibration for now.



Button Test

Choose the mode you want to test

1. Insert the Wireless adapter lo lha USB port to connect.
2. Click the “start” on the computer desktop and enter into “devices and printers”.
3. The default mode is XINPUT (PC 360) , No.1 and No.2 indicator is on and the wireless game controller is” Xbox 360 Controller for Windows”.
4. Right click the pattern and enter Into the panel of “game controller”.
click the “property” to test the buttons on the game controller.

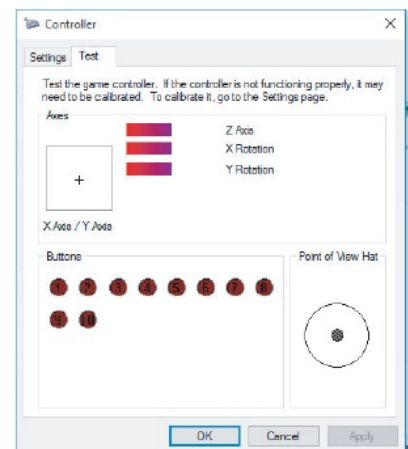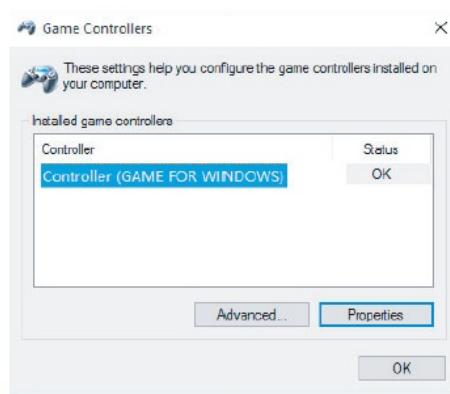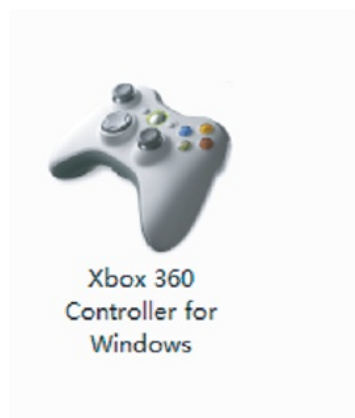

  5. If you want to test the ordinary PC mode, please long-click the EasySMX button. the No.1 and No.3 indicator will on. the name of the gamepad will be changed to “PC USB CONTROLER”, right elic it the pattern and enter into panel of ‘GAME CONTROLLER’ and click the “Property” to test the buttons.

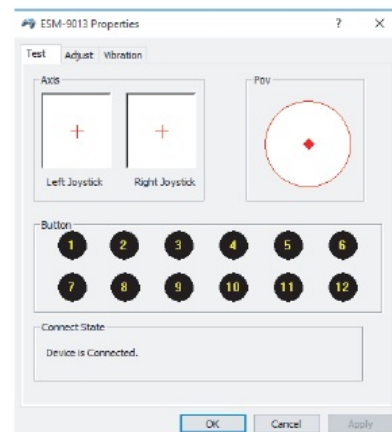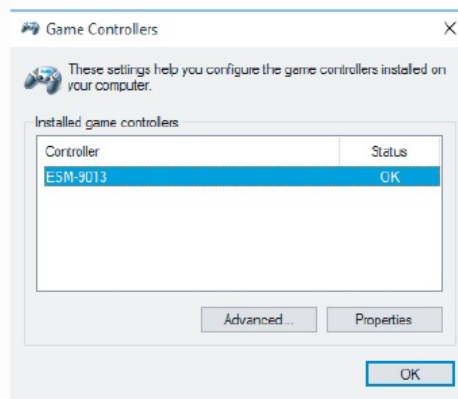

Low Battery Reminder

When the game controller is connected to same device, 1118 COIT8Sponclent LED indicators will flash slowly, indicating the controller is running low on batteries.

TURBO Button Setting

1. Press and hold any key you want to set With TURBO Function, then press TURBO Button. The TURBO LED will start flashing, indicating setting is done. After that, you are free to hold this button during gaming to achieve fast strike.
2. Hold down this button again and press TURBO Button simultaneously to disable TURBO function.

FAQ

1. The game controller failed to connect?

- a. Press HOME Button for 5 seconds to force it to connect.
- b. Try another free USB port on your device or restart the computer.
- c. Replace the batteries.

2. The controller failed to be recognized by my computer?

- a. Make sure the USB port on your PC works fine.
- b. Insufficient power might cause unstable voltage to your PC USB port-So try another free use port.
- c. A computer running Windows XF> or a lower operating system needs to inst.311 X360 game controller driver first.

3. Why can't I use this 9c1me controller in the game?

- a. The game you are playing doesn't support game controller.
- b. You need to set the gamepad in the game settings first.

4. Why doesn't the game controller vibrate at all?

- a. The game you are playing doesn't support vibration.
- b. Vibration is not turned on in the game settings.
- c. Android mode doesn't support vibration.

Download

EasySMX ESM-9013 Game Controller User Manual -[[Download PDF](#)]

EasySMX Game Controllers Drivers – [[Downloads Driver](#)]

[Manuals+](#)