



Easythread X3 3D Printer Instruction Manual


[Home](#) » [EasyThread](#) » Easythread X3 3D Printer Instruction Manual 

Contents

- [1 Easythread X3 3D Printer](#)
- [2 Parts](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)




Easythread X3 3D Printer

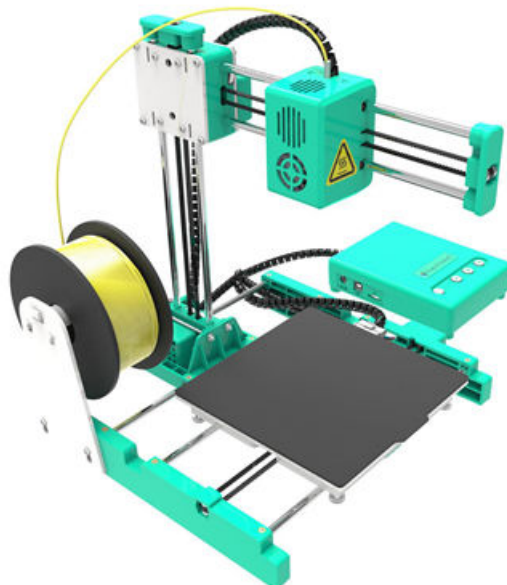


- This manual is written in accordance with EasyThread X3 3D printer
- Printer upgrades and equipment models are slightly different, is a normal phenomenon, based on the actual products received.
- User's manual inside TF card.

Parts


Parts List: Take out parts from package , check if all parts have as listed below

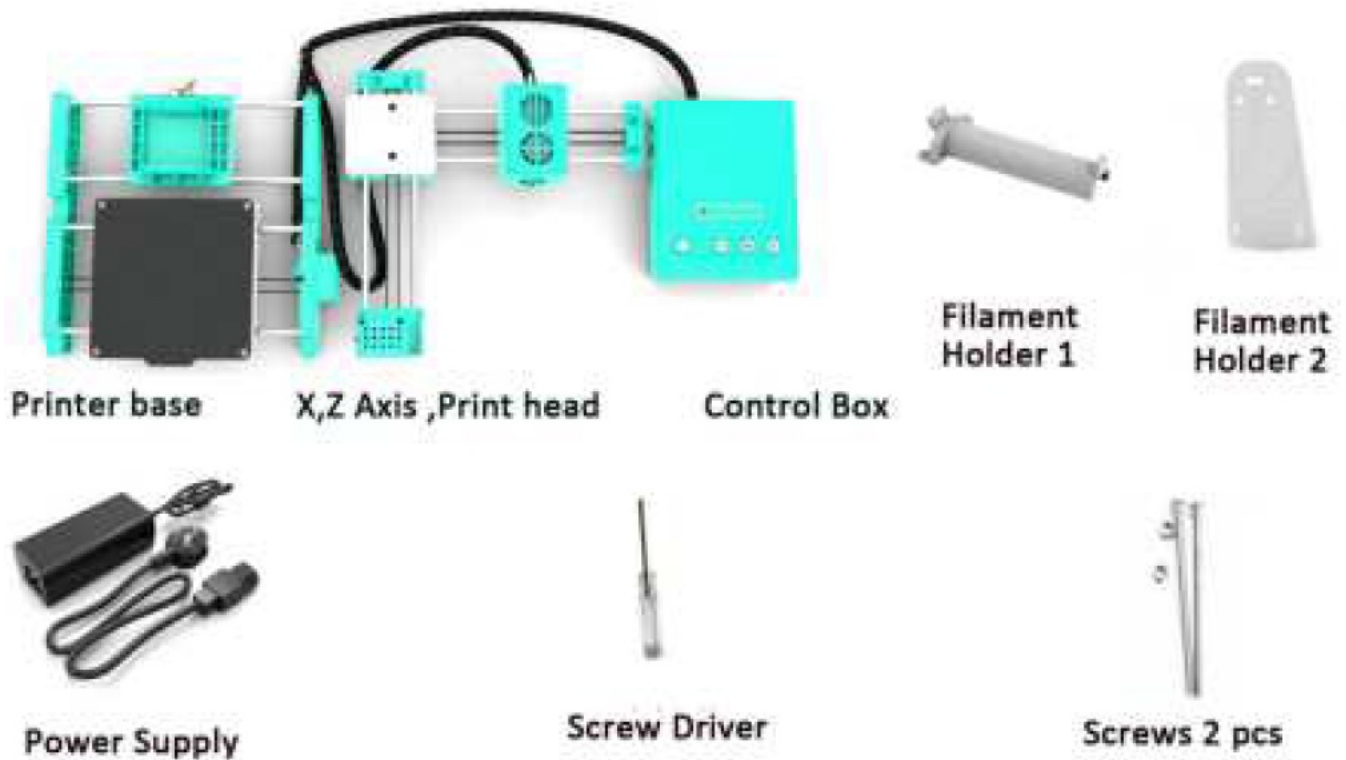


1. Install the XZ Axis set to the Printer Base.

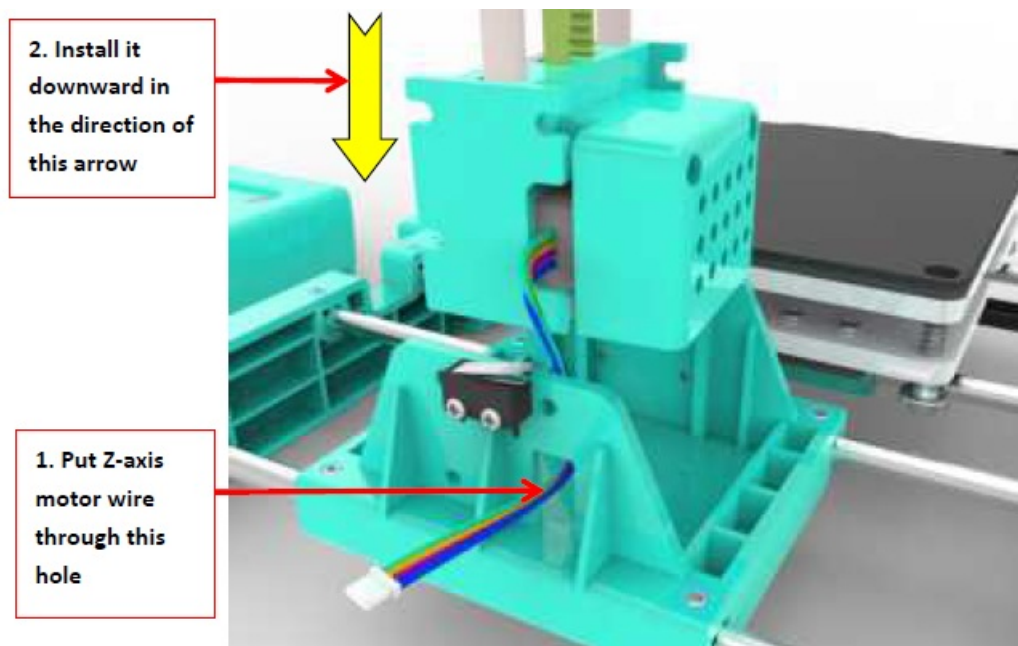

2. After insert the XZ Axis, Fixed with 2 screws.

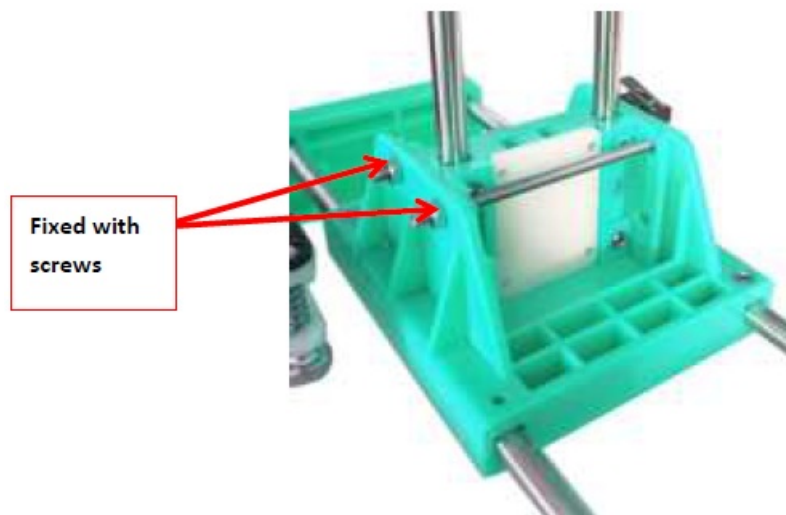

3. Connect the Z-axis motor line to the output line of the printer control box as shown in the figure below

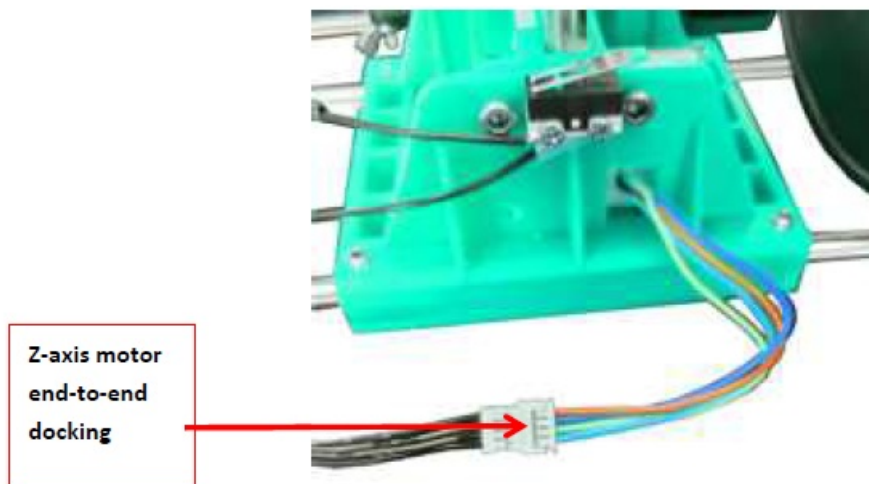

4. Install the Filament Holder as below.





ShenZhen EasyThreed Technology CO.,LTD

<http://www.easythreed.com>

info@easythreed.com

Documents / Resources

 EasyThread X3 3D Printer User Manual  <ul style="list-style-type: none">• This manual is written in accordance with the standard of 3D printer.• Please read this manual carefully before using the printer.• Please read this manual carefully before using the printer.• Please read this manual carefully before using the printer.• Please read this manual carefully before using the printer.	Easythreed X3 3D Printer [pdf] Instruction Manual X3 3D Printer
--	--

References

-  [Easythreed Desktop FDM 3d printer manufacturer](#)