



# EATON EMT6-DB Thermistor Overload Relay Instruction Manual

[Home](#) » [EATON](#) » EATON EMT6-DB Thermistor Overload Relay Instruction Manual 

*EATON EMT6-DB Thermistor Overload  
Relay Instruction Manual*




**02/22 IL121016ZU**




Electric current! Danger to life! Only skilled or instructed persons may carry out the following operations.

## EMT6, EMT6 (230V)

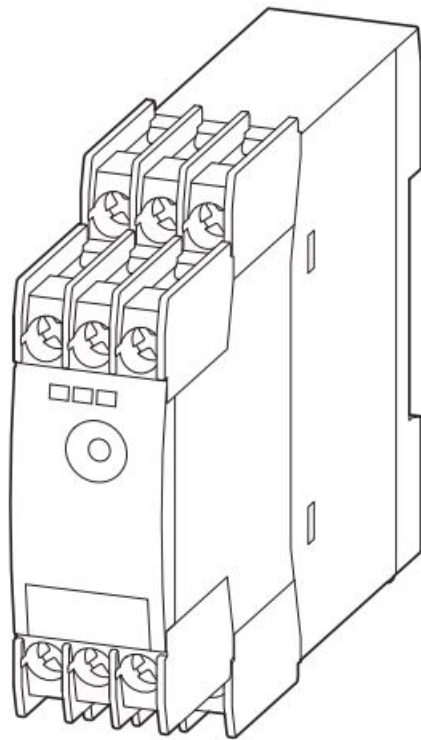

## EMT6-DB, EMT6-DB (230V)

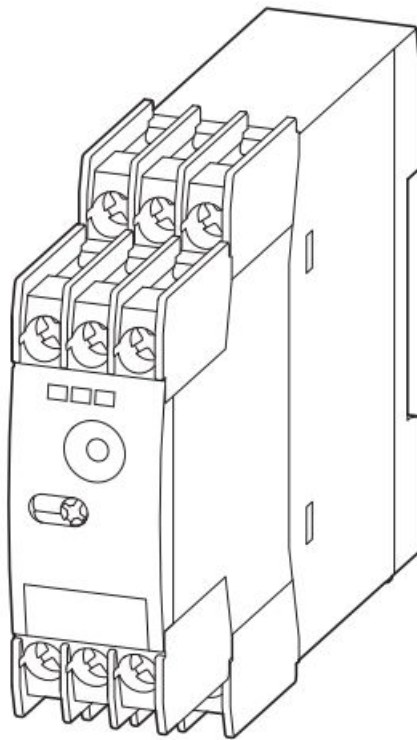

### CSA

#### ⚠ WARNING

Transient surge suppression shall be installed on the line side of this equipment and shall be rated n/a V (phase to ground), 275 V (Phase to phase), suitable for overvoltage category III, and shall provide protection for a rated impulse withstand voltage peak of 4 kV.






### UL/CSA

- Max. Surrounding air temperature rating 40 centigrade degree
- Use copper conductors only
- For use in pollution degree 2 environment only






#### Contents

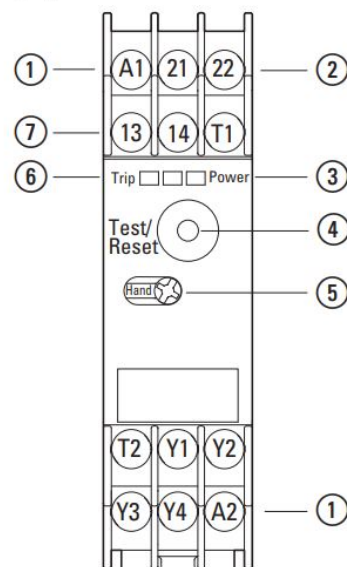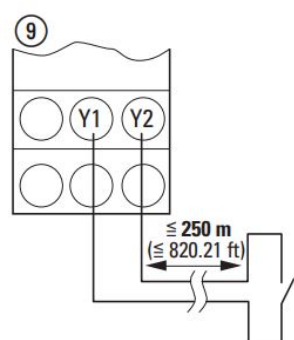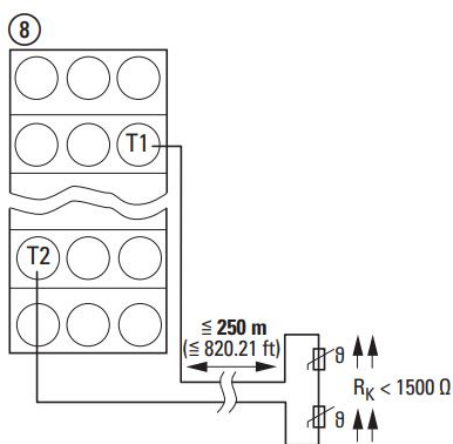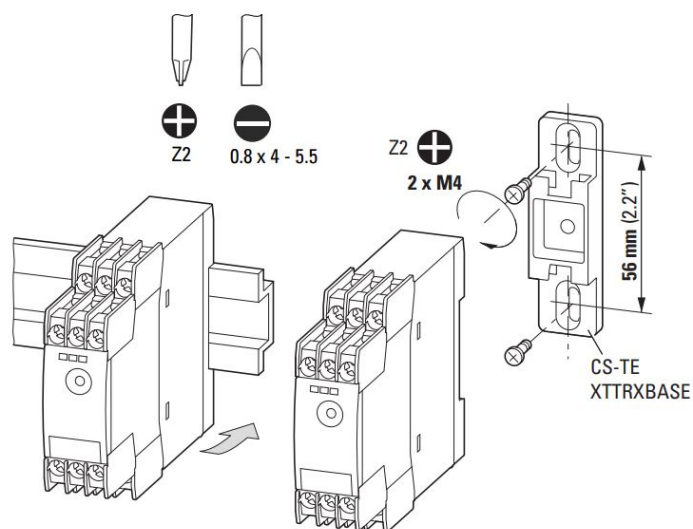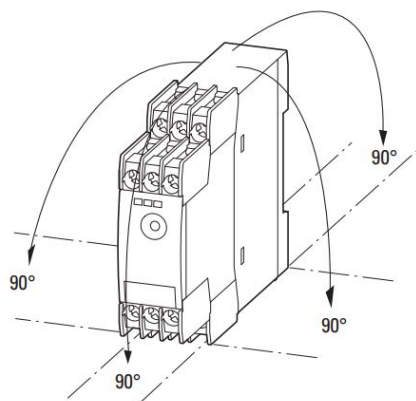- [1 Mounting](#)
- [2 HAND](#)
- [3 AUTO](#)
- [4 Test/Reset](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

## Mounting

 


1. Rated control supply voltage (A1/A2)
2. Auxiliary contact (break contact 21/22)
3. Supply LED (green)
4. Test/Reset
5. Manual and automatic reset
6. Tripped LED (red)
7. Auxiliary contact (make contact 13/14)
8. Thermistor (T1/T2)
9. Remote reset (Y1/Y2)

 mm <sup>2</sup>	 mm <sup>2</sup>	AWG	 6 mm (0.24")	Nm	lb-in	A1/A2	EMT6 (230 V) EMT6-DB (230 V)
1 x (0.5 - 2.5)	1 x (0.5 - 2.5)	20 - 14	 0.8 mm x (4 - 5.5 mm) 0.03" x (0.16 - 0.22")	0.8 - 1.2	7.1 - 10.6	~ 24 V - 240 V 50 - 400 Hz (- 15 %, + 10 %)	230 V 50/60 Hz (- 15 %, + 10 %)
2 x (0.5 - 1.5)	2 x (0.5 - 1.5)	20 - 16	 Z2	0.8 - 1.2	7.1 - 10.6	~ 24 V - 240 V (- 15 %, + 10 %)	

→ Each terminal must not be assigned cables with different cross-sections.

## HAND

### EMT6-DB, EMT6-DB (230 V)

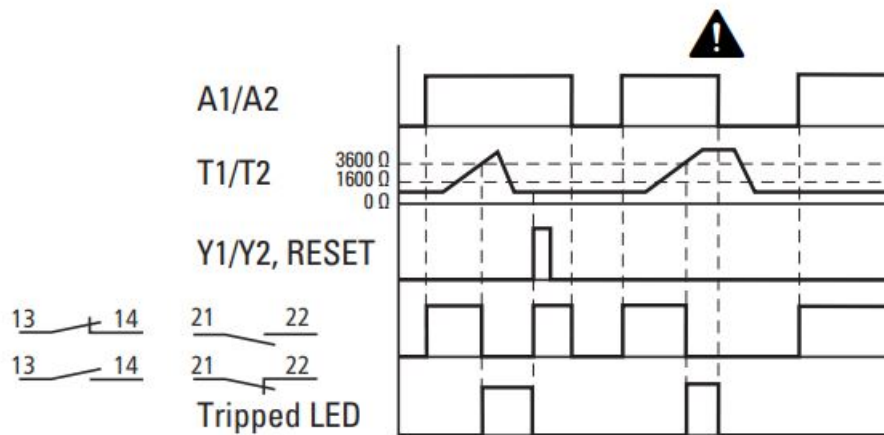


#### ⚠ DANGER

Danger to personnel and machines. In function "HAND" the released relay switches on automatically after a voltage dip.

## AUTO


### EMT6, EMT6 (230 V), EMT6-DB, EMT6-DB (230 V)

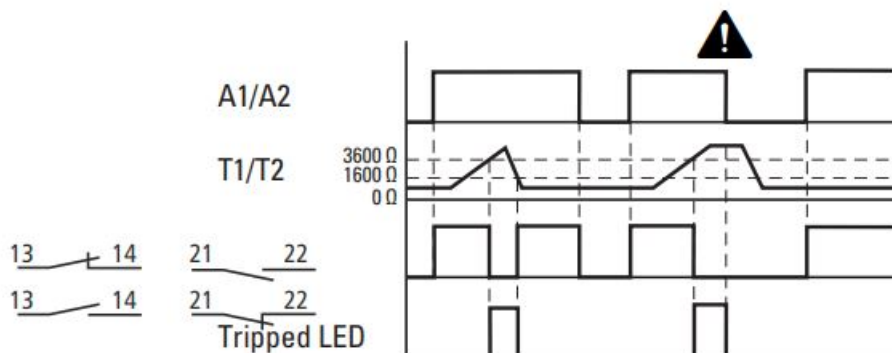

#### ⚠ DANGER

Danger to personnel and machines. In function "AUTO" machines can restart automatically after a release. EMT6 and EMT6 (230 V) can only be operated in function "AUTO".

## Test/Reset

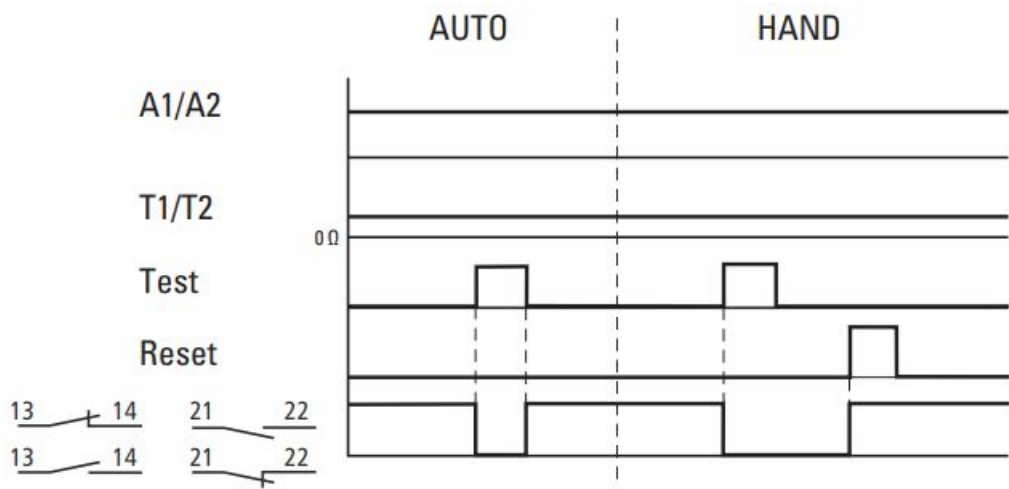

#### ⚠ DANGER

EMT6 and EMT6 (230 V) can only be operated in function "AUTO"

EU: Eaton Industries GmbH, Hein-Moeller-Straße 7-11, 53115 Bonn, Germany

UK: Eaton Electric Ltd., P.O. Box 554, Abbey Park, Southampton Road, Titchfield, PO14 4QA, United Kingdom

USA: [Eaton.com/eatoncare](https://eaton.com/eatoncare)

+1 877-386-2273

[Eaton.com/contacts](https://eaton.com/contacts)

[Eaton.com/aftersales](https://eaton.com/aftersales)

[Eaton.com/documentation](https://eaton.com/documentation)

© 2022 Eaton Industries GmbH



02/22 IL121016ZU

[Eaton.com/recycling](https://eaton.com/recycling)

## Documents / Resources



[EATON EMT6-DB Thermistor Overload Relay](#) [pdf] Instruction Manual

EMT6-DB Thermistor Overload Relay, EMT6-DB, Thermistor Overload Relay, Overload Relay, Relay