



ECG EWTI 71120 Top Loading Washing Machine Instruction Manual

[Home](#) » [ECG](#) » ECG EWTI 71120 Top Loading Washing Machine Instruction Manual 

ECG EWTI 71120 Top Loading Washing Machine



Contents

1 SAFETY INSTRUCTIONS

1.1 Read carefully and save for future use!

2 PRODUCT DESCRIPTION

3 INSTALLATION

3.1 Place of installation

3.2 Unpacking the washing machine

3.3 Levelling the washing machine

3.4 Connecting the supply hose

4 USE

4.1 Quick start

4.2 Clothing care symbols

4.3 Detergent dispenser

5 Control panel

5.1 A Display Washing time End of cycle Start-up delay time Error B Prewash C Extra soaking D Child lock E Door lock Programs table

5.2 EWT 70120

6 Additional functions

7 CLEANING AND MAINTENANCE

7.1 Cleaning the drain pump filter

8 TROUBLESHOOTING

9 TECHNICAL SPECIFICATIONS

9.1 DISPOSAL OF PRODUCTS AT THE END OF LIFETIME

10 CUSTOMER SERVICE

11 Documents / Resources

11.1 References

12 Related Posts

SAFETY INSTRUCTIONS

Read carefully and save for future use!

Warning: The safety measures and instructions, contained in this manual, do not include all conditions and situations possible. The user must understand that common sense, caution and care are factors that cannot be integrated into any product. Therefore, these factors shall be ensured by the user/s using and operating this appliance. We are not liable for damages caused during shipping, by incorrect use, voltage fluctuation or the modification or adjustment of any part of the appliance.

Follow the instructions in this manual. Before using for the first time, read the entire written instructions carefully and keep them for future reference.

To protect against a risk of fire or electric shock, basic precautions shall be taken while using electrical appliances, including the following:

1. Make sure that the voltage in your outlet corresponds to the voltage indicated on the type plate of your appliance. To ensure your safety, insert the plug of the power cord into a properly grounded three-prong socket installed in accordance with the applicable Czech Technical Standard in accordance with the manufacturer's instructions and local safety regulations.
2. Do not operate the device if the cord is damaged. Entrust the connection of the appliance to the power supply and the water connection, any repairs or adjustments, including the replacement of the power cable, to an authorized service center! Do not remove the protective covers from the appliance; there is a risk of electric shock!
3. Defective parts may only be replaced with original spare parts. Only these parts are guaranteed by the

manufacturer to fully meet safety requirements.

4. There must always be access to a power socket so that the washing machine can be disconnected from the mains at any time.
5. Improperly performed repairs can expose the user to significant hazards for which the manufacturer is not liable.
6. Repairs may only be carried out by a qualified person and a designated service provider.
7. In the event of a fault or during cleaning and maintenance, the washing machine is only electrically disconnected from the mains when:
 - the mains plug of the washing machine is pulled out of the socket, or
 - the circuit breaker of the house electrical installation is switched off, or
 - the screw-in fuse for the house electrical system is completely unscrewed.
8. Do not plug and unplug the power cord from the outlet using wet hands. You will avoid risk of electric shock.
9. Do not touch the appliance with wet hands or feet.
10. The power cord must remain accessible once the device is installed. Do not shorten the cable or use a power strip or extension cord. The power supply must not touch hot parts or lead over sharp edges (risk of fire due to overheating).
11. Do not turn the device on or off by plugging or unplugging the power cord. Do not remove the power cord from the outlet by yanking the cord. Unplug the power cord from the outlet by grasping the plug. After use, always switch off with the rotary selector to the OFF position, disconnect the appliance from the power supply and close the water supply.
12. Do not place the machine on carpets or similar surface that could block the ventilation openings in the base.
13. Do not insert any objects into the device or place any objects on the device (e.g. vases, cups, etc.).
14. Do not place the drain hose of your machine in the sink, buckets or basins.
15. Do not allow children to play with the appliance. Protect access to the machine from children and animals.
Children under the age of 3 should be denied access unless they are under constant supervision.
16. Keep away from children the small parts supplied in the bag with documentation.
17. Do not expose the appliance to direct sunlight, do not use it outside, and do not expose it to rain.
18. Do not keep flammable liquids close to the appliance.
19. Do not wash items that have been cleaned, washed, soaked or stained with flammable or explosive substances (wax, oil, paint, petrol, degreasers, chemical solvents, kerosene, etc.) in the washing machine. The use of highly flammable and explosive or toxic solvents is prohibited. Do not use gasoline, alcohol, etc. as detergent. There might be a fire or explosion. Carpet washing is prohibited.
20. Do not touch the washing machine with wet hands when in operation. Never open the detergent drawer or the washing machine door during washing and spinning.
21. Be careful when opening the door after using the steam function. There is a risk of burns from the steam and high temperatures on the surface of the drum and on the glass door. Take a step back and wait for the steam to dissipate.
22. During discharge, do not touch the drain hose and the discharged water. Water may reach high temperatures during the operation of the washing machine. There is a risk of burns.
23. In case of malfunction first unplug it from power and then close the water tap. Do not try to repair the appliance by yourself, contact an authorized service center.
24. Before using it for the first time, do not forget to REMOVE THE LOCKING SCREWS which are securing the washing machine drum during transportation. Damage cause by starting the washing machine with installed locking screws is not covered by the warranty.

25. The appliance is intended exclusively for domestic use and for washing only textile materials. In the event of commercial use or use not in accordance with this manual, the warranty becomes void.
26. This washing machine is intended for indoor use only.
27. Do not install the appliance in wet or damp rooms, as well as in rooms where appear explosive or corrosive gases.
28. This appliance is intended for use by children 8 years of age and older and persons with reduced physical or mental abilities or lack of experience and knowledge, provided they are under supervision or given instructions concerning use of the appliance in a safe manner and understand the potential hazards. Cleaning and maintenance by the user must not be done by children unless they are older than 8 years old and under supervision. Children under the age of 8 must keep away from the appliance and the power supply.
29. Any intervention in the appliance by a person other than an authorized service provider results in loss of warranty.
30. The warranty does not cover damage caused by outside effects (flood, chemicals, fire, etc.).
31. The manufacturer is not liable for any damage caused by improper grounding/use. **DANGEROUS VOLTAGE, RISK OF INJURY!**

ECOMMENDATION

- Before using your new washing machine, ask for help with the installation and putting in operation a qualified plumber or an authorized service center.
- Install the washing machine in a well ventilated area with adequate air circulation. Place the appliance so that it can fully open the washing machine door. The washing machine is not intended as a built-in or for integration into furniture sets.
- The ideal ambient temperature for the washing machine operation is 15°C to 25°C.
- Frozen hoses can rot and break. In areas where the temperature drops below freezing, the temperature may jeopardize the safe operation of electronic circuits
- We recommend that the first washing cycle be undergone without laundry for „90° white cotton“ so that you pour in the second compartment of the detergent drawer ½ measuring cup of detergent.
- Since long term contact with air can lead to deposition of detergent or fabric softener, pour the detergent and fabric softener into the compartment until just before the intended wash.
- We recommend using the prewash program only for heavily soiled laundry.
- The amount of laundry loaded into the washing machine must not exceed the maximum permitted amount. Otherwise, the washing machine will run in the safe mode.
- Use the washing machine only for laundry that is labelled by the manufacturer as suitable for machine washing.
- When using fabric softener and similar products in your machine, follow the manufacturer's recommendations for detergent/fabric softener.
- Make sure that there are no foreign objects in the pockets of the laundry pieces put in the washing machine (nails, needles, coins, lighters, matches, clips, etc). These foreign objects could damage the washing machine.
- Washing very dusty clothing damages your washing machine. Shake heavily dusty clothing before placing it in the washing machine.
- Never open the detergent drawer while the machine is running.
- Never force open the door of the washing machine while it is running.

- Before opening the door, make sure that no water remains in the drum. Do not open the washing machine door if you see water.
- At the end of the program, wait at least 2 minutes and then open the door.
- Sulphur in decolourants may cause corrosion. Therefore never use decolourants in the washing machine. Never use substances containing solvents (e.g. benzine) in the washing machine.
- If you are not using the washing machine for longer time, unplug it, close the water supply and leave the door open. The interior of your machine will stay dry and free of odours.
- After testing at the end of the manufacturing process in the machine might remain a small amount of water, which does not constitute a risk of damage to your machine.

Danger of flooding

- Use a new set of hoses included with the appliance.
- Do not reuse the old hoses set.
- Always disconnect the appliance from the power supply and turn off the water supply after use.
- Do not place the drain hose of your machine in the sink, buckets or basins.


Danger of fall or injury

- Do not step or sit on the washing machine. The top plate could break and you could injure yourself.
- Do not lean on the door. Do not force it closed. If it is difficult to close the door, make sure that there are not too many clothes in the washing machine or that they are well distributed.
- Arrange safely the hoses and power cable after installation. Trip and fall could cause injuries.
- Do not turn the washing machine upside down or on its side.
- Do not lift the washing machine by its protruding parts (detergent drawer, door). They could be damaged and cause injury.
- Handling the washing machine requires cooperation of at least two people.

Children's safety

- Children under the age of 3 should be denied access unless they are under constant supervision. Do not leave children without supervision close to the washing machine. Children could lock themselves inside the washing machine with fatal consequences.
- During the operation the glass door and the washing machine surfaces can be very hot. Protect small children and animals from contact with these surfaces.
- Keep the packaging materials away from the children. There is a risk of suffocation
- Swallowing detergents may cause poisoning and contact with skin or eyes may cause irritation. Keep detergents away from the children.

PRODUCT DESCRIPTION

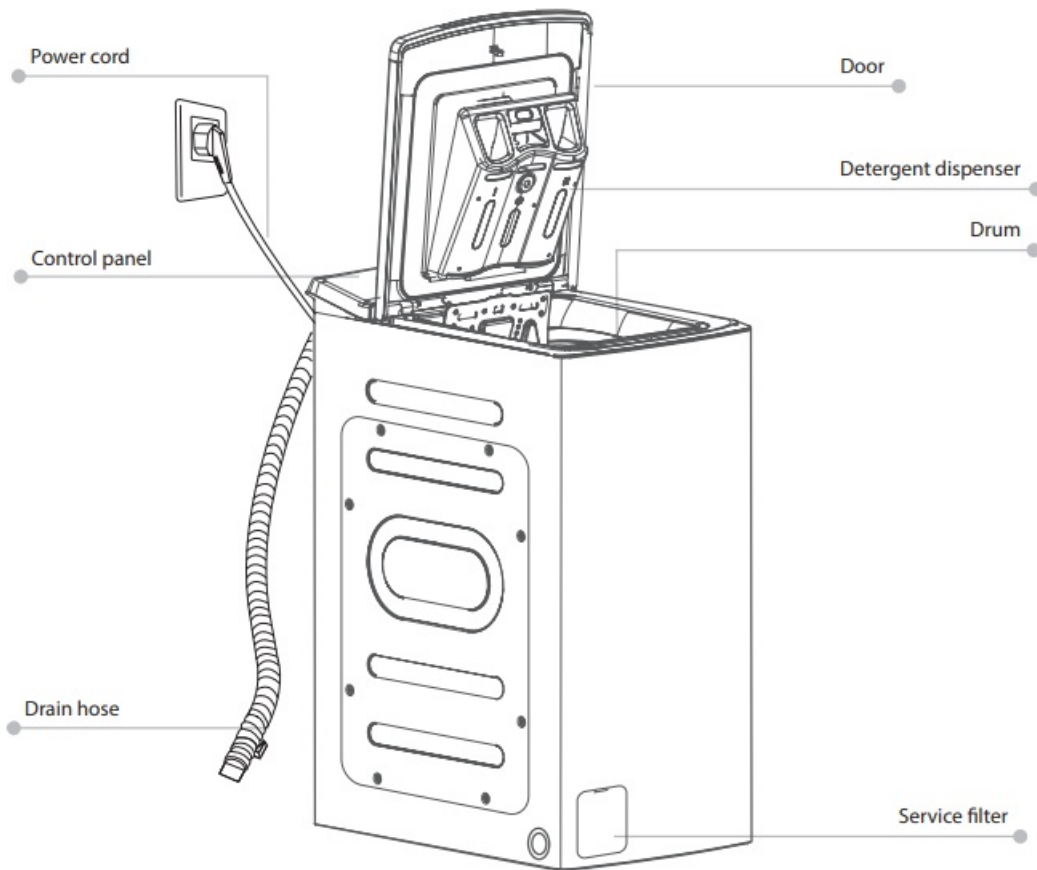

Note: The product description is for reference only, please refer to the actual product as standard.

Accessories

- Hole plugs for transport screws (4 pcs)
- Cold water supply hose
- Operating manual

INSTALLATION

Place of installation

Warning:

- Ensure that the installation site is stable.
- Make sure that the product is not standing on the power cord.
Only install the appliance in a location that meets the following conditions:
- Firm, dry and even surface.
- Away from sunlight.
- Adequate ventilation.
- Room temperature higher than 5 °C.
- At a sufficient distance from heat sources such as stoves, cookers, etc.

Unpacking the washing machine

Warning:

- Packaging material (e.g. foil, polystyrene) can be dangerous for children.
- There is a risk of suffocation! Keep the packaging materials away from the children.

1. Remove the cardboard box and polystyrene wrapping.
2. Pull out the washing machine and remove the base packaging. Make sure the small foam triangle has been removed together with the bottom one. If not, place the appliance side down and then manually remove the small foam insert from the bottom of the appliance.
3. Remove the tape securing the power cable and the drain hose.
4. Remove the hose from the drum.

Shipping screws removal


Before starting the washing machine, remove the 4 shipping screws and rubber washers from the back of the washing machine. If the screws are not removed, they can cause strong vibrations, noise and malfunction of the washing machine and will void the warranty.

1. Loosen the shipping screws by turning them counterclockwise with a suitable wrench.
2. Remove the transport screws.
3. Insert the plastic plugs provided in the accessories bag into the holes left after removing the screws. Shipping screws should be stored for future use.


Loosen the 4 transport screws with a spanner



Remove the screws including the rubber parts and store them for future use.

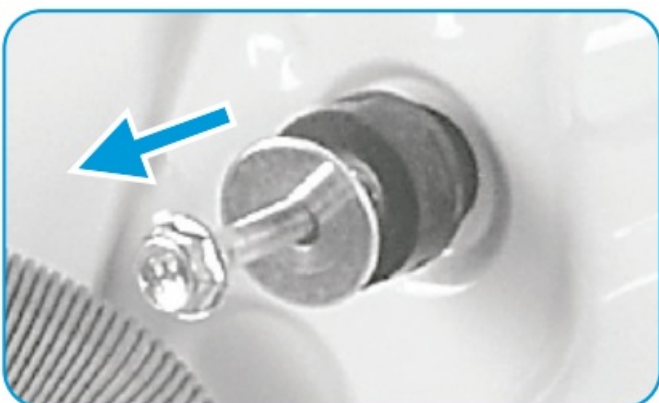

Seal the holes with plugs.

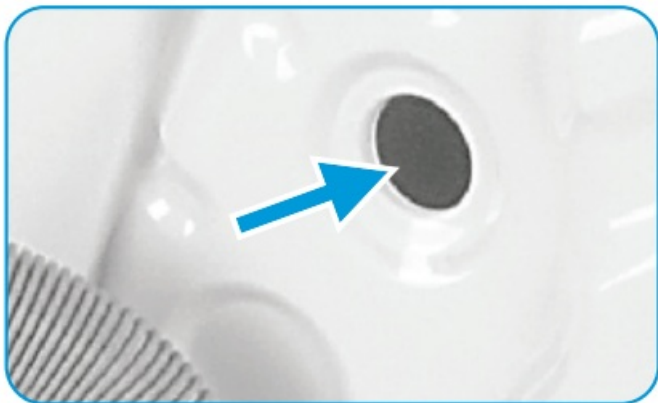

Levelling the washing machine

Warning:

- The locking nuts on all four feet must be screwed firmly to the frame of the washing machine.
1. Loosen the lock nut.
 2. Turn the foot until it reaches the floor.
 3. Adjust the position of the feet and secure the nuts with a spanner.
- Make sure the appliance is horizontal and stable.



Connecting the supply hose

Warning:


- To prevent leakage or water damage, carefully follow the instructions in this chapter.
 - Do not bend, squeeze or adjust the water supply hose.
- Connect the supply hose to the water inlet valve and to the cold water tap, see illustration. Tighten the hose by hand, do not use tools. Check that the connections are tight.



Connecting water drain hose

Connect the drain hose to the sink outlet elbow. Never try to extend the drain hose. Do not put the hose for draining water from the washing machine into a container, bucket or bathtub. Make sure that the drain hose is not bent, kinked, squashed or extended.

The drain hose must not be more than 100 cm from the ground.

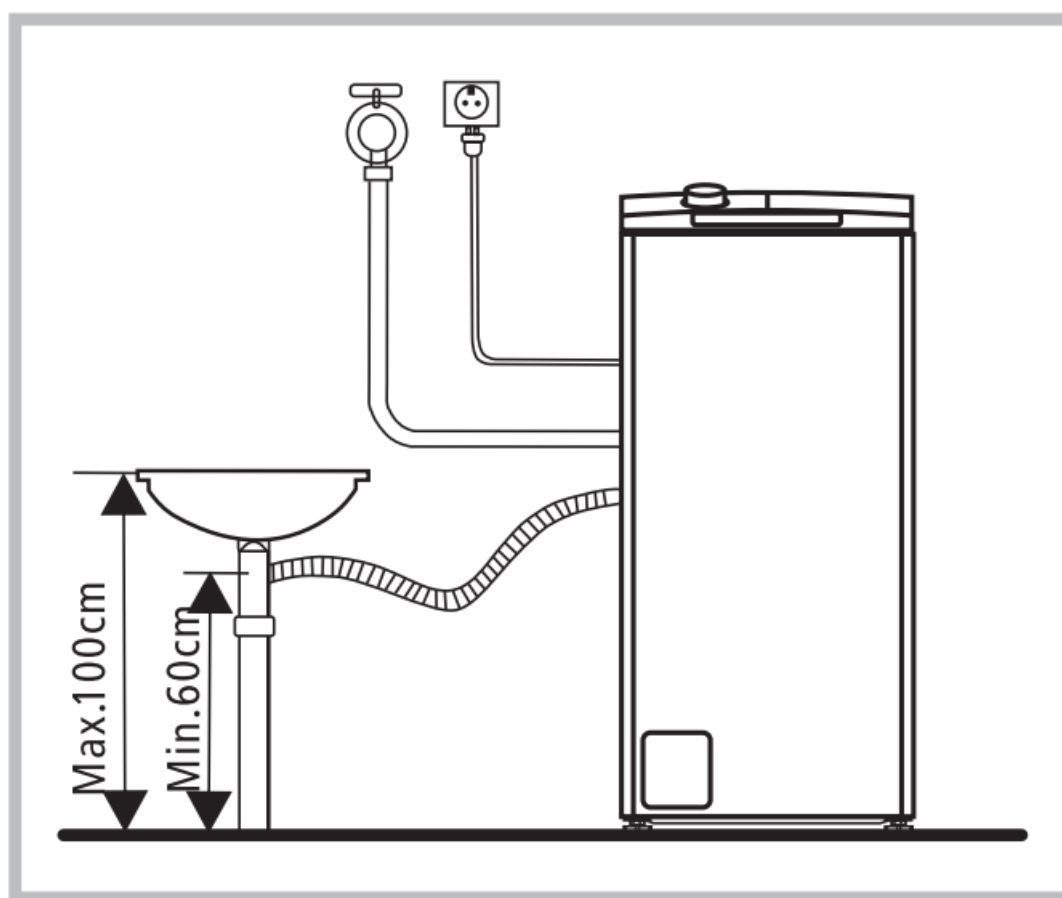

USE


Quick start

Warning:

- Before washing, make sure the washing machine is installed correctly.
- Your appliance has been thoroughly checked before leaving the factory. To remove water residues and neutralise any odours, we recommend cleaning the appliance before first use. For this reason, run the Cotton programme at 60 °C without laundry and detergent.


Before washing

1. Plug the washing machine into a socket.
2. Open the water tap.
3. Fill the washing machine with laundry.
4. Add detergent.
5. Close the drum door.
6. Close the machine door.

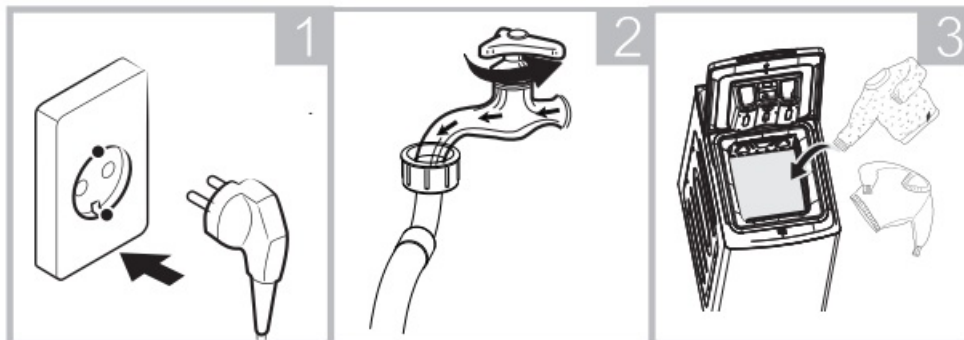


Note:

- For pre-wash machines, you need to add detergent in section I, see the table in the chapter “Detergent dispenser”.
- Make sure that the drum flaps are properly secured.
- All metal hooks must be properly hung inside the tailgate.
- Before each wash, check the drum to make sure it is turning smoothly.

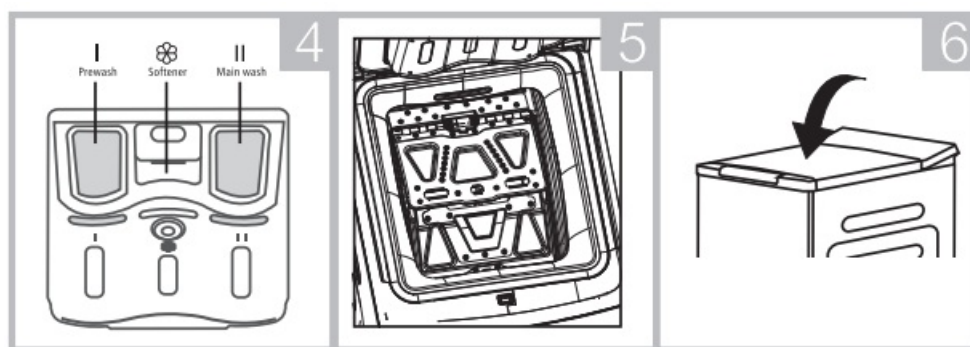

Washing

1. Select a program.
2. Select an additional function.
3. Start the wash.

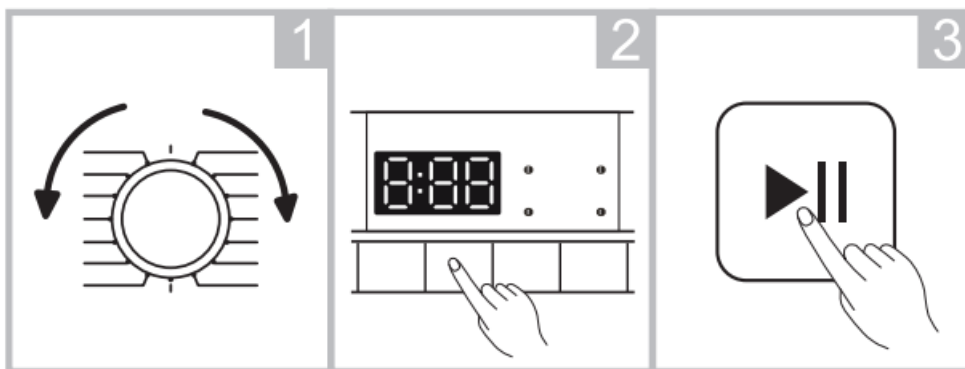

Note:

- If you want to use the program by default, you can skip step 2.

After the end of the programme

The display will show “End”.

Before each washing

- The air temperature in the room where the washing machine is operated should be between 6 and 40 °C. Use at temperatures below 0 °C may damage the inlet valve and drain system. If the appliance is placed in a freezing environment, it should be brought to normal ambient temperature before use to ensure the supply and drain hoses are thawed.
- Check the care labels and detergent instructions before washing. Use a non-foaming or less foaming detergent suitable for machine washing.



Laundry preparation

Follow the instructions of the labels on the garment.

Divide the laundry according to type (cotton, synthetics, delicate, wool, etc.), washing temperature (cold, 30 °, 40 °, 60 °, 90 °) and degree of soiling (slightly soiled, soiled, heavily soiled).

Never wash coloured and white laundry together.

Dark fabrics may contain excess dye and should be washed separately several times.

Make sure there are no metal objects on the laundry or in the pockets; if so, remove them.

ATTENTION: The warranty does not cover malfunctions that occur due to damage by foreign material.














 







Close zippers, all hooks and eyelets.

Remove the metal or plastic hooks of the curtains or put them in a washing net or bag.

Turn fabrics such as pants, knits, T-shirts and sweatshirts inside out.

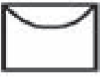Wash socks, handkerchiefs and other small items in a protective net.

Clothing care symbols

 Normal wash	 Maximum washing temperature is 90°C	 Maximum washing temperature is 60°C
 Maximum washing temperature is 30°C	 Manual washing	 Washing prohibition
 Can be bleached	 No bleach	 Maximum ironing temperature 110°C
 Maximum ironing temperature 150°C	 Maximum ironing temperature 200°C	 Do not iron
 Can be dry cleaned	 Dry cleaning prohibition	 Unfold flat
 Hang when wet	 Hang to dry	 Do not tumble dry
 Can be cleaned with gasoline, alcohol, and trifluoro trichloroethane	 Can be cleaned with benzene, perchloroethylene	 Can be cleaned with perchloroethylene, R11, R113 and gasoline

NOTE: Be careful not to exceed the maximum load of the drum, as this would lead to poor washing results and wrinkling of the laundry. Information on the capacity of the washing machine can be found in the table of washing programs.


The following table shows the approximate weight of common types of laundry:

TYPE OF LAUNDRY	WEIGHT (g)
Towel	200
Bed linen	500
Bathrobe	1,200
Blanket	700
Pillow case	200
Underwear	100
Tablecloth	250

Warning:


- Do not wash garments that have been cleaned, washed, soaked or coated with flammable or explosive substances such as wax, oil, paint, gasoline, alcohol, kerosene and other flammable materials.
- Washing individual items of clothing can easily cause uneven loading of the drum and cause an error. It is therefore recommended to add one or two more loads of laundry to the wash to ensure a smooth spin.
- Do not wash or wipe waterproof covers and clothing or mats or carpets.

Detergent dispenser

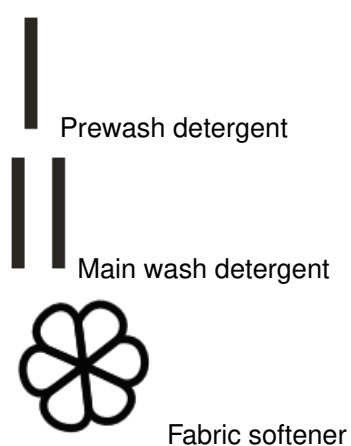





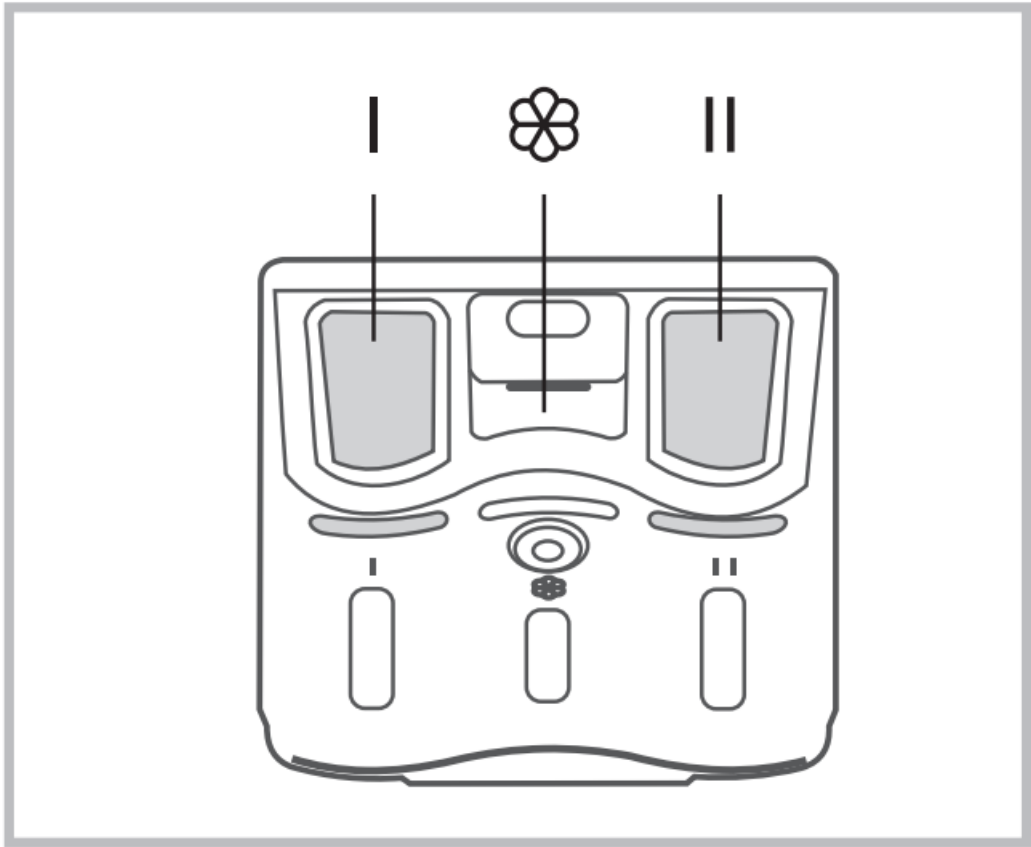
















Warning:

- Do not exceed the MAX mark when refilling detergent or fabric softener.



Programme	I	II	III	Programme	I	II	III
Antiallergic		●	○	Centrifuging/discharging			
Cotton	○	●	○	Washing/centrifuging			○
20 °C	○	●	○	Baby clothes	○	●	○
Mix	○	●	○	Sports	○	●	○

Programme				Programme			
Wool				Bedding			
Synthetics				Quick 45'			
ECO 40-60				Quick 15'			
Drum cleaning				 = mandatory  = optional			

Detergent usage tips

Suitable detergent	Washing programmed	Washing temperature	Type of linen and textiles
Strong detergent and bleach.	Cotton, ECO 40-60, Mix	20/30/40/60	White linen made of cotton or linen resistant to boiling.
Detergent for colored laundry without bleach	Cotton, ECO 40-60, Mix	Cold/20/30/40	Colored linen made of cotton or linen.
Gentle detergent for colored laundry without bleach	Synthetics	Cold/20/30/40	Colored underwear made of easy-care fibers or synthetic materials
Soft detergent	Synthetics	Cold/20/30/40	Fine fabrics, silk, viscose.
Wool detergent	Wool	20/30	Wool.

Adding detergent to the washing machine

The amount of detergent used in the washing machine depends on the following criteria:

- If the laundry is only slightly soiled, do not prewash it. Put a small amount of detergent in compartment II of the detergent drawer.
- If the laundry is very dirty, select the pre-rinse programme and put $\frac{1}{4}$ of the detergent in compartment I of the

detergent drawer and the rest in compartment II.

- Use detergents designed for automatic washing machines in the washing machine. Follow the manufacturer's instructions regarding the amount of detergent to be used.
- More detergent is needed in areas with hard water.
- The amount of detergent required increases with larger loads of laundry.
- Place fabric softener in the middle compartment of the detergent drawer.
- Do not exceed the MAX mark when refilling detergent or fabric softener.
- Thick fabric softeners or detergents can cause the socket to clog, so dilute them with a little water.

If there is too much detergent:


- A large amount of foam is produced during washing.
- The laundry will be badly soaped.

If the amount of detergent is insufficient:

- The laundry will turn gray.
- Scale will build up on the drum, heating element and/or laundry.

Control panel

Note: The picture is illustrative.

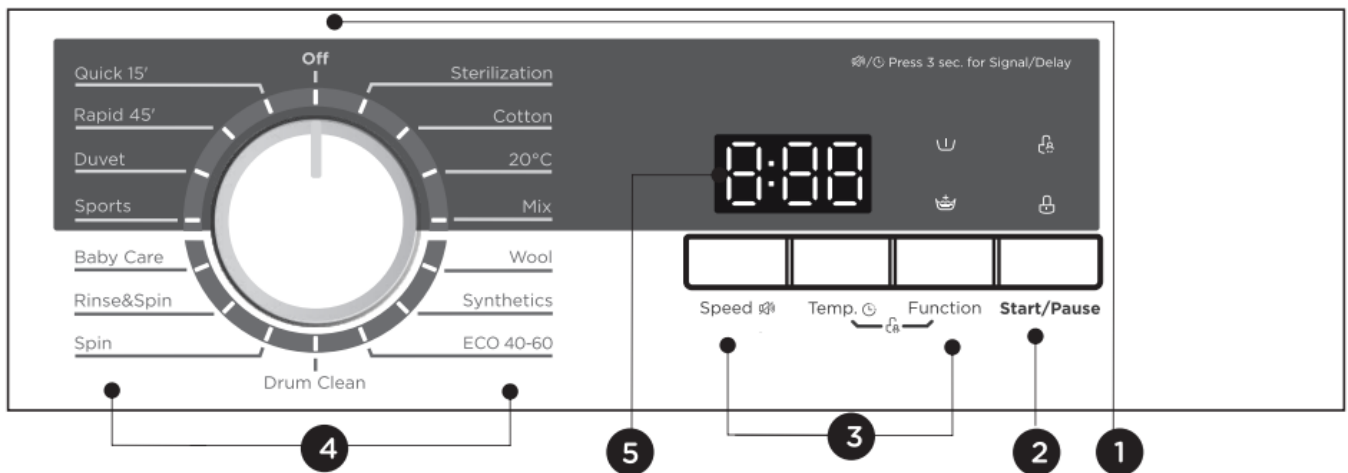

1. Position "OFF"

If the control wheel is in this position, the washing machine is switched off.

2. Start/Pause

Press this button to start or pause the wash cycle.

3. Additional functions

Used to select an additional function. When a function is selected, this button lights up.

4. Programme

Selection of the washing programme according to the type of laundry.

5. Display

The display shows the settings, estimated time remaining, options and status messages of the washing machine. The display remains on during the wash cycle.

A Display
Washing time

1:25

End of cycle

End


Start-up delay time

2H

Error

E30

- B Prewash
- C Extra soaking
- D Child lock
- E Door lock

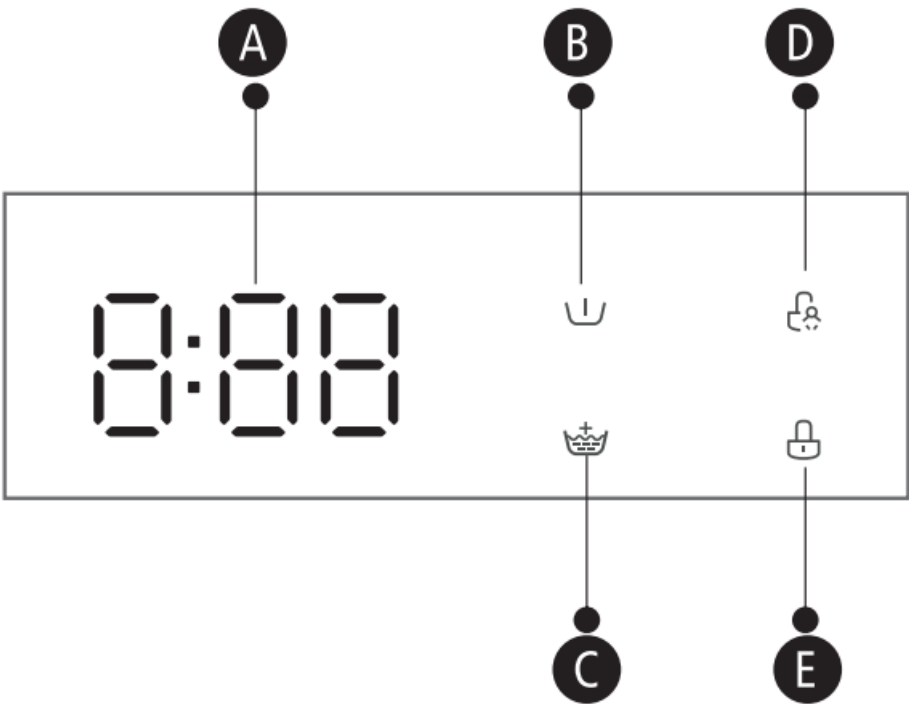

Programs table

Programme	Load (kg)		Duration	
	EWT70120	EWTI 71120	EWT70120	EWTI 71120
Antiallergic	3.5	3.5	2:27	2:27
Cotton	7.0	7.0	2:40	2:40
20°C	3.5	3.5	1:01	1:01
Mix	3.5	3.5	1:20	1:20
Wool	2.0	2.0	1:07	1:07
Synthetics	3.5	3.5	2:20	2:20
ECO40-60	7.0	7.0	3:18	3:28
Self cleaning	–	–	1:18	1:18

Programme	Load (kg)		Duration	
	EWT70120	EWTI 71120	EWT70120	EWTI 71120
Centrifuging/ discharging	7.0	7.0	0:12	0:12
Washing/ centrifuging	7.0	7.0	0:20	0:20
Baby clothes	7.0	7.0	2:01	2:01
Sports	3.5	3.5	0:45	0:45
Bedding	2.5	2.5	1:27	1:27
Quick45'	2.0	2.0	0:45	0:45
Quick 15'	2.0	2.0	0:15	0:15

EWT 70120

Programme	Rated capacity (kg)	Program length (h:min)	Power consumption kWh/cycle	Water consumption (l/cycle)	Max. temperature (°C)	Residual moisture content (%) 1 000 rpm
Quick 15 min.	2.0	0:15	0.035	31	Cold	70%/800
20°C	3.5	1:01	0.213	43	20	65%/1000
Cotton (60 °C)	7.0	2:45	1.385	65	60	65%/1000
Synthetics	3.5	2:20	0.678	43	40	65%/1000
Mix	7.0	1:20	0.742	65	40	65%/1000
ECO40-60	7.0	3:18	0.907	52.0	35	62.9%/1200
	3.5	2:42	0.622	43.0	32	62.9%/1200
	2.0	2:42	0.433	37.0	23	62.9%/1200

EWTI 71120

Programme	Rated capacity (kg)	Program length (h:min)	Power consumption kWh/cycle	Water consumption (l/cycle)	Max. temperature (°C)	Residual moisture content (%) 1 000 rpm
Quick 15 min.	2.0	0:15	0.035	31	Cold	70%/800
20°C	3.5	1:01	0.177	43	20	65%/1000
Cotton (60 °C)	7.0	2:45	1.289	65	60	65%/1000
Synthetics	3.5	2:20	0.596	43	40	65%/1000
Mix	7.0	1:20	0.696	65	40	65%/1000

ECO40-60	7.0	3:28	0.953	51.9	42	62.9%/1200
	3.5	2:42	0.455	43.6	30	62.9%/1200
	2.0	2:42	0.226	38.1	22	62.9%/1200

- The above information is for guidance only and is subject to change due to varying actual conditions of use.
- The data given for programmes other than the ECO 40-60 programme are indicative only.
- Data according to EN 60456:2016/prA2019 and (EU)2019/2014, (EU)2019/2023: EU energy efficiency class is: C (for model EWTI 71120), D (for model EWT 70120)
- Energy testing programme: ECO 40-60. Other settings unchanged.
- Half load for a washing machine with a capacity of 7.0 kg: 3.5 kg.
- Quarter load for a washing machine with a capacity of 7.0 kg: 2.0 kg.
- The highest temperature the laundry will reach in a wash cycle for at least 5 minutes.
- The residual moisture content after the wash cycle in percentage of water content and the spin speed at which this moisture content was achieved.
- The ECO 40-60 programme can wash normally soiled cotton clothes that are declared washable at 40 °C or 60 °C together in one wash cycle. This programme serves to assess compliance with Regulation (EU) 2019/2023.
- The most energy-efficient programmes are generally those that run at lower temperatures and for longer durations.
- Filling the household washing machine up to the capacity indicated for the respective programmes will help save energy and water.
- Noise and residual moisture are affected by the spin speed. The higher the centrifugation speed in the centrifugation phase, the higher the noise level and the lower the residual moisture.

Description of programmes

Select the washing programme according to the type of laundry.

Cotton	Wear-resistant, heat-resistant fabrics made of cotton or linen
Synthetics	Washing synthetic items such as shirts, coats, blends. When washing knitted textiles, you need to reduce the amount of detergent, as it easily forms foam and bubbles.
Baby clothes	When washing baby clothes, great emphasis is placed on gentle care that will not irritate the baby's skin.
Quick 45'	Quickly wash small amounts of not very dirty clothes
Mix	Mixed underwear consisting of fabrics made of cotton and synthetics
Drum cleaning	The washing machine is equipped with a special programme for automatic cleaning of the drum and pipes. It uses sterilization at a high temperature of 90°C to make washing clothes more environmentally friendly. You cannot add laundry in this programme. If the right amount of chlorine bleach is added, the cleaning effect will be higher. The customer can use this programme on a regular basis as needed.
20 °C	When washing brightly colored clothes, it can better protect the colors.
Quick 15'	Extra short programme suitable for small quantities of lightly soiled laundry
Wool	Wool fabrics or fabrics with wool blends that can be hand or machine washed. Particularly gentle washing programme to prevent shrinkage, longer breaks in the programme.
Centrifuging/discharging	Extra spinning with selectable spin speed.

Washing/centrifuging	Extra soaking with centrifugation.
Sports	Laundry of sports and outdoor clothing.
Bedding	This programme is specially designed for washing bedding.
Antiallergic	Consistent washing at 70 °C ensures sterilising effects. A laundry weight of less than 5 kg is recommended.
ECO40-60	Default temperature 40 °C, cannot be changed. Suitable for laundry at temperatures of approximately 40 to 60°C.

Warning:

- If the power supply is interrupted during machine operation, the selected programme is stored in a special memory. When the power is restored, the machine will resume the programme.

Additional functions

Programme	Default temperature (°C)	Available additional functions
Antiallergic	70	Delayed start, Extra soak
Cotton	40	Delayed start, Extra soak, Pre-wash
20 °C	20	Delayed start, Extra soak, Pre-wash
Mix	40	Delayed start, Extra soak, Pre-wash
Wool	40	Delayed start, Extra soak
Synthetics	40	Delayed start, Extra soak, Pre-wash
ECO 40-60	–	Delayed start
Self cleaning	90	Delayed start
Centrifuging/ discharging	–	Delayed start
Washing/ centrifuging	–	Delayed start, Extra soak
Baby clothes	60	Delayed start, Extra soak, Pre-wash
Sports	20	Delayed start, Extra soak, Pre-wash
Bedding	40	Delayed start, Extra soak
Quick 45'	40	Delayed start, Extra soak
Quick 15'	Cool	Delayed start

Prewash

Extra wash function before the main wash cycle to increase washing performance.

Note: Detergent must be added to Section I.

Extra soaking

When this function is selected, the laundry is also washed.



Delayed start

1. Choose a program
2. Press the [Temp.] button for 3 seconds to select a delay time in the range of 0-24 h.
3. Press the [Start/Pause] button to activate snooze.

To cancel the delayed start, press the [Temp.] before starting the program until 0 h appears on the display. If the programme has already been started, switch the appliance off, then switch it on and select a new programme.



Speed

If necessary, the speed can be adjusted by pressing the Speed button in the following steps:

For washing machines with a speed of 1200 rpm: 0-400-600-800-1000-1200

For washing machines with a speed of 1300 rpm: 0-400-600-800-1000-1200-1300




Temperature

If necessary, the washing temperature can be adjusted by pressing the temperature button in the following steps: Cold – 20 °C – 30 °C – 40 °C – 60 °C – 90 °C.



Child lock

This feature is designed to prevent children from misusing the controls.

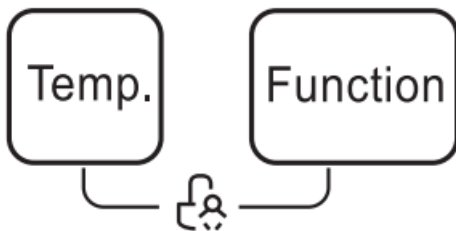

Press the [Temp.] and [Function] buttons simultaneously for 3 seconds until the beep sounds. The child lock light will come on.

When the child lock is activated, the display alternates between “CL” and the remaining time.

Pressing any other button will cause the child lock indicator to flash.

When the program is finished, the display alternates between “CL” and “END”. The child lock deactivates the function of all buttons except the on/off button and the child lock button! The child lock can only be deactivated by pressing the two buttons [Temp.] and [Function] simultaneously! Deactivate the child lock before selecting a new programme!



Mute the buzzer

1. Select the desired programme.
2. Press the [Speed] button for 3 seconds, the buzzer will go silent.

To activate the buzzer function, press the button again for 3 seconds. The setting will be preserved until the next launch.

Attention! When the buzzer function is muted, the sounds will not automatically turn on by themselves.

CLEANING AND MAINTENANCE

Warning:

- Before starting maintenance, disconnect the appliance from the mains and turn off the tap.

Cleaning the outside of the washing machine

Proper maintenance of your washing machine can extend its life. If necessary, the surface can be cleaned with diluted non-abrasive neutral detergents. If water overflows, wipe it off immediately with a damp cloth. Do not use any sharp objects.

Formic acid and its diluted solvents or equivalent substances such as alcohol, solvents or chemical products are prohibited.


Drum cleaning

Rust left by metal objects inside the drum is immediately removed with chlorine-free cleaning agents. Never use wire. Do not put clothes in the washing machine while the drum is being cleaned.


Cleaning the inlet filter

- Decreasing water flow is a sign that the filter needs to be cleaned.

1. Turn off the tap and remove the supply hose.

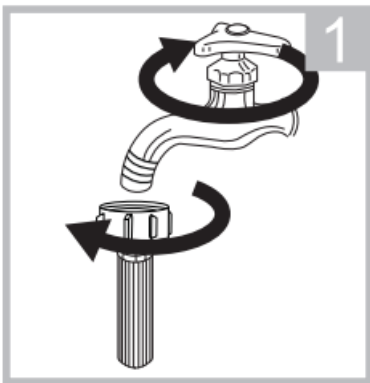

2. Clean the filter with a brush.

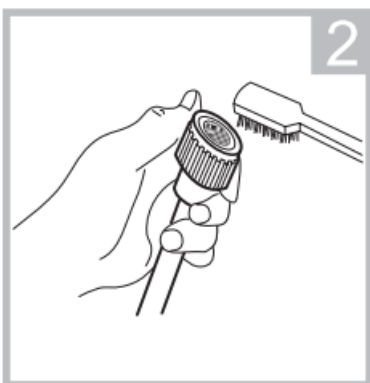

3. Unscrew the water supply hose from the back of the machine. Pull the filter out with the pliers.




4. For example, use a toothbrush to clean it.



5. Reinstall the filter on the water inlet and reconnect the inlet hose.
6. To ensure normal operation of the appliance, clean the inlet filter every 3 months.

Cleaning the detergent dispenser


1. Press the arrow on the detergent dispenser cover inside the detergent dispenser.

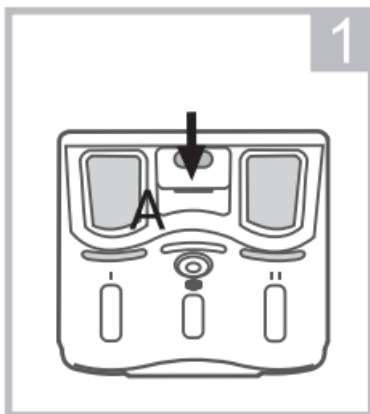

2. Lift the clip up, remove the detergent dispenser cover and wash all the grooves with water.



3. Replace the fabric softener dispenser cover and insert the dispenser back in.

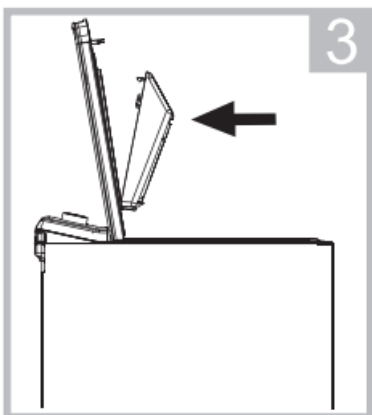

Warning:


- Do not use abrasive or corrosive products to clean plastic parts.
- To ensure normal operation of the appliance, clean the detergent dispenser every 3 months

Cleaning the drain pump filter


Warning:

- Make sure the washing machine has completed the wash cycle and is empty. Before cleaning the drain pump filter, switch off the washing machine and unplug it from the power outlet.
- Watch out for the hot water. Let the water cool. Danger of scalding!
- Clean the filter regularly every 3 months to ensure normal operation of the appliance.


1. Open the bottom cap.

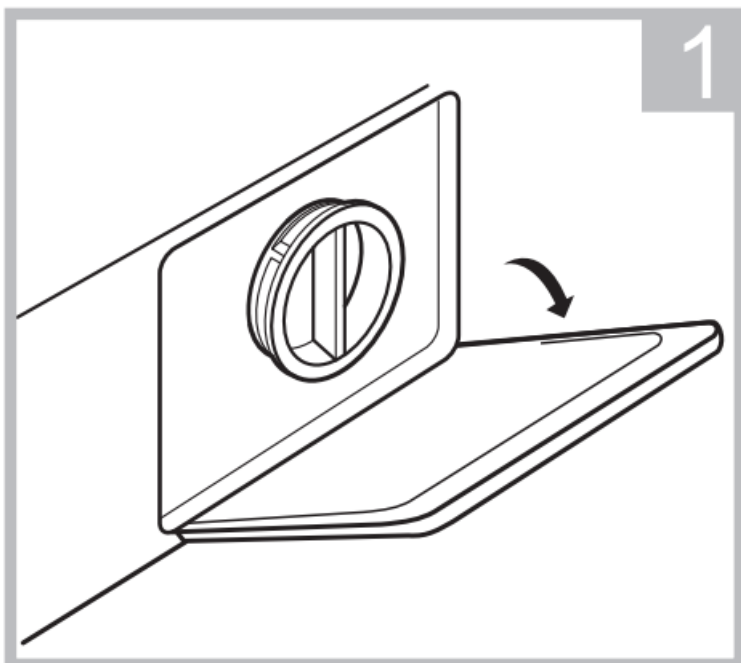


2. Open the filter by turning it counterclockwise.

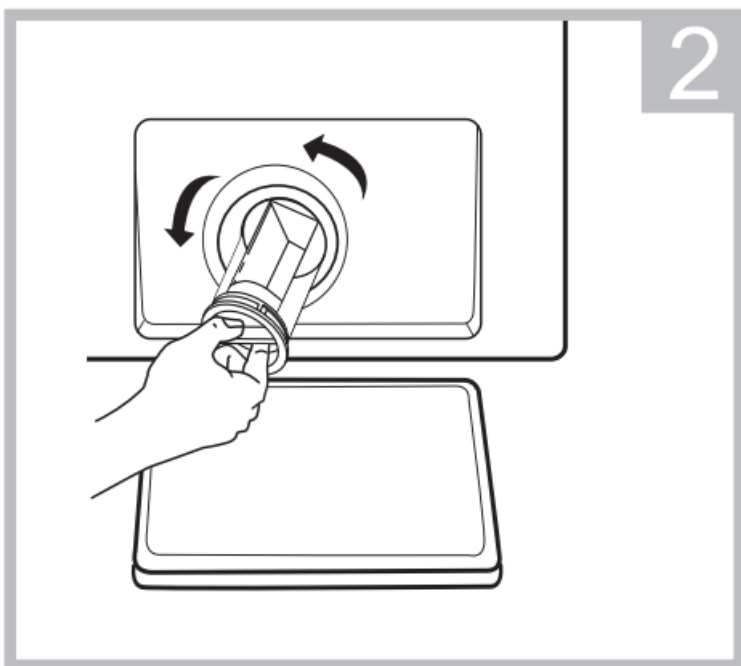

3. Remove dirt and foreign objects.

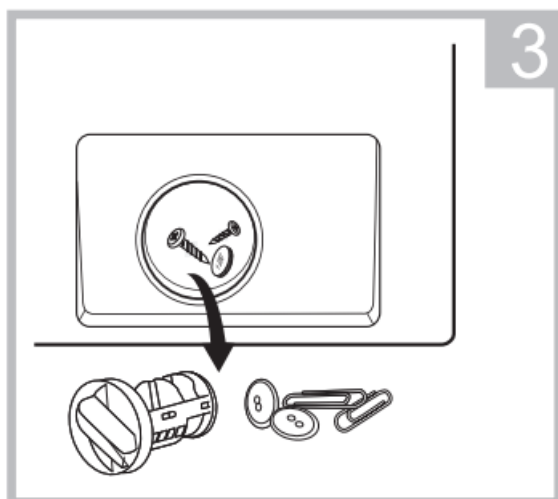

4. Close the bottom cap

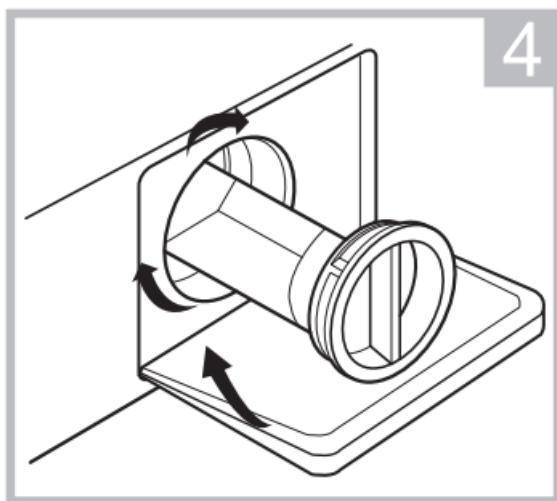

Warning:

- When the appliance is in operation and depending on the selected programme, there may be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has completed the cycle and is empty. When replacing the cover, make sure it is tightened securely.

TROUBLESHOOTING

Description	Cause	Solution
The washing machine cannot be started.	The door is not closed properly.	Start the washing machine after closing the door. Check that the laundry is not stuck in the drum.
The door can't be opened.	The washing machine's safety lock is active.	Disconnect the power and restart the washing machine.
Water leakage	The connection between the inlet pipe or outlet hose is not tight.	Check and fix the water pipes. Clean the drain hose.
Detergent residue on the laundry or in the drum.	The detergent is too thick.	Clean and wipe the detergent dispenser.
The indicator or display is not lit.	Power is disconnected or the electronics have malfunctioned.	Check that the power is not switched off and that the plug is correctly connected.
Unusual noise.		Check that the fasteners (screws) have been removed. Install the refrigerator on a flat and solid surface.

Error messages on the display

Error code	Cause	Solution
E30	The door is not closed properly	Start the washing machine after closing the door. Check that the laundry is not stuck in the drum.
E10	Water injection problem.	Check that the water pressure is not too low. Straighten the supply hose. Check the inlet valve filter for blockages.
E21	It takes too long to drain the water.	Check that the drain hose is not blocked.
E12	Water overflow.	Switch the washing machine off and on again.
EXX	Others.	Please try starting the wash again. If problems persist, contact customer service.

TECHNICAL SPECIFICATIONS

	EWT 70120	EWTI 71120
Built-in appliance	No	No
Maximum load capacity (dry laundry) kg	7	7
Maximum speed/min.	1200	1200
Dimensions (H × W × D) [mm]	875 × 400 × 610	875 × 400 × 610
Nominal voltage	220–240 V ~ 50 Hz	220–240 V ~ 50 Hz
Power input	2100 W	2000 W

	EWT 70120	EWTI 71120
Lid latch	10 A	10 A
Water pressure (MPa) min./max.	0.1 Mpa / 1 MPa	0.1 Mpa / 1 MPa

USE AND DISPOSAL OF WASTE

Wrapping paper and corrugated paperboard – deliver to scrapyard. Packing foil, PE bags, plastic elements – throw into plastic recycling containers.

DISPOSAL OF PRODUCTS AT THE END OF LIFETIME

Disposal of electric and electronic equipment (valid in EU member countries and other European countries with an implemented recycling system)

The represented symbol on the product or package means the product shall not be treated as domestic waste. Hand over the product to the specified location for recycling electric and electronic equipment. Prevent negative

impacts on human health and the environment by properly recycling your product. Recycling contributes to preserving natural resources. For more information on the recycling of this product, refer to your local authority, domestic waste processing organization or store, where you purchased the product.



This product complies with the requirements of the EU directives on electromagnetic compatibility and electrical safety and the issue of heavy metals in electrical and electronic equipment.

Furthermore, it meets the relevant energy intensity.

The operating manual is available at www.ecg-electro.eu.

Changes of text and technical parameters reserved.

Contact details for professional service for this product can be found in the enclosed Warranty Card or on the website www.ecgelectro.eu.

- The warranty on this product is 24 months.
- Spare parts listed in EU 2019/2023 are available for 10 years.
- You can access the product database where the information for this product according to EU 2019/2014 is stored by reading the QR code on the energy label.

CUSTOMER SERVICE

Deutsch

K+B Progres, a.s/AG.

Barbaraweg 2, DE-93413 Cham

Bei Beschwerden rufen Sie die Telefonnummer

09971/4000-6080 an. (Mo – Fr 9:00 – 16:00)

Čeština

K+B Progres, a.s.

U Expertu 91 tel.: +420 272 122 111

250 69 Klíčany e-mail: ECG@kbexpert.cz









www.ecg-electro.eu



ECG

M Y W A Y O F H O M E

Documents / Resources

  EWT 70120 EWTI 71120      	ECG EWTI 71120 Top Loading Washing Machine [pdf] Instruction Manual EWT 70120, EWTI 71120, EWTI 71120 Top Loading Washing Machine, EWTI 71120, Top Loading Washing Machine, Loading Washing Machine, Washing Machine, Machine
---	--

References

-  [Educatief - Jumbo](#)
-  [gvs - pl™ekklady technicky zamÄ›l™enÄ~ch textŮ a dalŮ~Ä zpracovÄ~nÄ](#)
-  [ECG - My way of home](#)

Manuals+.