

Contents [[hide](#)]

 
 
 
- [1 ECHTPOWER SP02 Wireless Controller](#)
- [2 PRODUCT OVERVIEW](#)
- [3 How to Connecting](#)
- [4 How to Set Turbo Function](#)
- [5 Battery](#)
- [6 Automatic shutdown](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



ECHTPOWER SP02 Wireless Controller



PRODUCT OVERVIEW

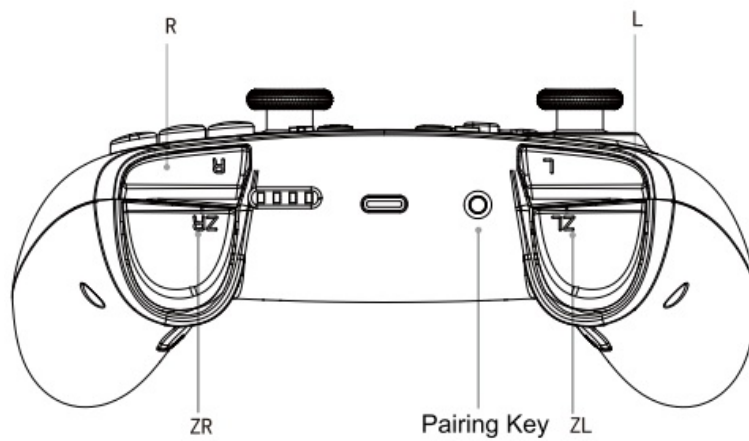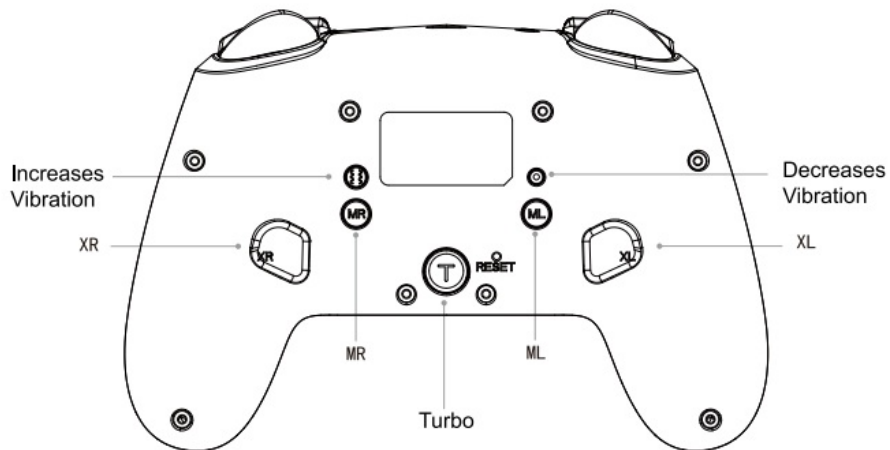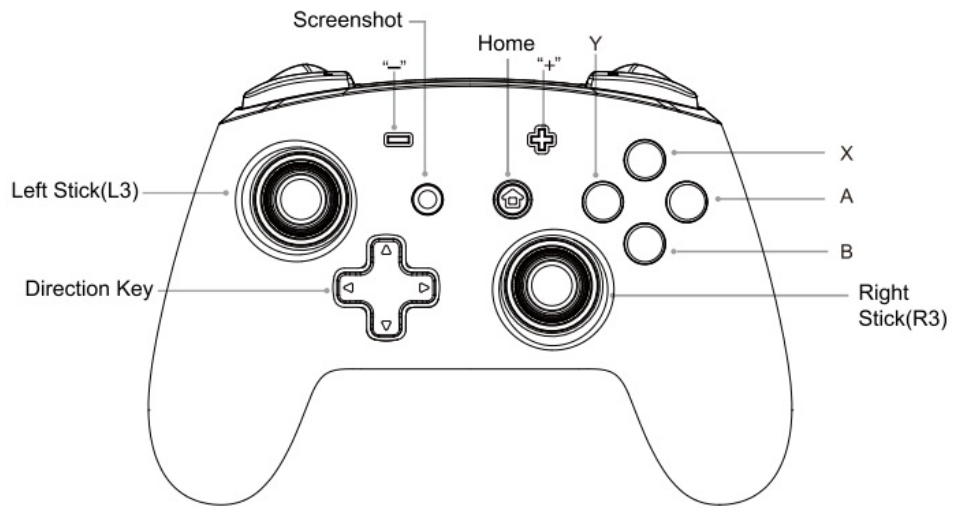


How to Connecting

How to Connect YS46 Controller with Switch/PC/IOS/Android?

Switch

Wireless connection: press pairing button for 2 seconds, led 1-led4 lights flash quickly.

 Wired connection:

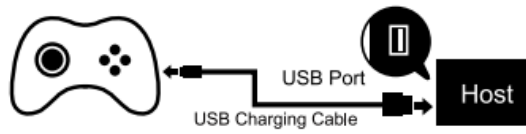

Android

1. Press and hold the "X+Home" button for 2 seconds in the off state, then it is in Android gamepad mode, and the led4 light will be on.
2. After the first pairing is successful, the next time you press the HOME button, it will automatically connect.

macoS

On MFI mode, press "B+Home" button for 2 seconds, led3 indicator will be on.

USB

- **PC:** only support USB-C cable connection.

After the computer is connected, it can also charge the controller at the same time. There are 2 modes: Xinput and Dinput, the default is Xinput mode, you can long press "+" and "-" to switch each other.

- #1 Xinput mode: led 1 and led4 light will be on.
- #2 Dinput mode: led2 and led3 light will be on.

How to Set Turbo Function

1. **Manual Turbo:** Press (the first time) A/B/X/Y/L/ZL/R/ZR/+turbo button to set continuous firing function.
2. **Clear the continuous sending:** press turbo again (the second time) to realize the auto turbo function; Press and hold turbo button for 5 seconds to clear all consecutive functions.
3. Press and hold turbo button + A button to clear current turbo function of A button.

Battery



- State of charge Indicator Status
- Low power Channel lights flash in the game
- Charging Led 4 indicator flashing
- Charging complete → Led 4 indicator is always on

Automatic shutdown

- If the Host screen is closed, the controller automatically sleep.
- After pairing is successful, controller will automatically shut down if no operation for 5min.
- In wireless mode, press the “Home” 3s to disconnect the host, then controller will sleep.

How to Set Led Lights?

1. Turbo button + L3 click: monochromatic always bright Change order: red, orange, yellow, green, cyan, blue, purple, pink, (phantom). cyclic transformation.
2. Turbo button + L3 double click (first time): Colorful breathing The overall lighting color changes automatically according to red, orange, yellow, green, cyan, blue, purple and pink.
3. Turbo button + L3 double-click (second time): Symphony breathing mode.
4. Turbo button + L3 double-click (the third time): turn off the light.
5. Press and hold (Turbo button + L3) at the same time: adjust the brightness in 4 levels. 25%, 50%, 75%, 100%.
6. Turbo button + R3: A, B, X, Y decorative lights A (yellow) B (blue) X (green) Y (red)
There are 3 modes: always on, breathing and off. By pressing the Turbo button+ R3 at the same time, it can be switched cyclically, with a memory function.
7. Support Keylinker APP, support APP to change buttons, adjust motor intensity, adjust RGB lighting and other functions.

How to Set Back Button Function?

1. Single button setting: 1. Press and hold MR (setting button) + A (lick); 2. After the vibration prompt, the setting is successful; 3. The XR button is set to A. Macro button

setting:*press and hold MR (setting button) + continuous action; Zafter the vibration prompt, the setting is successful; 3 set the XR button as macro.

2. Single button setting:(1)press and hold ML(setting button) + A (click); (2)after the vibration prompt, the setting is successful; (3)Set XL button to A.

Macro button setting: Dpress and hold ML (setting button) + continuous action; Dafter the vibration prompt, the setting is successful; 3)set the XL button as macro.

How to adjust the Vibration Intensity



1. Increases Vibration Intensity

2. Decreases Vibration Intensity



Email: info@Amz-lab.de

 
Email: GSG-GROUP@outlook.com

Manufacturer: Shenzhen Mike Morgen Technology Co.,Ltd.

Address: 609 Mike Morgen Building D,Bantian International Center,Longgang District, Shenzhen

Model: SP02

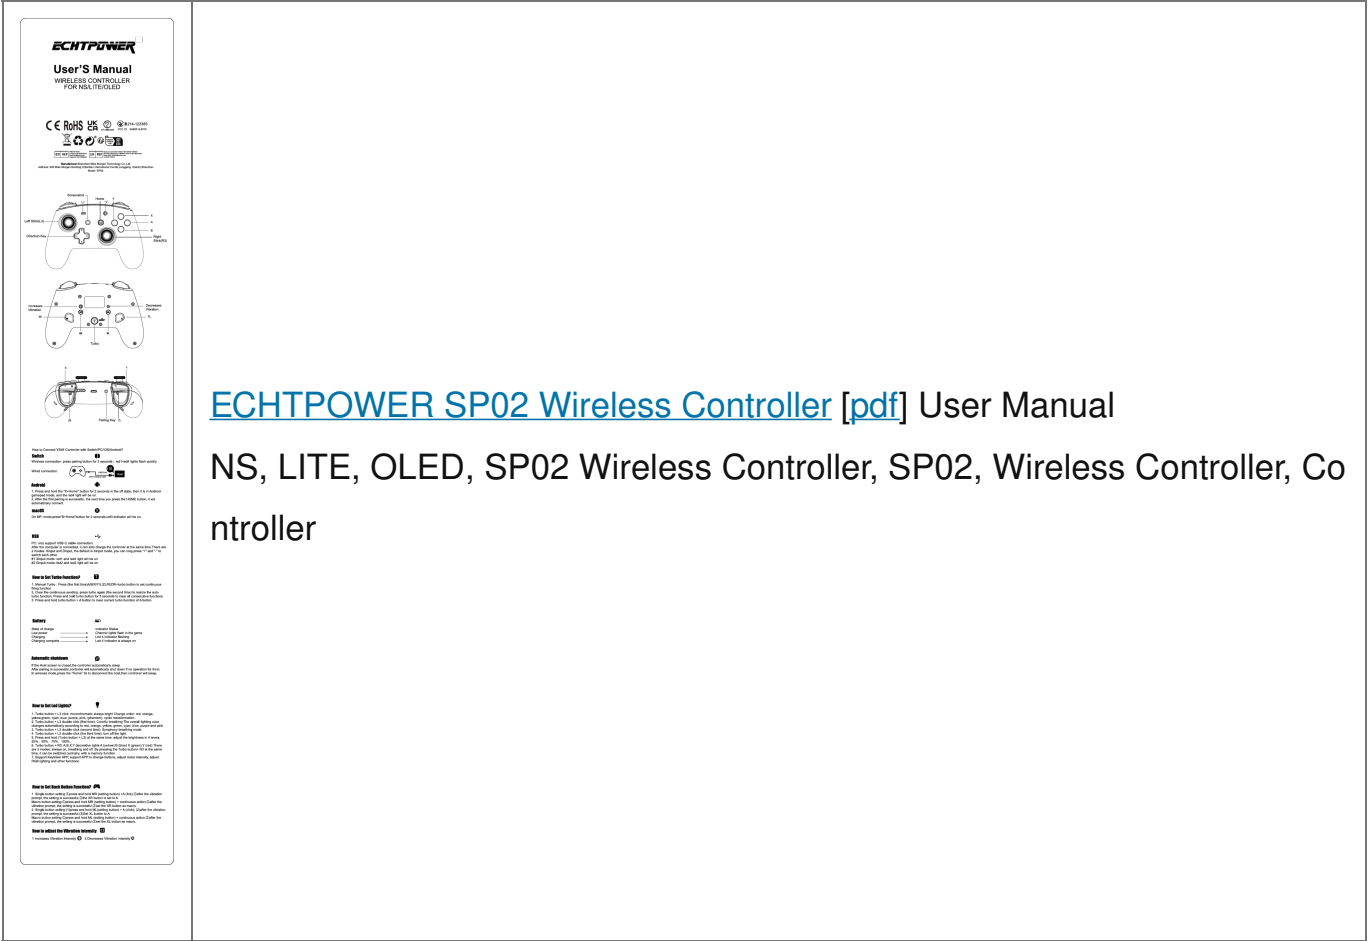

Documents / Resources



[ECHTPOWER SP02 Wireless Controller \[pdf\]](#) User Manual
NS, LITE, OLED, SP02 Wireless Controller, SP02, Wireless Controller, Controller

References

- [User Manual](#)

 controller, ECHTPOWER, Lite, ns, OLED, SP02, SP02 Wireless Controller, Wireless
 ECHTPOWER Controller

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.