



ecler ePRS10Ti Public Address Loudspeaker User Manual

[Home](#) » [ecler](#) » ecler ePRS10Ti Public Address Loudspeaker User Manual 



ePRS10Ti / ePRS20Ti
SPECIALIZED LOUDSPEAKERS
Public Address Loudspeaker



USER MANUAL

Contents

- 1 IMPORTANT REMARK
- 2 IMPORTANT SAFETY INSTRUCTIONS
- 3 IMPORTANT NOTE
- 4 INTRODUCTION
- 5 MAIN SPECIFICATIONS
- 6 CONNECTING
- 7 LOCATION AND INSTALLATION
- 8 TECHNICAL SPECIFICATIONS
- 9 CONTENTS OF THE PACKAGE
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

IMPORTANT REMARK



WARNING: SHOCK HAZARD – DO NOT OPEN

AVIS: RISQUE DE CHOC ELECTRIQUE – NE PAS OUVRIR



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

WARNING: An apparatus with Class I construction shall be connected to a mains socket-outlet with a protective earthing connection.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an

electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug the apparatus during lightening sorts or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Disconnecting from mains: Switching off the POWER switch all the functions and light indicators of the amplifier will be stopped, but fully disconnecting the device from mains is done unplugging the power cord from the mains input socket. For this reason, it always shall remain readily operable.
15. Equipment is connected to a socket-outlet with earthing connection by means of a power cord.
16. The marking information is located at the bottom of apparatus.
17. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



WARNING: This product must not be discarded, under any circumstance, as unsorted urban waste. Take to the nearest electrical and electronic waste treatment centre.

NEEC AUDIO BARCELONA, S.L. accepts no liability for any damage that may be caused to people, animal or objects due to failure to comply with the warnings above.

IMPORTANT NOTE

Congratulations. You now possess the result of careful design and meticulous manufacturing. We are very grateful for your trust in purchasing our Public Address Loudspeaker ePRS10Ti / ePRS20Ti.

In order to obtain maximum effectiveness and performance, it is VERY IMPORTANT, prior to connection, to carefully read and to take into account the instructions given in this manual. To guarantee optimum operation, we recommend that all maintenance be carried out by our authorised Technical Services.

INTRODUCTION

ePRS10Ti and ePRS20Ti are public address loudspeaker respectively, carefully selected for the most widespread 70/100V applications: paging and background Music. They offer durability and an optimal voice and music reproduction. Made of reinforced ABS and IP55 certified, ideal for high performance outdoors.

MAIN SPECIFICATIONS

- Water-resistant ABS public address loudspeaker

- ePRS10Ti (power options):
 - 10W / 5W / 2,5W @ 100V
 - 5W / 2,5W / 1,25W @ 70V
- ePRS20Ti (power options):
 - 20W / 10W / 5W @ 100V
 - 10W / 5W / 2,5W @ 70V
- IP55 certification
- Connection by bare wire
- Finished in white (RAL 9016)

CONNECTING

6.1. ePRS10Ti:

The power selection for 70/100V line is made by wiring the connection according to the following colour code:

	@100V	@70V
WHITE	10W	5W
GREEN	5W	2,5W
RED	2,5W	1,25W
BLACK	COM	COM

6.2. ePRS20Ti:

The power selection for 70/100V line is made by wiring the connection according to the following colour code:

	@100V	@70V
WHITE	20W	10W
GREEN	10W	5W
RED	5W	2,5W
BLACK	COM	COM

Note: if the loudspeaker is used in 70V installations, the corresponding powers for the 100V position will be reduced to half those indicated on the switch. To one quarter for 50V installations.

WARNING! If the system is accidentally connected with the switch in the 100 V/60 W position to a low-impedance amplifier, no damage will be caused to the loudspeaker, but its performance will be well below its specifications.

LOCATION AND INSTALLATION

In general, the following rules will be followed:

- The unit must always be installed on firm, solid surfaces.
- Ensure that the surface on which the loudspeaker is to be installed can withstand its weight.
- Always use a safety cable to secure the loudspeaker installation.
- For good sound reproduction, there must not be any obstacles between the loudspeaker and the audience.

High frequencies, unlike bass frequencies, are extremely directional and any obstacle will involve attenuation in their response.

TECHNICAL SPECIFICATIONS

ePRS10Ti

Drivers	5"
Power options @ 100V	10W / 5W / 2,5W
Power options @ 70V	5W / 2,5W / 1,25W
Frequency response (-3dB)	158 Hz-19 kHz
Coverage angle	235°x235° (HxV)
Sensitivity 1W/1m	90 dB
IP rating	IP55 (IEC60529 Certified)
Finished color	White (RAL 9016)
Material	ABS + Aluminum grill
Operating and storage conditions	Min -20°C (-4°F); Max +60°C (+140°F)
Cord length	350mm / 13.8"
Dimensions (Ø x L)	Ø 138 x 205mm / Ø 5.4" x 8.1"
Weight	1,6 kg. / 3.5 lb. (including accessories)

ePRS20Ti

Drivers	6.5"
Power options @ 100V	20W / 10W / 5W
Power options @ 70V	10W / 5W / 2,5W
Frequency response (-10dB)	170 Hz-19 kHz
Coverage angle	151°x151° (HxV)
Sensitivity 1W/1m	96 dB
IP rating	IP55 (IEC60529 Certified)
Finished color	White (RAL 9016)
Material	ABS + Aluminum grill
Operating and storage conditions	Min -20°C (-4°F); Max +60°C (+140°F)
Cord length	350mm / 13.8"
Dimensions (Ø x L)	Ø 170 x 245mm / Ø 6.7" x 9.6"
Weight	1,8 kg. / 4.0 lb. (including accessories)

CONTENTS OF THE PACKAGE

- ePRS10Ti or ePRS20Ti
- User's quick guide
- Warranty card




All product characteristics are subject to variation due to production tolerances.

NEEC AUDIO BARCELONA S.L. reserves the right to make changes or improvements in the design or manufacturing that may affect these product specifications.

For technical queries contact your supplier, distributor or complete the contact form on our website, in [Support / Technical requests](#).

Documents / Resources

	<p>ecler ePRS10Ti Public Address Loudspeaker [pdf] User Manual ePRS20Ti, ePRS10Ti Public Address Loudspeaker, ePRS10Ti, Public Address Loudspeaker, Address Loudspeaker, Loudspeaker</p>
---	--

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.