

Eco Net Control EVC300 Bulldog Controller User Guide

Home » Eco Net Control » Eco Net Control EVC300 Bulldog Controller User Guide Ta

Contents

- 1 Eco Net Control EVC300 Bulldog Controller
- **2 CONTROLLER**
- 3 Bulldog EVC300 Controller QuickStart
- 4 Device pairing
- **5 Unpairing Devices**
- **6 MAINTENANCE**
- 7 Replace the Leak Sensor Battery
- **8 SUPPORT**
- 9 Documents / Resources
 - 9.1 References



Eco Net Control EVC300 Bulldog Controller



CONTROLLER

Basic Controller Functions

- Press to open or close Bulldog Motor.
- Press to reset the leak alarm.
- Press to pair leak sensors, emergency stop buttons, and remote buttons.



- (Green): System is armed and ready. The valve is open.
- (Red): System is armed and ready. The valve is closed.
- (Green, Red): The valve Motor is not fully closed, not fully open, or the Valve Motor control wire is not connected.
- (Green, Blue, Red): Your Bulldog Controller has detected a leak and shut off your water.

NOTE: Your water shutoff valve cannot be opened until the leak alarm is reset.



Bulldog EVC300 Controller QuickStart Guide



- (Red): Valve is set to open.
- (No Colour): Valve is set to close.



- (Solid Blue): Your Bulldog Controller is connected to Wi-Fi.
- (Blinking Blue): Your Bulldog Motor is closed.

NOTE: To connect your controller to Wi-Fi, please see your EVC300 Wi-Fi Connectivity Guide.



Device pairing

NOTE: All devices included with your Starter Kit have already been paired with your Bulldog Controller.

Pairing Leak Sensors



- 2. Place a leak sensor on a wet paper towel and allow it to go through 2-3 beep cycles.
- 3. Once the Leak Sensor or Emergency Stop button is paired, your Bulldog controller will enter an alert state.
- 4. Clear the leak alert by pressing the Button.
- 5. Click the button to re-open your water shutoff valve.



Pairing Optional Remote Button or Emergency Stop Button

- 1. Press the button.
- 2. Press and hold the Remote button.



Unpairing Devices

All paired devices can be removed by pressing and holding the button for 5 seconds until the red LED blinks.

MAINTENANCE

• Maintenance should be performed every 6 months to ensure your device is armed and in working order.

Check Leak Sensor Battery

NOTE: Testing a Leak Sensors will trigger a leak alert.

- 1. Set your leak sensor on a wet paper towel.
- 2. Listen for the number of beeps.
- (2 beeps): Battery is charged.
- (3 beeps): Battery is low and needs to be replaced.
- (No beeps): The battery is dead, or the leak sensor is not properly being triggered.
- (Beeps but no leak alert): Leak Sensor is unpaired or non-functional.
- (Refer to section: Pairing Leak Sensors & Optional Emergency Stop Button)

Replace the Leak Sensor Battery

1. Twist the leak sensor lid counterclockwise and lift.



2. Replace the battery with Type A23 12 Volt only.



3. Line up alignment marks. Close and lock with a clockwise twist.



Check Bulldog Functionality

- Close your bulldog water valve using the buttor
- 2. Turn on the water at the highest point in the building and observe the water flow after 10 seconds.
 - (Water stops): Bulldog fully closes the valve.
 - (Water continues running): Remove the Bulldog from the water shutoff and follow the Bulldog Mounting Instructions card included with the box.
- 3. Open your bulldog water valve using the button

SUPPORT



- Econet Support Email: support@econetcontrols.com.
- Econet Support Phone: (888) 320-9188
- Leak Sensor Range Support Link: https://www.econetshop.com/PDF/SensorRange.pdf.
- Additional Support Page Link: https://www.econetshop.com/index.php/support/.
- Leak Sensor Pairing Video Link: https://www.youtube.com/watch?v=otzdhZbWBp4&t=146s.

Documents / Resources



Eco Net Control EVC300 Bulldog Controller [pdf] User Guide EVC300, EVC300 Bulldog Controller, EVC300, Bulldog Controller, Controller

References

- I Unique Home Automation Devices & Solutions
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.