



# ecobee Smart Camera With Voice Control User Manual

[Home](#) » [Ecobee](#) » ecobee Smart Camera With Voice Control User Manual 

## Contents

- [1 ecobee Smart Camera With Voice Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 See what your SmartCamera can do for you](#)
- [5 Open the ecobee mobile app to get started](#)
- [6 Meet your SmartCamera](#)
- [7 How to mount your SmartCamera](#)
- [8 FCC Compliance Statement](#)
- [9 Legal Notice](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)



**ecobee Smart Camera With Voice Control**



## Product Information

The SmartCamera is a versatile home security device that offers a range of features to enhance your security and convenience. It is designed to balance privacy and clarity by automatically turning off when family members are present and on again when the house is empty. With real-time conversations through your mobile device, you can easily check in on your home. The SmartCamera provides a full view of your home by allowing you to pan and tilt to view images from the mobile app. It also keeps you informed with notifications for important events and moments.

To learn more about these features and discover new ones, visit [ecobee.com/smartcamera-features](https://ecobee.com/smartcamera-features).

## Product Usage Instructions

1. Open the ecobee mobile app to get started.
2. Once the app is opened, add your SmartCamera to begin setup.  
For more detailed instructions, visit [ecobee.com/setup](https://ecobee.com/setup).
3. Familiarize yourself with the SmartCamera components:
  - Top view: Shows the voice assistant button, mute button, and dual stand/mount.
  - Front view: Shows the voice assistant indicators, microphones, wide-angle lens, and speaker.
4. Pick a view from any angle:
  - Use the dual stand/mount for placing or wall-mounting your SmartCamera.
  - If wall-mounted, angle the camera to change the field of view.
5. Mount your SmartCamera:
  1. Attach the dual mount/stand to the back of the SmartCamera and plug it in for testing.
  2. Hold the camera up to the desired mounting location and check the view on the ecobee app. Adjust the view as needed.

3. Use a 3/16 drill bit to drill a hole at the chosen mounting spot.
4. Screw the plastic anchor into the wall, ensuring it is flush.
5. Fasten the mounting screw into the anchor until there is a small gap between them.
6. Remove the mount from the camera and hang it on the screw. Adjust the screw for a secure fit.
7. Attach the camera to the mount and ensure it is securely in place.
6. You're all set! Open the ecobee app to check the camera's view and make any necessary adjustments.

## See what your SmartCamera can do for you

- Balances privacy and clarity by automatically turning off when family members are around and on again when the house is empty.
- Helps you check in with real-time conversations through your mobile device and SmartCamera.
- Provides a full view of home by letting you pan and tilt to view images from the mobile app.
- Keeps you informed with notifications for anything that requires your attention or for the moments that matter.

For details on these features and to discover new ones, go to [ecobee.com/smartcamera-features](https://ecobee.com/smartcamera-features)

## Open the ecobee mobile app to get started

Once you've opened the app, add your SmartCamera to begin setup.

Find out more at [ecobee.com/setup](https://ecobee.com/setup)



 
## Meet your SmartCamera

### Top view Vue du dessus

Voice assistant button  
Bouton de l'assistant vocal

Mute button  
Bouton muet

Dual stand/mount  
Support/fixation mixte

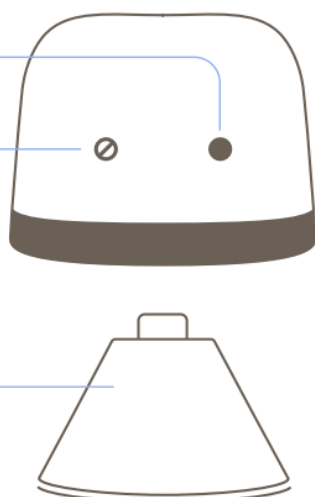

### Front view Vue avant

Voice assistant indicators  
Voyants d'assistant vocal

 
Microphones

Night vision  
Vision de nuit

Camera indicator  
Voyant de la caméra


Wide-angle lens  
Objectif grand angle

Speaker  
Haut-parleur

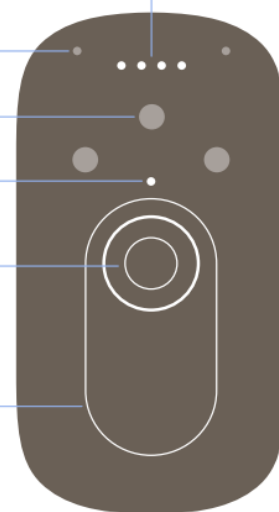

## Pick a view from any angle

 
You can use the dual stand/mount for both placing or wall-mounting your SmartCamera. Once mounted, you can angle the camera to change the field of view.

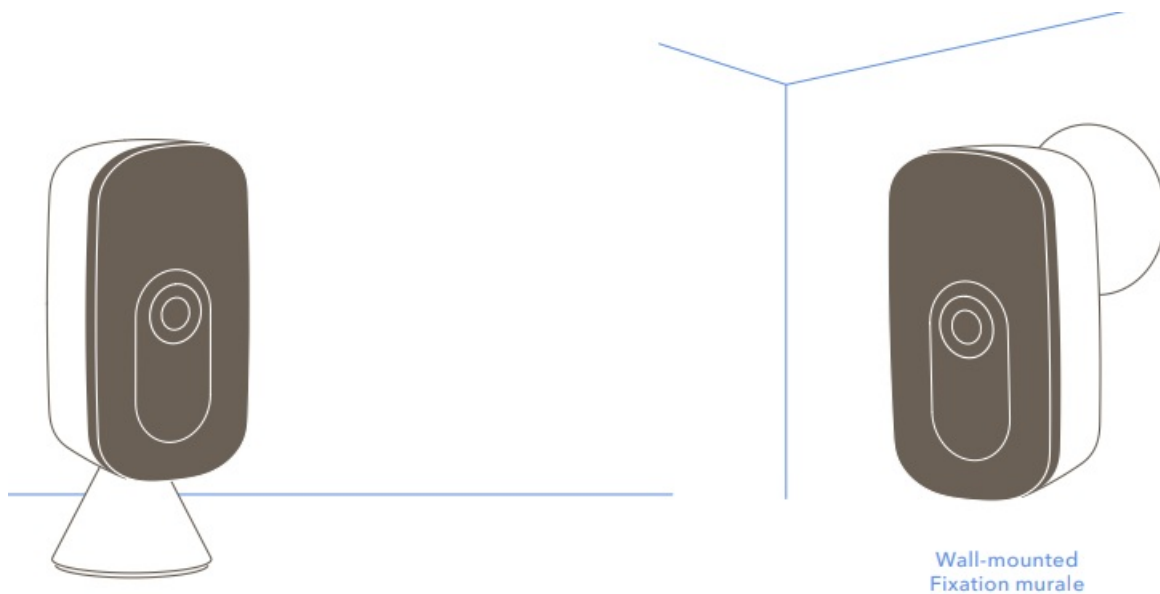

## How to mount your SmartCamera


### 1. Attach the mount

 Attach the dual mount/stand to the back of the SmartCamera and plug it in so you can test the view in the next step.

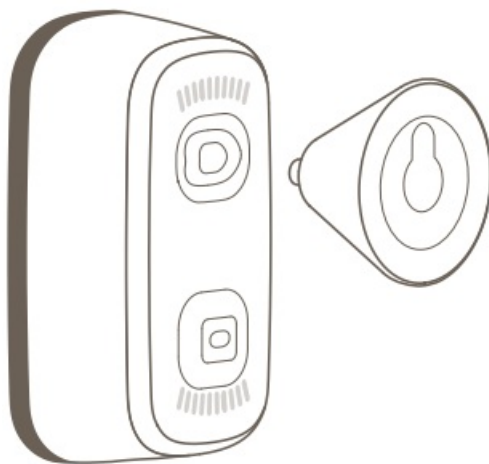


### 2. Test view

 Hold the camera up to the place you'd like to mount it and check the view on the ecobee app. You can adjust the view after mounting.

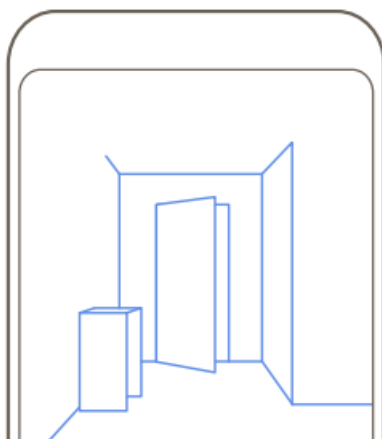


### 3. Drill hole

 Use a 3/16" drill bit to drill a hole where you will mount the camera.

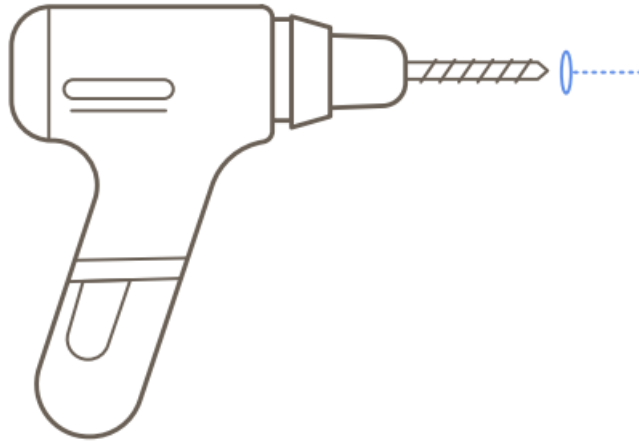


### 4. Screw in anchor

 Screw the plastic anchor into the wall and ensure it's flush.

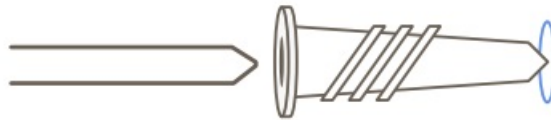


### 5. Fasten the screw

 Fasten the mounting screw into the anchor until there's a little amount of space between it and the anchor.

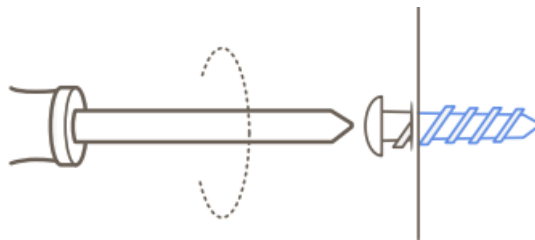


### 6. Hang the mount on the screw

 Remove the mount from the camera and hang it on the screw. If it feels too loose, adjust the screw until it's secure.

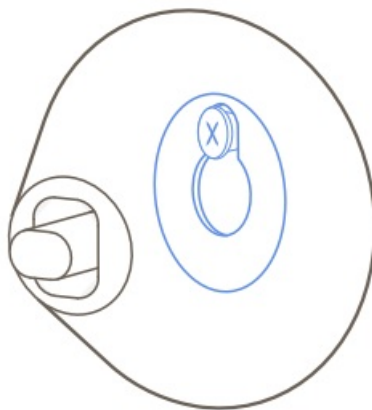


### 7. Attach the camera to the mount

 Attach the camera to the mount and make sure it's secure.

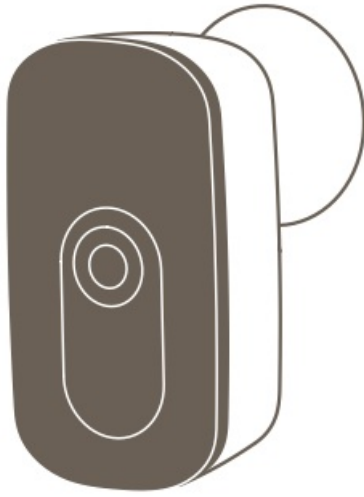

## 8. You're all set

 Open the ecobee app to check the camera's view and adjust it anyway you'd like.

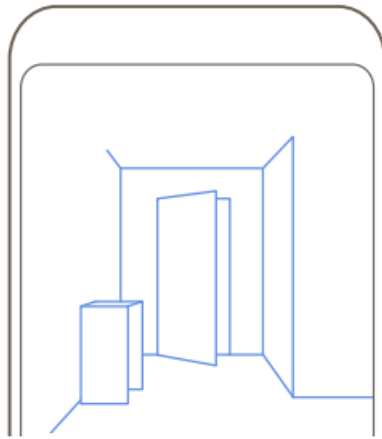

## Approvals

This product was designed and built in accordance to RoHS directive 2011/65/EC and contains no hazardous substances as defined by this directive.

## FCC Compliance Statement

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
  2. This device must accept any interference received, including interference that may cause undesired operation.
- Change or modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. RF Exposure Information:
  - This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 8 inches during normal operation.

**Innovation, Science and Economic Development Canada (ISED) | Compliance Notice:**

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

**RF Exposure Statement:**

 
This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This transmitter must be installed to provide a separation distance of at least 8 inches from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

**Warning:** Changes or modifications not expressly approved by ecobee Inc. could void the user's authority to operate the equipment. This product is not designed for use outdoors. Improper installation may void warranty. Not for children under 3 years.

**Legal Notice**

Use of the HomeKit™ logo means that an electronic accessory has been designed to connect specifically to iPod®, iPhone®, or iPad®, respectively, and has been certified by the developer to meet Apple® performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance. Apple, iPhone, iPad, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. HomeKit is a trademark of Apple Inc.

**Documents / Resources**

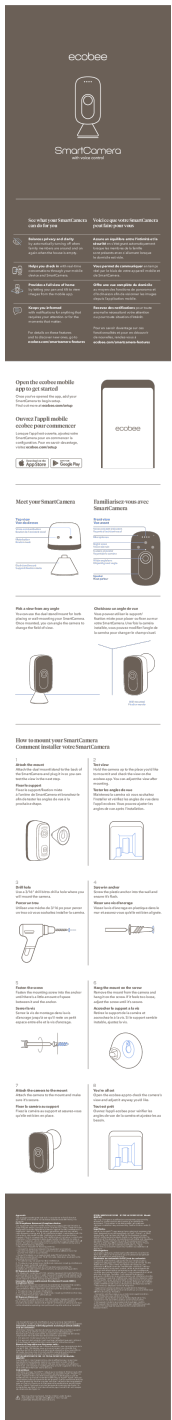

[ecobee Smart Camera With Voice Control](#) [pdf] User Manual  
Smart Camera With Voice Control, Smart, Camera With Voice Control, With Voice Control, Voice Control

References

- [© Installation](#)
- [© Indoor security camera with Alexa Built-in | ecobee](#)



