



ecodan PAR-WT60R-E Wireless Controller User Guide

[Home](#) » [ecodan](#) » ecodan PAR-WT60R-E Wireless Controller User Guide 

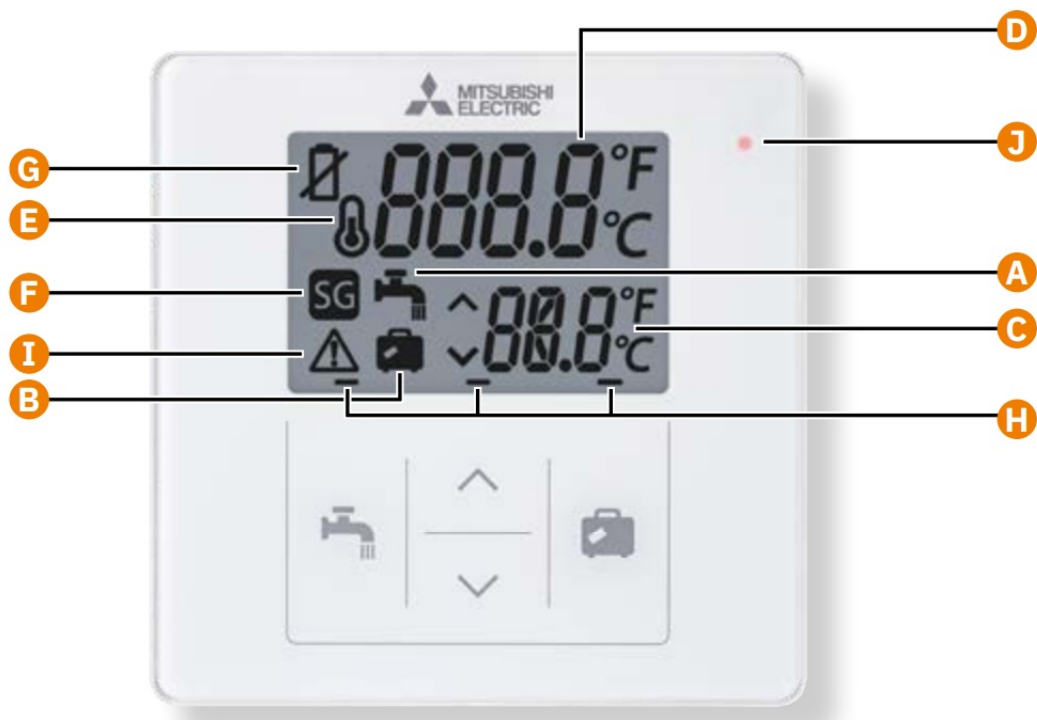





User Guide
Wireless Controller
PAR-WT60R-E

Contents

- [1 PAR-WT60R-E Wireless Controller](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

PAR-WT60R-E Wireless Controller



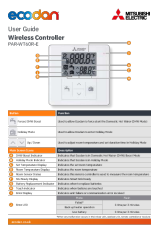
Button		Function
	Forced DHW Boost	Used to allow Ecodan to force start the Domestic Hot Water (DHW Mode)
	Holiday Mode	Used to allow Ecodan to enter Holiday Mode
	Up / Down	Used to adjust room temperature and set duration time in Holiday Mode

Main Screen Icons		Description	
A	DHW Boost Indicator	Indicates that Ecodan is in Domestic Hot Water (DHW) Boost Mode	
B	Holiday Mode Indicator	Indicates that Ecodan is in Holiday Mode	
C	Set Temperature Display	Indicates the set room temperature	
D	Room Temperature Display	Indicates the room temperature	
E	Room Sensor Status	Indicates this remote controller is used to measure the room temperature	
F	SG-Ready Display	Indicates Smart Grid ready	
G	Battery Replacement Indicator	Indicates when to replace batteries	
H	Touch indicator	Indicates when buttons are touched	
I	Error Display	Indicates unit failure or communication error received	
j	Error LED	Mode	Flash
		Failed*	1 time per 3 minutes
		Back up heater operation	
		Low battery	1 time per 3 minutes

*When any malfunction occurs in the indoor unit, outdoor unit, remote controller or receiver.

ecodan.co.uk

Documents / Resources

	<p>ecodan PAR-WT60R-E Wireless Controller [pdf] User Guide PAR-WT60R-E Wireless Controller, PAR-WT60R-E, Wireless Controller, Controller</p>
---	---

References

- [Residential Air Source Heat Pumps | Mitsubishi Electric](#)