



Ecolink WST-100 Four Button Wireless Remote Instruction Manual

[Home](#) » [Ecolink](#) » Ecolink WST-100 Four Button Wireless Remote Instruction Manual 



WST-100 Four Button Wireless Remote

Contents

- [1 Specifications](#)
- [2 Enrolling](#)
- [3 Operation](#)
- [4 FCC Compliance Statement](#)
- [5 Warranty](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Specifications





Frequency: 433.92MHz
Battery: 3V lithium CR2032
Battery life: 5 years
Operating Temperature: 32°-120°F (0°-49°C)
Operating Humidity: 5-95% RH non condensing
Compatible with all DSC 433MHz receivers

Enrolling

Each product has a 6 digit unique serial number printed on the back. This is required to assign your remote to

the security system. Follow the control panel or wireless receiver installation manual instructions for adding a wireless key.

Operation

	Stay Arming Press this button to arm your system while you are still at home. All the doors and windows will be armed but the motion detectors will remain in standby mode.
	Away Arming Press this button to arm your system when no one will be home. All the sensors in the system will be in armed mode.
	Disarm Press this button to disarm your system. You do not have to enter your access code when you use this key to disarm the system.
	Panic Press and hold this button to activate the panic mode of your security system. Depending on how the panel is programmed this will send a notification to your monitoring station and/or activate the alarm siren.

Other button functions are available. Please consult your DSC panel or wireless receiver manual for instructions on changing the button operation.

Panic Button Delay

To remove the 3-second delay on the panic key:

1. Press and hold all 4 buttons simultaneously until the LED starts to flash.
2. Press the Away button to disable the 3s delay on the panic button.
3. To re-enable the 3s delay, follow step 1 and press the Stay button instead of Away.

Replacing the Battery

When the battery is low a signal will be sent to the control panel, or when a button is pressed the LED will appear dim or will not turn on at all. Follow these simple steps to replace the battery

1. With a key or small screwdriver, push up on the black tab located at the bottom of the remote (fig.1 and slide the chrome trim off.
2. Carefully separate the front and back piece of plastic to reveal the battery
3. Replace with a CR2032 battery ensuring the + side of the battery faces up (fig.2)
4. Re-assemble the plastics and ensure they click together
5. Ensure the notch in the chrome trim is aligned with the back of the plastic. It will only go on one way.
(fig.3)

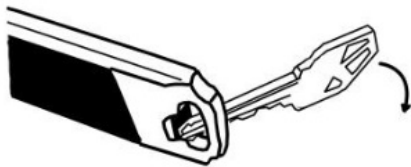


Figure 1

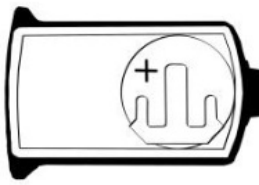


Figure 2

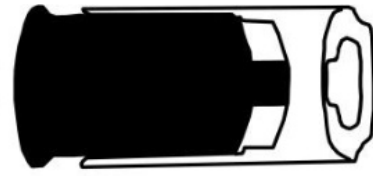


Figure 3

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a different circuit from the receiver
- Consult the dealer or an experienced radio/TV contractor for help.

Warning: Changes or modifications not expressly approved by Ecolink Intelligent Technology Inc. could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC ID: XQC-WST100 IC: 9863B-WST100

Warranty

Ecolink Intelligent Technology Inc. warrants that for a period of 2 years from the date of purchase that this product is free from defects in material and workmanship. This warranty does not apply to damage caused by shipping or handling or damage caused by accident, abuse, misuse, misapplication, ordinary wear, improper maintenance, failure to follow instructions, or as a result of any unauthorized modifications.

If there is a defect in materials and workmanship under normal use within the warranty period Ecolink Intelligent Technology Inc. shall, at its option, repair or replace the defective equipment upon the return of the equipment to the original point of purchase.

The foregoing warranty shall apply only to the original buyer and is and shall be in lieu of any and all other warranties, whether expressed or implied, and of all other obligations or liabilities on the part of Ecolink Intelligent Technology Inc. neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

The maximum liability for Ecolink Intelligent Technology Inc. under all circumstances for any warranty issue shall be limited to a replacement of the defective product. It is recommended that the customer check their equipment on a regular basis for proper operation.

www.discoverecolink.com

PN WST100 R1.01

The image is a horizontal composition. On the left side, there is a thumbnail of a document titled "WST-100 Four Button Wireless Remote". The document is an instruction manual in English. It includes sections for "Features", "Specifications", "Safety", "Operation", "Troubleshooting", and "Appendix". The "Operation" section contains a diagram of the remote control with buttons labeled "Power", "Channel", "Volume", and "Mute". The "Appendix" section contains a table of button functions. The right side of the image is a large, empty white space.

- [!\[\]\(9a8373782c8e0007b8363c731473b178_img.jpg\) Ecolink Intelligent Security and Home Automation Products - Ecolink](#)