



ECOSAVERS 0570 Footswitch Control Socket Instructions

[Home](#) » [ECOSAVERS](#) » ECOSAVERS 0570 Footswitch Control Socket Instructions 

Contents

- [1 ECOSAVERS 0570 Footswitch Control Socket](#)
- [2 Operation steps](#)
- [3 Technical parameters](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)




ECOSAVERS 0570 Footswitch Control Socket



The EcoSavers® Footswitch Control Socket is a handy aid to make the switching of your appliances much more easy and convenient. You can simply connect and disconnect the power by pushing the knob on the footswitch with your feet or by hand. This product comes with a 1,5 metre cable, so you can place the footswitch where it is easily accessible.

Operation steps

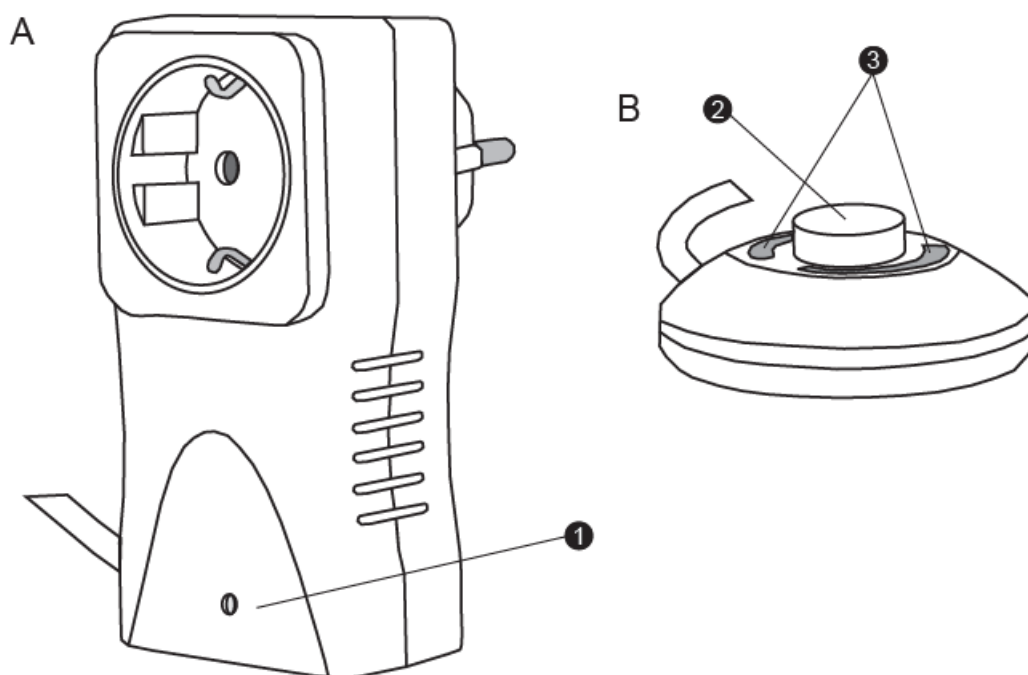

1. Connect the Footswitch Socket Control (A) to the mains.
2. Connect the device you want to control to the Footswitch Socket Control (A). If this device has a switch as well, be sure this switch is in ON position.
3. Now you can switch on and switch off the connected device by using the footswitch (B2).

When the power is on, the LED indication (A1) will illuminate and the LED on the footswitch (B3) will illuminate as well.

IMPORTANT For indoor use only.

Technical parameters

- **Voltage:** 230V/50HZ
- **Rated current max** 16A / 3.680W
- **Child protection:** yes
- **Cable:** 1,5 metre 3*0.5mm²



Documents / Resources



[ECOSAVERS 0570 Footswitch Control Socket](#) [pdf] Instructions
0570, Footswitch Control Socket, Control Socket, Footswitch Socket, Socket

References

-  [EcoSavers](#)

[Manuals+](#)