



ECOSYS PA2100CWX Versatile Color Network Printer Installation Guide

[Home](#) » [ECOSYS](#) » ECOSYS PA2100CWX Versatile Color Network Printer Installation Guide 



PA2100CWX Versatile Color Network Printer Installation Guide

Contents

- [1 Installation Environment](#)
- [2 Recommended Installation Space](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Installation Environment

Kyocera Recommends selecting the Location for the printer as follows:


1. Room Temperature range: 50 to 90.5°F
2. Humidity Level: 10 to 80%
3. Power: A dedicated 120VAC 60Hz 15A outlet

Avoid the following locations when selecting a site for the machine.

Adverse environmental conditions may affect the image quality.



- + Avoid locations near a window or with exposure to direct sunlight.
- + Avoid locations with vibrations.
- + Avoid locations with rapid temperature fluctuations.
- + Avoid locations with direct exposure to hot or cold air.
- + Avoid poorly ventilated locations.

Recommended Installation Space

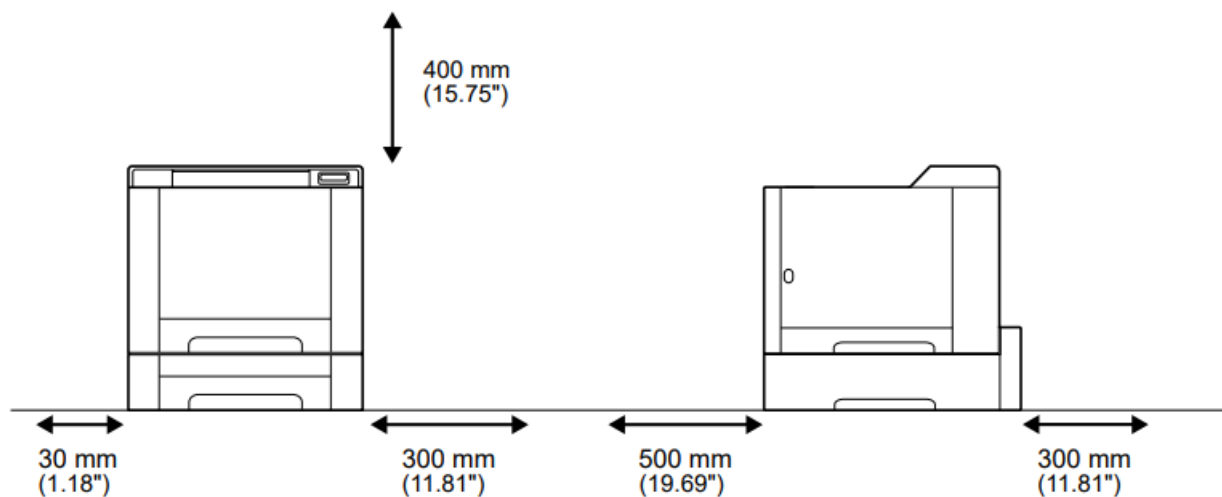


Step 1 Setting up the Machine

1. Open the Box. Remove the machine carefully from the box grasping both sides.
2. Lift the main unit from the handles by cardboard handles, using two people.

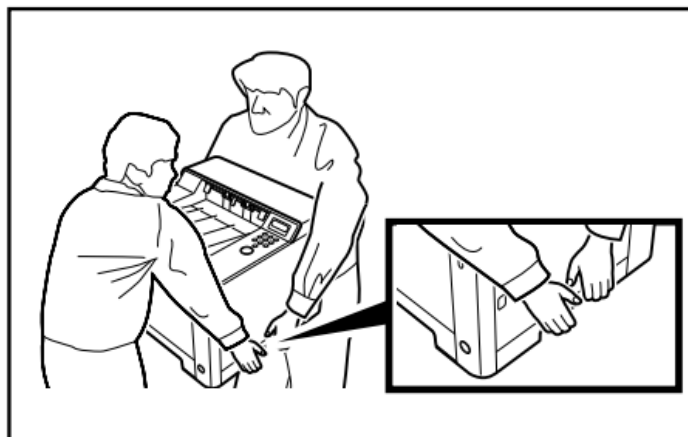
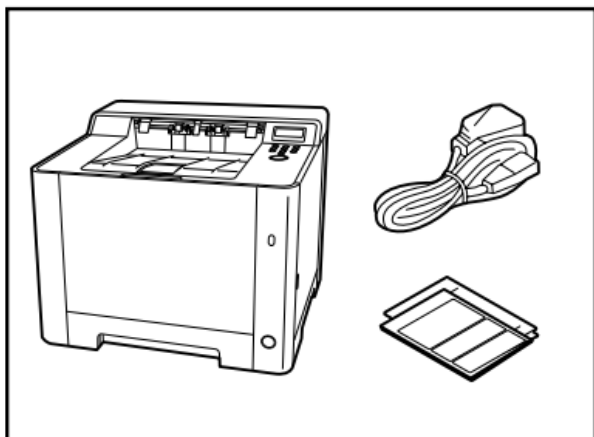


3. Remove the fixing tapes.
 - The front of main unit: 3
 - The right side of main unit: 2
 - The rear of main unit: 2
 - The top of main unit: 1
4. Open the right cover. After Removing the packing material, shake and install the toner container. Close the right cover.


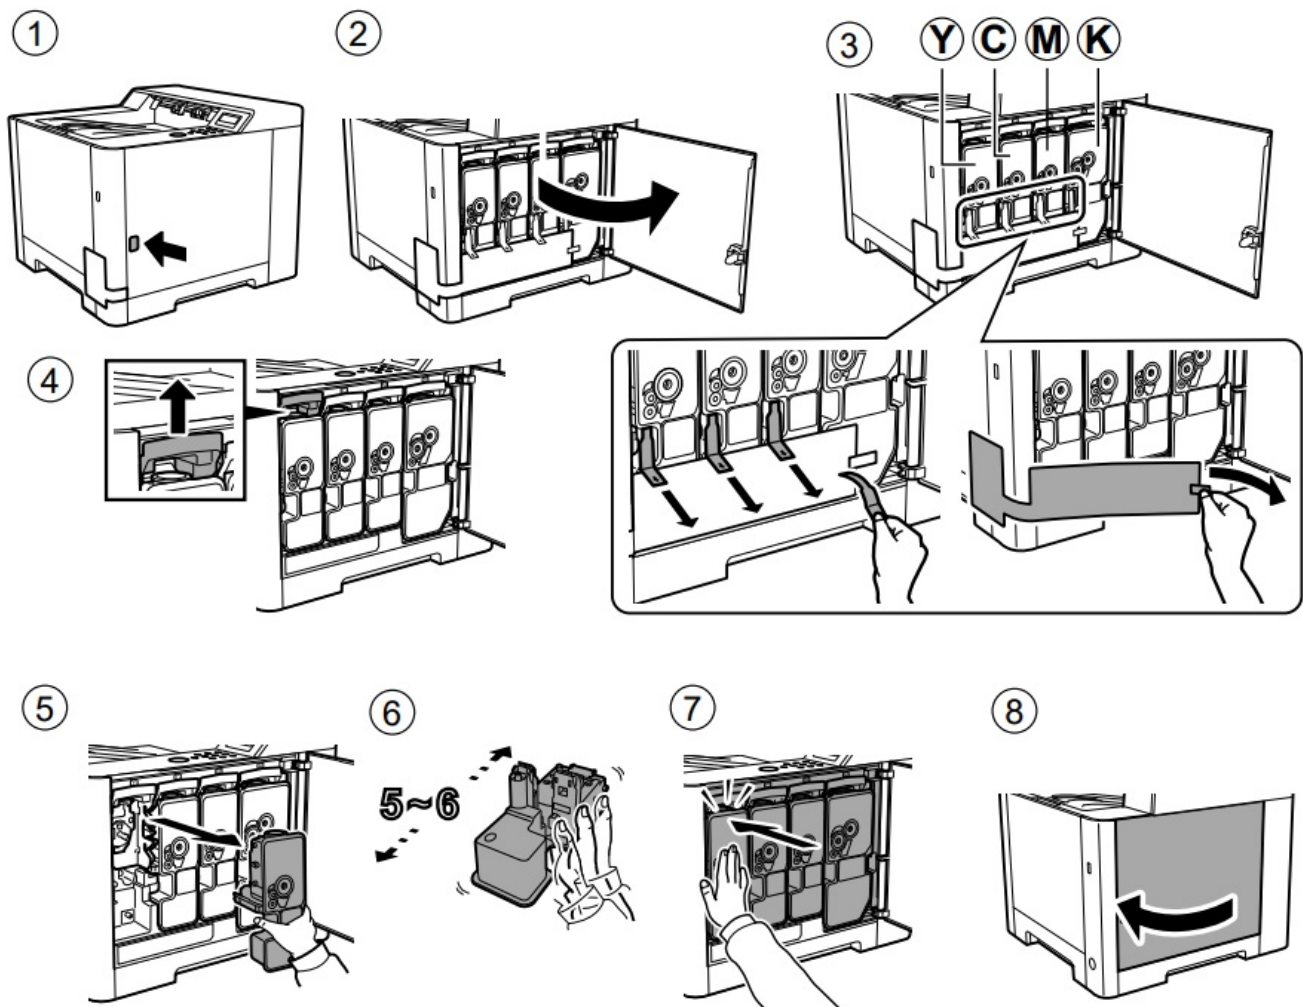


Step 2 Loading Paper


1. Pull the Cassette 1 completely out of the machine.

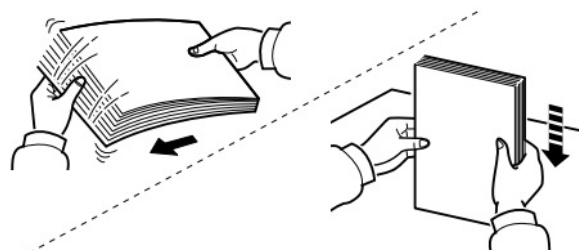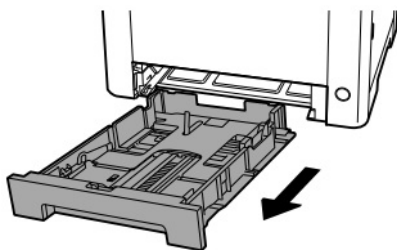

2. Adjust the paper length and width guide to the paper size required.
3. Fan the paper, then tap it on a level surface.

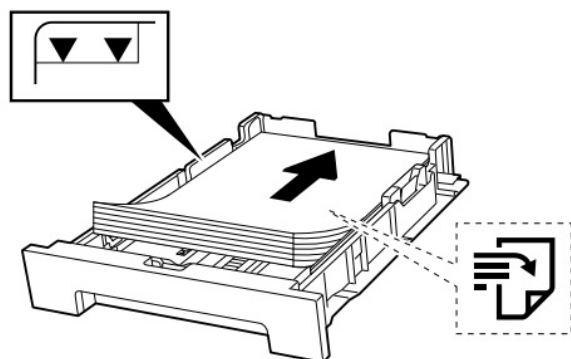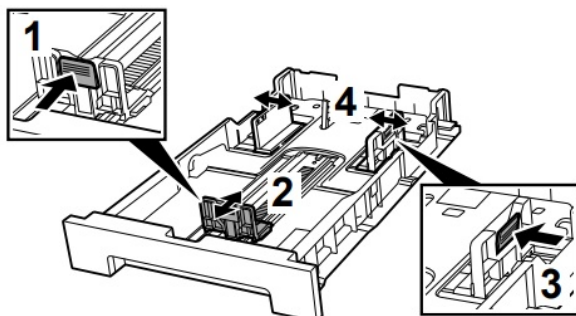


4. Load paper.
5. Gently push the Cassette 1 back in.

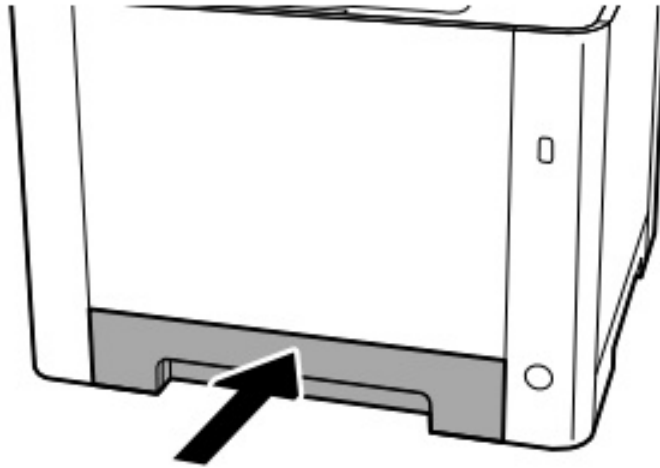


- + Set print side face-up.
- + No bent or folder edges in the paper. Such paper may cause paper jams.
- + Set the quantity of the paper less than the maximum paper indication on the side or the cassette.
- + If the paper is loaded without adjusting the paper length guide and the paper width guides, skewed paper feeding, and a paper jam will occur.

Step 3 Powering on the Printer

1. Connect the power cord to the rear of the machine and the other end to the power outlet.

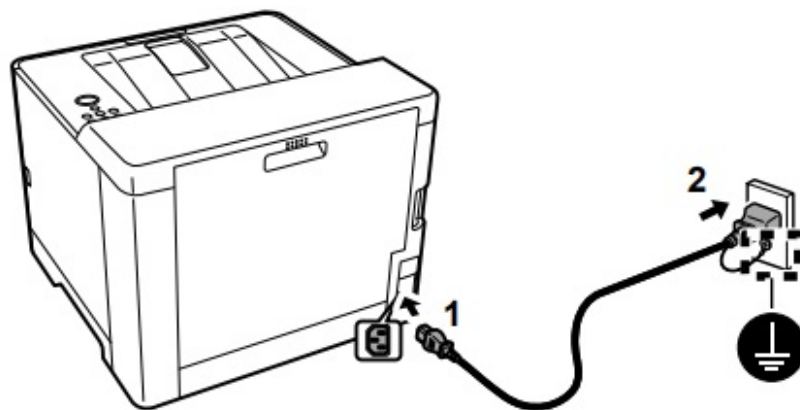


2. Turn the power switch ON at the front of the machine.

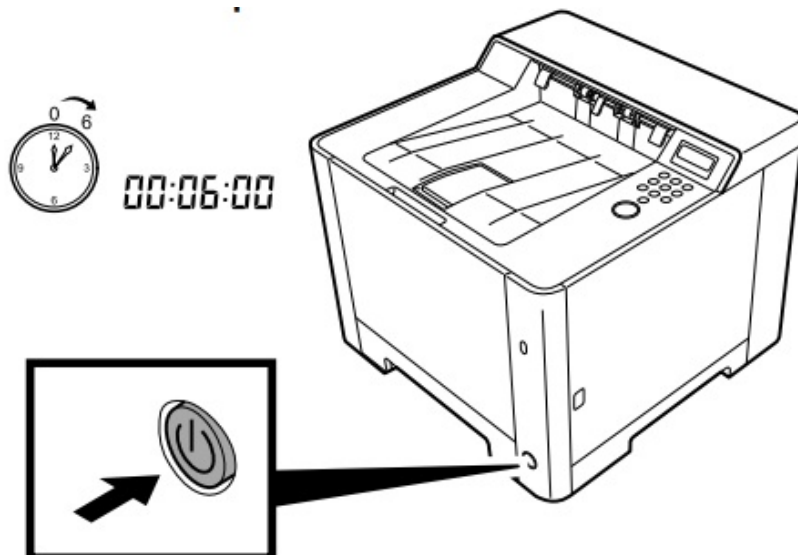




Step 4 Default Settings of the Machine

1. Press [▲] [▼] key to select default language > [OK] key.

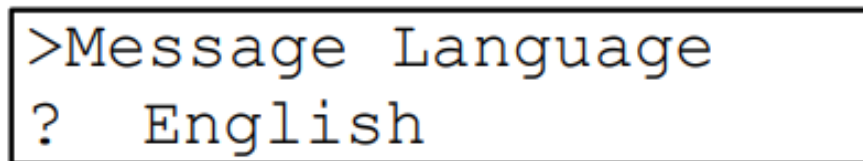




The Managed by Admin screen appears.

 2. Select [No (home)] > [OK] key when you use the machine without login as the administrator at home.

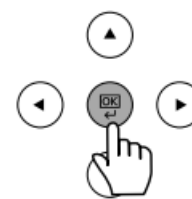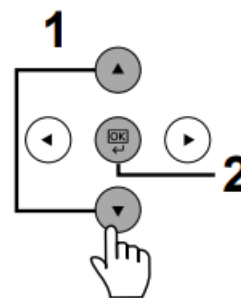

Step 5 Printing a Status Page

 1. [Menu] key > [▲] [▼] key > [Report Print] > [▶] key

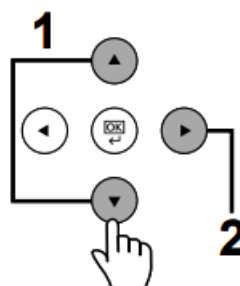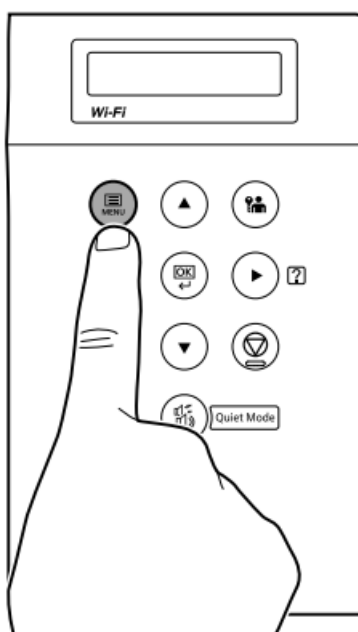

2. [▲] [▼] key > [Status Page] > [OK] key > [OK] key

Managed by Admin
? Yes (office)

[▲] [▼] key



Managed by Admin
No (home)

[OK] key

Managed by Admin
? No (home)

Step 6 Installing Software

Access the following URL and select your model and OS.

Download Center: <https://kyocera.info/>

For Windows

Download and run the Web Installer and follow the on-screen instructions to install the driver and software.

Download

Recommended

Driver

Utility

Manual

File name	Version	Release date	File size		
Web Installer	1.6.10.0	2021/06/16	16.4MB		

Easy Installation

Web installer (Windows only)



For Macintosh

Download and run the driver and follow the on-screen instructions to install.

Download

Recommended

Driver

Utility

Manual

File name	Version	Release date	File size		
Mac Driver	20200402	2021/06/16	836.7KB		


Videos on machine setup, software installation, etc. are also available on this site.



<https://kyocera.inst-guide.com/tb11f/>



ECOSYS

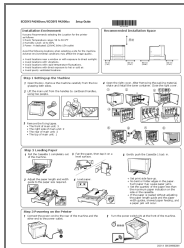Documents / Resources



[ECOSYS PA2100CWX Versatile Color Network Printer](#) [pdf] Installation Guide
PA2100CWX Versatile Color Network Printer, PA2100CWX, Versatile Color Network Printer, Color Network Printer, Network Printer, Printer

References

-  [Download | KYOCERA Document Solutions](#)
-  [Device Body redirection \(Troubleshoot-Kyocera Global Download Center\)](#)

[Manuals+](#).