



EdgeBox RPI-200 Industrial Edge Controller User Guide

[Home](#) » [EdgeBox](#) » EdgeBox RPI-200 Industrial Edge Controller User Guide 


Edgebox

Edgebox-RPI-200 UPS Guide

Contents

- [1 RPI-200 Industrial Edge Controller](#)
- [2 Component List:](#)
- [3 Documents / Resources](#)

RPI-200 Industrial Edge Controller

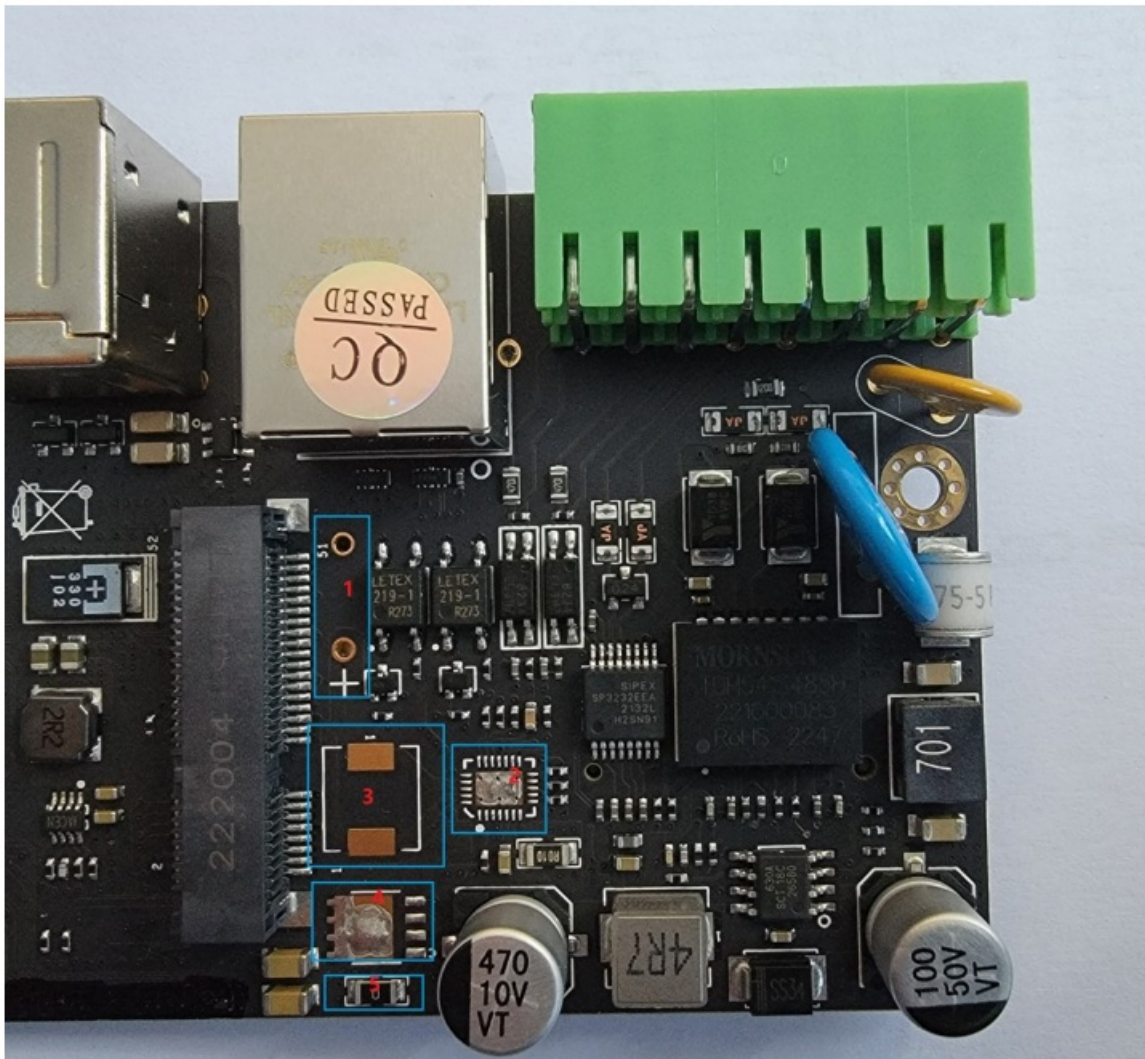

1. CXP-3R0306R-
2. LTC4041
3. 7040 2.2UH
4. IRFH7440TRPBF

Step 1: solder 1,2,3,4

Step 2: Unsolder 5

Component List:

- 1.CXP-3R0306R
- 2.LTC4041
- 3.7040 2.2UH
- 4.IRFH7440TRPBF

Guide

Step 1: solder 1,2,3,4

Step 2: Unsolder 5

Documents / Resources

EdgeBox RPI-200 UPS Guide



EdgeBox RPI-200
LTC4041, 7040 2.2UH, IRFH7440TRPBF, RPI-200 Industrial Edge Controller, R
PI-200, Industrial Edge Controller, Edge Controller, Controller

[EdgeBox RPI-200 Industrial Edge Controller](#) [pdf] User Guide
CXP-3R0306R, LTC4041, 7040 2.2UH, IRFH7440TRPBF, RPI-200 Industrial Edge Controller, R
PI-200, Industrial Edge Controller, Edge Controller, Controller