



Edgecore EAP101 802.11 ax Dual-Band Enterprise Access Point User Guide

[Home](#) » [Edgecore](#) » Edgecore EAP101 802.11 ax Dual-Band Enterprise Access Point User Guide 

Contents

- [1 Edgecore EAP101 802.11 ax Dual-Band Enterprise Access Point](#)
- [2 Package Contents](#)
- [3 Overview](#)
- [4 Installation](#)
- [5 Safety and Regulatory Information](#)
- [6 Hardware Specifications](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

E d g e - c o r e

Edgecore EAP101 802.11 ax Dual-Band Enterprise Access Point



Package Contents



1. EAP101 access point
2. AC power adapter with international socket converters
3. Mounting bracket accessory
4. Mounting bracket security screw
5. Screw kit—4 screws and 4 plugs
6. (Optional) Console cable—RJ-45 to DB-9
7. QR code card

Overview




1. 12 VDC power input
2. Restart/Reset button:
 - A quick press restarts the system.
 - Press and hold for 5 seconds resets to factory defaults.
3. USB 2.0 port (reserved for future use)
4. Console port
5. LAN1/LAN2 Ports: 1Gbps connection to LAN devices.
6. Uplink(PoE) Port: 2.5Gbps connection to 802.3at PoE LAN device.
7. System LED Indicators:
 - 2.4G: On (radio on), Blinking (traffic)
 - 5G: On (radio on), Blinking (traffic)
 - Status: On (power OK), Blinking (boot up)
8. Kensington lock slot

Installation

Warning: For indoor use only. The access point, AC power adapter, and all connected cables are not for outdoor use.


Mount the AP

- **a. Mounting on a Wall**

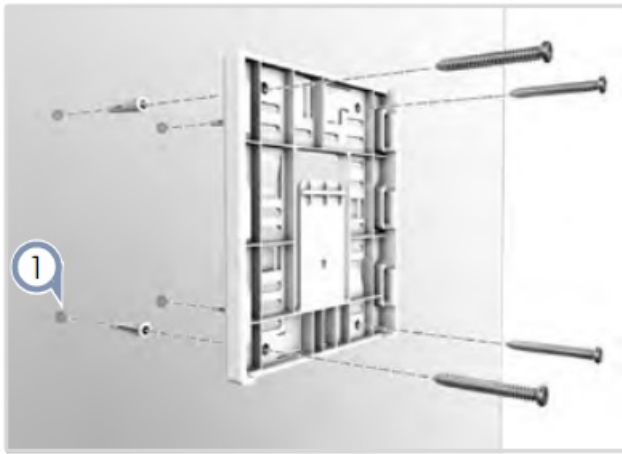

1. At the installation location on the wall, use the mounting bracket to mark four holes for the wall plugs and screws (included in the screw kit). Drill four holes for the wall plugs, and then insert the plugs and tap them flush with the wall surface. Use the four screws to secure the bracket to the wall.
2. With its ports facing down, slide the AP down onto the bracket until it snaps into its secured position.

- b. Mounting on a Suspended Ceiling T-Bar

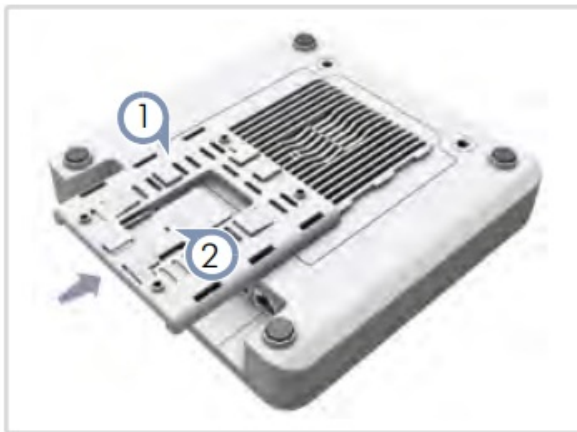

1. Slide the bracket accessory onto the base of the AP until it clicks into its locked position.
2. Use the included security screw to secure the bracket to the AP.
3. Position the ceiling-mount clip holders on either side of the T-bar, and then turn the AP until the two clips lock it to the T-bar.

Note: The AP mounting supports two different sizes of suspended ceiling T-bars. The position illustrated above is for 24.5 mm bars. Use the position at a 90 degrees angle for 15 mm bars.


- c. Mounting on a Ceiling Without T-Bars



1. At the installation location on the ceiling, use the mounting bracket to mark four holes for the plugs and screws (included in the screw kit). Drill four holes for the plugs, and then insert the plugs and tap them flush with the ceiling surface. Use the four screws to secure the bracket to the ceiling.
2. Slide the AP onto the bracket until it snaps into its secured position.

Connect Cables

• a. Connect LAN Cables

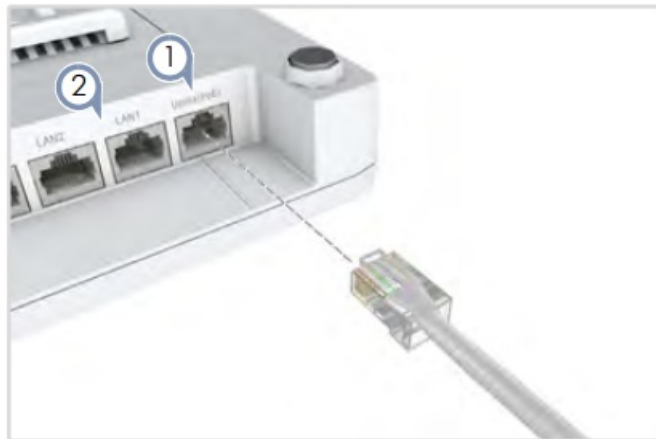

1. Connect Category 5e or better cable to the Uplink(PoE) 2.5G RJ-45 port. When connected to a PoE source, the Uplink(PoE) port connection provides power to the unit.
2. (Optional) Connect a local LAN switch or computer to the LAN1 or LAN2 1000BASE-T RJ-45 ports.


• b. (Optional) Connect AC Power Adapter



1. When not connected to a PoE source, connect the AC power adapter to the DC power jack on the AP and

then plug the adapter into a nearby AC power source.

Check AP LEDs

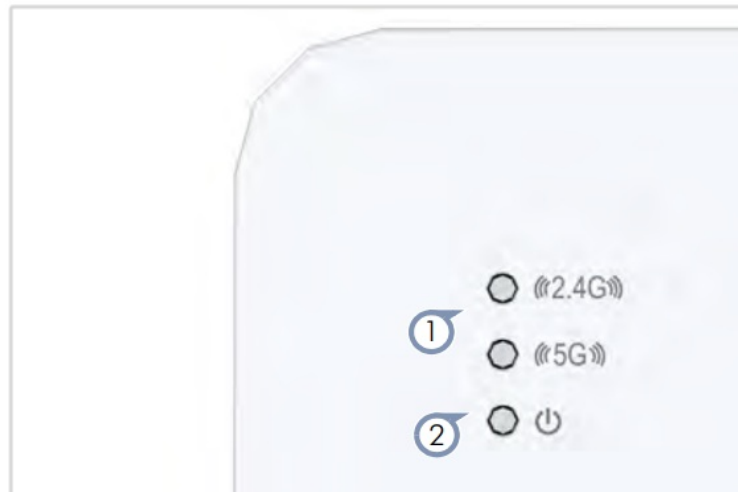


1. 2.4G and 5G LEDs — on green for radio enabled.
2. Power/Status LED — on green for normal operation.

Connect to the Web User Interface

1. Connect a PC directly to the AP's LAN1 or LAN2 port.
2. Set the PC IP address to be on the same subnet as the AP LAN port default IP address. (The PC address must start 192.168.2.x with subnet mask 255.255.255.0.)
3. Enter the AP's default IP address of 192.168.2.1 into the web browser address bar.
4. Log in to the web interface using default settings:
 - Username = admin
 - Password = admin

Note: To connect to the web interface using the Uplink(PoE) port, the IP address is automatically assigned through DHCP by default. If a DHCP server is unreachable, the Uplink(PoE) port reverts to a fallback IP address of 192.168.1.10.

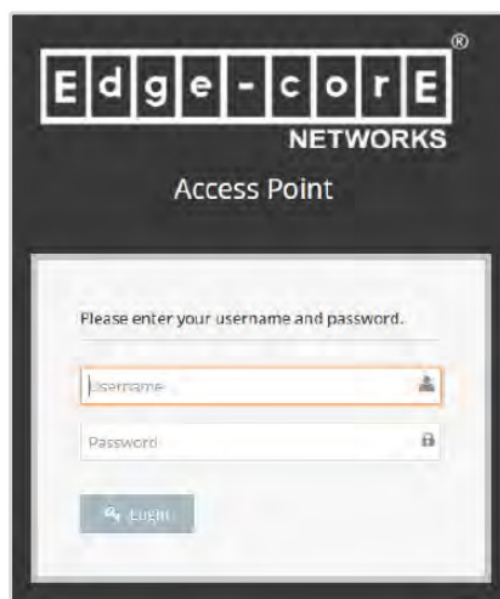

Note: To reset the AP to factory default settings, press and hold down the AP's Restart/Reset button for 5 seconds.

Safety and Regulatory Information

FCC Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 24 cm between the radiator and your body.

Professional Installation Instructions

1. **Installation personnel** This product is designed for specific applications and should be installed by qualified personnel who have knowledge of RF and its related regulations. A general user shall not attempt to install or modify the equipment configuration.
2. **Installation location** To meet regulatory RF exposure requirements, this product shall be installed at a location where, during normal operations, the radiating antenna is at least 23 cm away from any nearby persons.
3. **External antenna** Use only the antennas which have been approved by the applicant. Using non-approved antenna(s) is prohibited and may produce unwanted spurious or excessive RF transmitting power which may lead to a violation of FCC limits.
4. **Installation procedure** Please refer to this equipment's user manual for the procedure details.
5. **Warning** The installation position must be carefully selected so that the final output power does not exceed the limit set forth in relevant regulations. Violation of output power regulations could lead to serious federal penalties.

Professional installation is required

15.19(a)(3) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including

interference that may cause undesired operation.

Industry Canada

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 28 cm between the radiator & your body.

CE Statement

This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 24 cm between the radiator and your body. The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

All operational modes:

2.4 GHz: 802.11b, 802.11g, 802.11n (HT20), 802.11n (HT40), 802.11ac (VHT20), 802.11ac (VHT40), 802.11ax (HE20), 802.11ax (HE40)

5 GHz: 802.11a, 802.11n (HT20), 802.11n (HT40), 802.11ac (VHT20), 802.11ac (VHT40), 802.11ac (VHT80), 802.11ax (HE20), 802.11ax (HE40), 802.11ax (HE80)

BLE 2.4 GHz: 802.15.1

The frequency and maximum transmitted power limit in EU are listed as below:

- 2412-2472 MHz: 20 dBm
- 5150-5350 MHz: 23 dBm
- 5500-5700 MHz: 30 dBm

Professional installation is required

15.19(a)(3) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

AT	BE	BG	CH	CY	CZ
DE	DK	EE	EL	ES	FI
FR	HR	HU	IE	IS	IT
LI	LT	LU	LV	MT	NL
NO	PL	PT	RO	SE	SI
SK	TR	UK			

The abbreviations of the countries, as prescribed in above table, where any restrictions on putting into service or any requirements for authorization of use exist.

CE Mark Declaration of Conformance for EMI and Safety (EEC)

This information technology equipment is in compliance with the Directive 2014/53/EU and Directive 2014/35/EU.

The Declaration of Conformity (DoC) can be obtained from www.edge-core.com->support->download.

Warnings and Cautionary Messages

- **Warning:** This product does not contain any serviceable user parts.
- **Warning:** Installation and removal of the unit must be carried out by qualified personnel only.
- **Warning:** When connecting this device to a power outlet, connect the field ground lead on the tri-pole power plug to a valid earth ground line to prevent electrical hazards.
- **Caution:** Wear an anti-static wrist strap or take other suitable measures to prevent electrostatic discharge when handling this equipment.
- **Caution:** Do not plug a phone jack connector in the RJ-45 port. This may damage this device.
- **Caution:** Use only twisted-pair cables with RJ-45 connectors that conform to FCC standards.

Hardware Specifications

AP Chassis

Size (WxDxH) 195 x 195 x 39 mm (7.68 x 7.68 x 1.54 in.)

Weight 0.65 kg (1.435 lb)

Temperature Operating: 0° C to 50° C (32° F to 122° F)
Storage: -40° C to 70° C (-40° F to 158° F)

Humidity Operating: 5% to 95% (non-condensing)

Network Interfaces

Ports	Uplink(PoE) RJ-45 Port: 2.5G, PoE PD LAN1 RJ-45 Port: 1000BASE-T LAN2 RJ-45 Port: 1000BASE-T
2.4 GHz Radio	IEEE 802.11b/g/n/ax
5 GHz Radio	IEEE 802.11a/ac/n/ax
Bluetooth Radio	IEEE 802.15.1
Radio Frequencies	2.4 – 2.4835 GHz (US, Canada, ETSI) 5.15 – 5.25 GHz (lower band) US/Canada, Europe 5.725 – 5.825 GHz (upper band) US/Canada


Power Specifications

PoE Input Power	22.4 W max, 48 VDC–55 VDC; 802.3at-compliant
AC Power Adapter	AC Input: 100–240 VAC, 50-60 Hz DC Output: 12 VDC, 2 A

Regulatory Compliances

Radio	EN300 328 V2.2.2 (2019-07) EN301 893 V2.1.1(2017-03) 47 CFR FCC Part 15.247 47 CFR FCC Part 15.407 NCC LP002 MIC certification Rule, Article 2 Paragraph 1 Item 19 MIC certification Rule, Article 2 Paragraph 1 Item 19-3 and 19-3-2
Emissions	EN 301 489-1 V2.1.1 (2017-02) EN 301 489-17 V3.1.1 (2017-02) EN 55032:2015 EN 55024:2010/A1:2015 AS/NZS CISPR 32:2015, Class B 47 CFR FCC Rules and Regulations Part 15 Subpart B, Class B Digital Device CNS 13438
Safety	Low Voltage Directive (2014/35/EU, formerly 2006/95/EC, formerly 73/23/EEC) CNS 14336-1 IEC/EN 62368-1, IEC/EN 60950-1
Taiwan RoHS	CNS 15663

Documents / Resources

	Edgecore EAP101 802.11 ax Dual-Band Enterprise Access Point [pdf] User Guide EAP101N, YZKEAP101N, EAP101 802.11 ax Dual-Band Enterprise Access Point, EAP101, 802.11 ax Dual-Band Enterprise Access Point
---	--