

EDIFIER®  
CX7 Multimedia  
Speaker



# EDIFIER CX7 Multimedia Speaker User Manual

[Home](#) » [Edifier](#) » EDIFIER CX7 Multimedia Speaker User Manual 

## Contents

- [1 EDIFIER CX7 Multimedia Speaker](#)
- [2 Important Safety Instruction](#)
- [3 What's in the Box?](#)
- [4 Functional Operation](#)
- [5 Remote Control](#)
- [6 Connection](#)
- [7 Operating Instructions](#)
- [8 Place Satellite Speaker onto the Wall](#)
- [9 Specifications](#)
- [10 Troubleshooting](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)

# EDIFIER®

**EDIFIER CX7 Multimedia Speaker**



## Important Safety Instruction

- Please read the instructions carefully. Keep it in safe place for future reference.
- Use only accessories approved by the manufacturer.
- Install the instrument properly by following the instructions in the device connection section.
- Using the product in a 0-35°C environment is recommended. Shipping and storing the product in a 0-35°C environment is recommended.
- To reduce the risk of fire and electric shock, do not expose the product to rain or moisture.
- Do not use this product near water. Do not immerge the product into any liquid or have it exposed to dripping or splashing.
- Do not install or use this product near any heat source (e.g. radiator, heater, stove, or other devices that generate heat).
- Do not place any object filled with liquids, such as vases on the product; neither should any open fire, such as lighted candles be placed on the product.
- Do not block any ventilation openings. Do not insert any object into ventilation openings or slots. It may cause fire or electric shock.
- Keep sufficient clearance around the product to maintain good ventilation (minimum 5cm is recommended).
- Do not force a plug into the jack. Before connection, check for blockage in the jack and whether the plug matches the jack and is oriented to the right direction.
- Keep the provided accessories and parts (such as screws) away from children to prevent from being swallowed by mistake.
- Do not open or remove the housing yourself. It may expose you to dangerous voltage or other hazardous risks. Regardless the cause of damage (such as damaged wire or plug, exposure to liquid splash or foreign object falling in, exposure to rain or moisture, product not working or being dropped, etc.), the repair has to be performed by an authorized service professional immediately.
- Before cleaning the product with dry cloth, always turn off the product and disconnect the power plug first.
- Never use strong acid, alkali, gasoline, alcohol, or other chemical solvents to clean the product surface. Use only neutral solvent or clear water for cleaning.
- The product must be used at an altitude of lower than 2000m.



Excessively loud music may lead to hearing loss. Please keep the volume in a safe range.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can

take this product for environmentally safe recycling.



Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

### **Power warning**

1. Place the product near the power outlet for easy use.
2. Before use, make sure that the operating voltage is the same as your local power supply. Correct operating voltage can be found on the product plate.
3. For safety purpose, unplug the product during lightning storms or when unused for extended periods of time.
4. Under normal conditions, the power supply may get hot. Please keep good ventilation in the area and exercise caution.
5. Product nameplate and safety warning labels on the housing or bottom of the product or power adaptor.



This symbol is to alert the user to the presence of un-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is to warn the user not to disassemble the enclosure of the product and there is no user-replaceable part inside. Take the product to an authorized service center for repair.



This symbol indicates that the product is for indoor use only.



 
This symbol indicates that the product is a CLASS II or double insulated electrical device with no earth requirement.

The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

### **For wireless product**

1. Wireless product may generate shortwave radio frequencies and interfere with the normal use of other electronic devices or medical equipment.
2. Turn off the product when it's disallowed. Do not use the product in medical facilities, on airplane, at gas stations, near automatic gates, automatic fire alarm system or other automated devices.
3. Do not use the product in the vicinity of a pacemaker within a 20cm range. The radio waves may affect the normal operation of the pacemaker or other medical devices.

### **What's in the Box?**

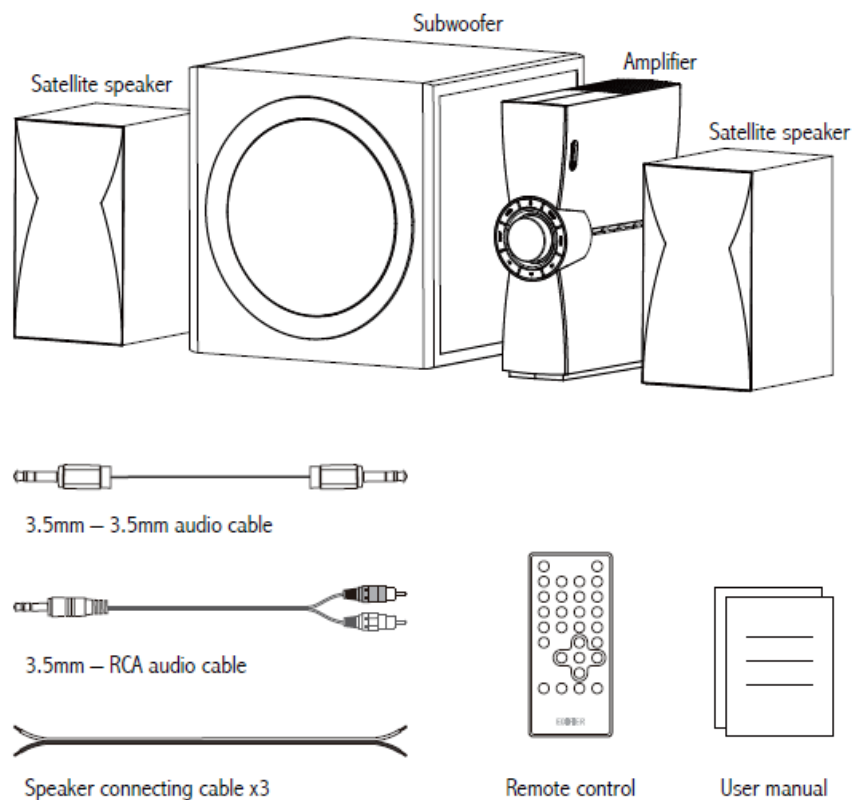


**Note:**

- Images are for illustrative purposes only and may differ from the actual product.
- For the need of technical improvement and system upgrade, information and specifications contained herein may be slightly different from actual product. If any difference is found, the actual product prevails.

**Functional Operation**

 1.

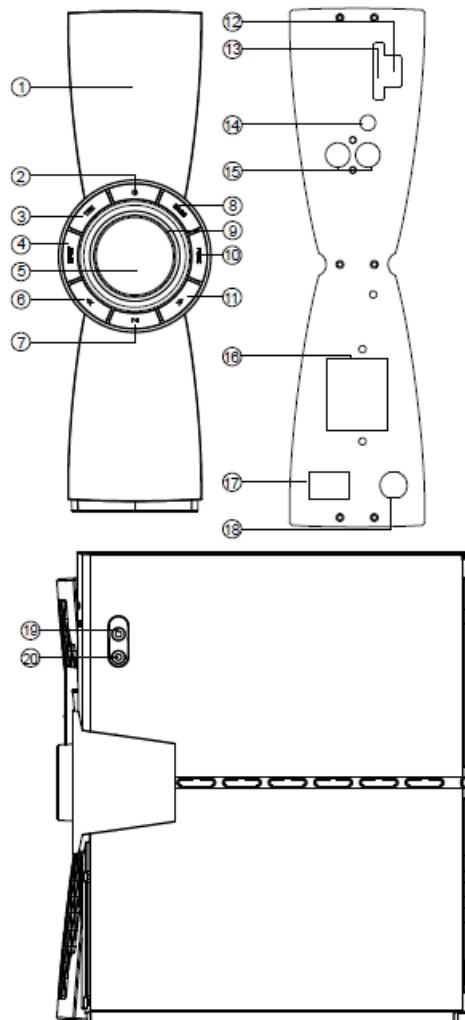

Display window

2. Power on/standby

3. Treble control

4. Audio input selection

5. Master volume dial

6. Previous track: press (Bluetooth/USB/SD card mode)

Previous folder: press and hold for around 2s (USB/SD card mode)

7. Pause/play: press

Disconnect Bluetooth: press and hold (Bluetooth mode)

8. Bass control

9. Indicator light (halo)

10. Function button (treble and bass selection)

11. Next track: press (Bluetooth/USB/SD card mode)

Next folder: press and hold for around 2s (USB/SD card mode)

12. USB flash disk slot

13. SD card slot

14. AUX input port

15. PC input port

16. Connect to subwoofer/satellite speaker

L+: left satellite speaker port (gold cable)

L-: left satellite speaker port (silver cable)

R+: right satellite speaker port (gold cable)

R-: right satellite speaker port (silver cable)


SW+: subwoofer port (gold cable)

SW-: subwoofer port (silver cable)


- 17. Power switch
- 18. Power cable
- 19. AUX input port
- 20. Headphone jack

## Remote Control

 Point the remote control to the remote receiving window on the amplifier, the optimum operational distance is 7 meters.

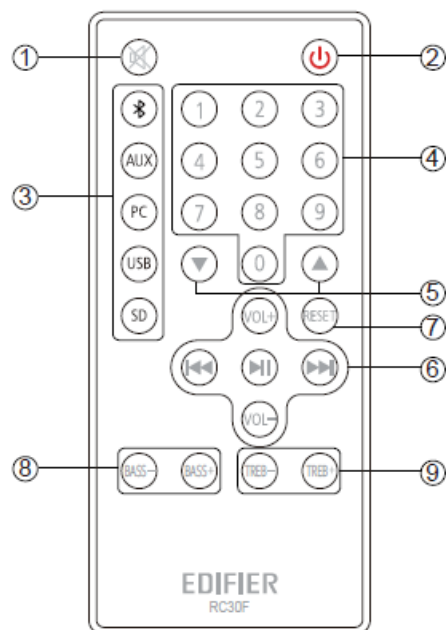

- 1. Mute
- 2. Standby/wake (effective only when the speaker is turned on)
- 3. Audio input selection: Bluetooth – AUX – PC – USB – SD  
In Bluetooth mode, press and hold the "Bluetooth" button to disconnect Bluetooth
- 4. 0~9 numeric buttons  
In USB/SD card mode, press one of buttons or continually press any button to select music (such as, press 1 and 2 buttons to select track 12)
- 5. Previous/next folder (folder that includes MP3/WMA format music)
- 6. VOL+/VOL-: Master volume up/down  
◀▶ Previous/next track (Bluetooth/USB/SD card mode)  
▶▶ Pause/play
- 7. Reset button  
Press and hold for around 3s: reset
- 8. Bass control
- 9. Treble control

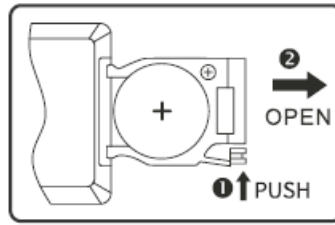 

- Battery installation and replacement
- Please refer to the illustration to open the battery compartment, insert the CR2025 battery and close the compartment.

### **WARNING!**

**DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD**

- (The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children, if the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of body, seek immediate medical attention.

### **Note:**

1. Do not place the remote control in places that are hot and humid.
2. Do not charge the batteries.
3. Remove the batteries when unused for a long period of time.
4. The battery (in remote control) shall not be exposed to excessive heat such as sunshine, fire or the like.
5. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

### **Symptoms from battery ingestion**

#### **No obvious symptoms**

Unfortunately, it is not obvious when a button or coin battery is stuck in a child's oesophagus (food pipe).

**There are no specific symptoms associated with this. The child might:**

 
- cough, gag or drool a lot;
- appear to have a stomach upset or a virus;
- be sick;
- point to their throat or stomach;
- have a pain in their abdomen, chest or throat;
- be tired or lethargic;
- be quieter or more clingy than usual or otherwise "not themselves";
- lose their appetite or have a reduced appetite; and
- not want to eat solid food / be unable to eat solid food.

These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding.

A specific symptom to button and coin battery ingestion is vomiting fresh (bright red) blood. If the child does this, seek immediate medical help.

The lack of clear symptoms is why it is important to be vigilant with “flat” or spare button or coin batteries in the home and the products that contain them.

## Connection

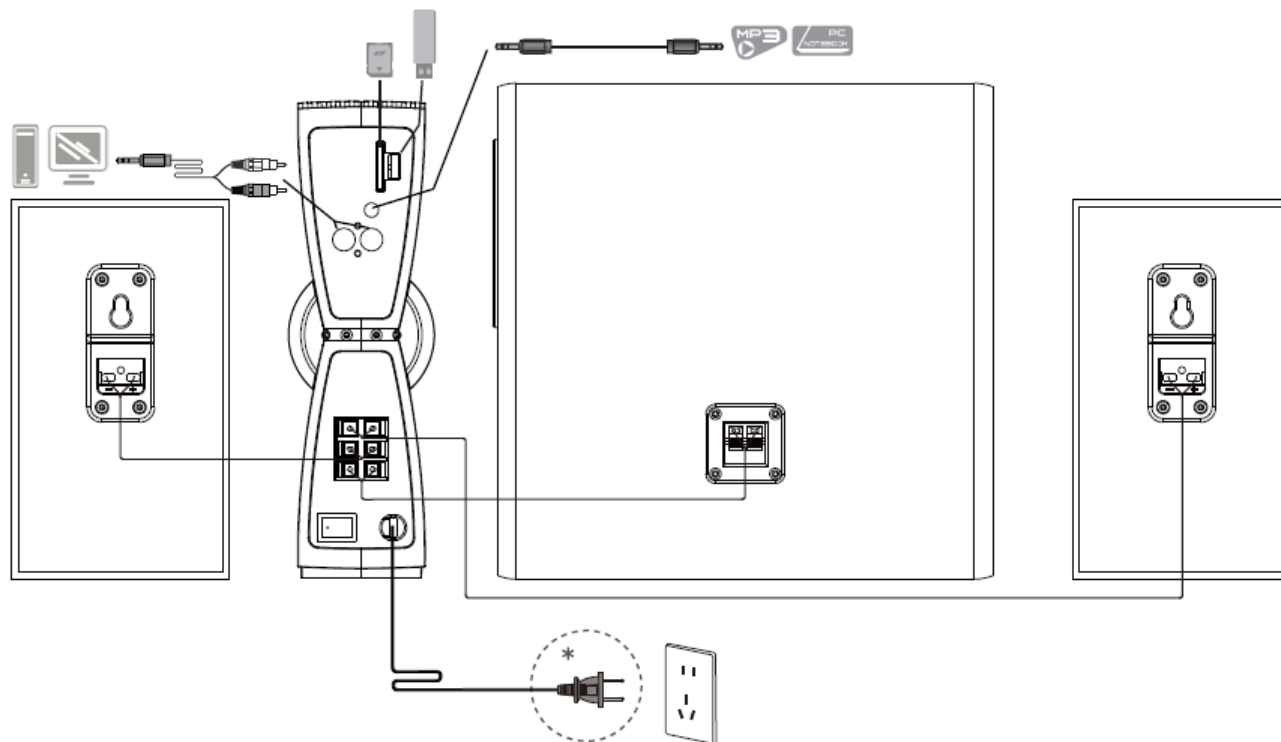


\* This plug type is meant for illustration purpose only.

Connect the gold cable to the red wire clip, and connect the silver cable to the black wire clip (note color matching).

Please ensure the power switch on the rear panel of the amplifier is turned off before connection.


## Operating Instructions

 1. Connect to audio source

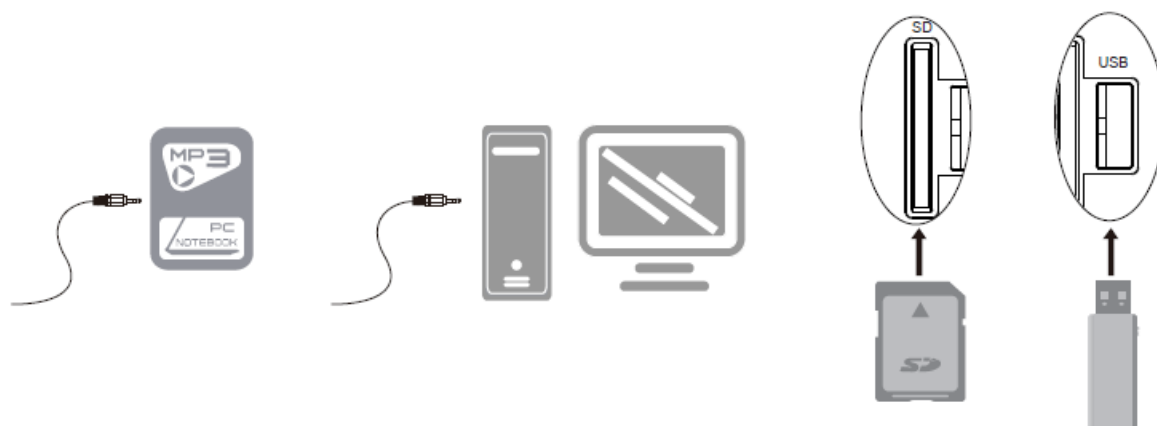

 2. Select audio source



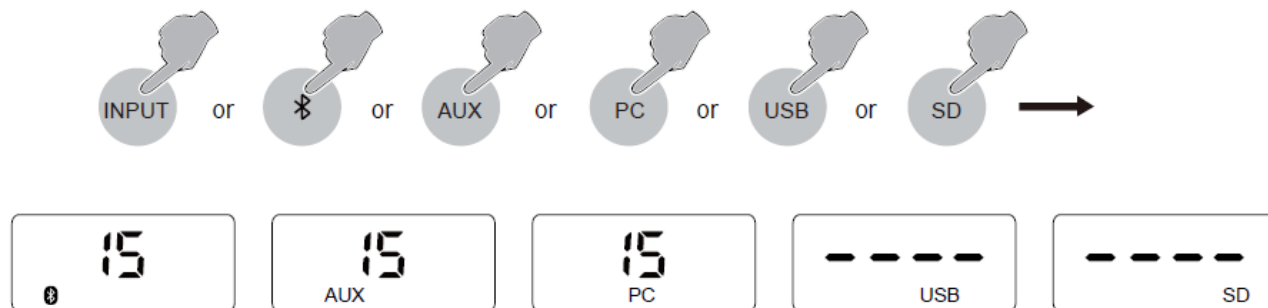

3. Play music on the connected device and adjust the settings to a desired level



### Bluetooth Input



 
1. Press the " INPUT " button on the amplifier, or press the " Bluetooth " button on the remote control to select Bluetooth mode, the display screen will show Bluetooth mode.
2. Select "EDIFIER CX7" in your device setting to connect.
3. Pin code for connection is "0000" if needed.

### Note:

1. To enjoy all Bluetooth functions of this product, please ensure your audio source device has A2DP and AVRCP profiles.
2. Bluetooth connectivity and compatibility may be different between different source devices, depending on the software versions of source devices.

### Place Satellite Speaker onto the Wall

1. Drill hole in the wall

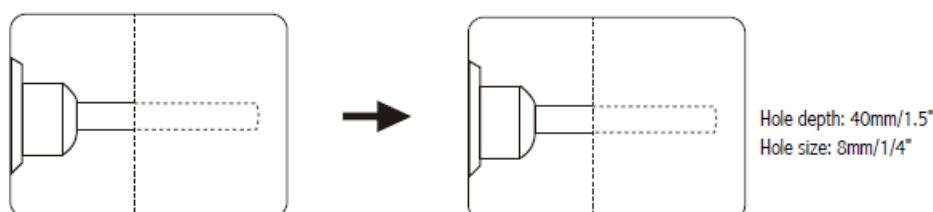


As the illustration shows, drill a hole (Depth: 40mm/1.5", Hole size: 8mm/1/4") in the wall. If wants to place all satellite speakers onto the wall, you can continue to drill another hole in the wall.

Note:

Dimension of the hole may vary depending on wall materials, please adjust drill size to existing conditions for proper installation.

 2. Fix screw on the wall

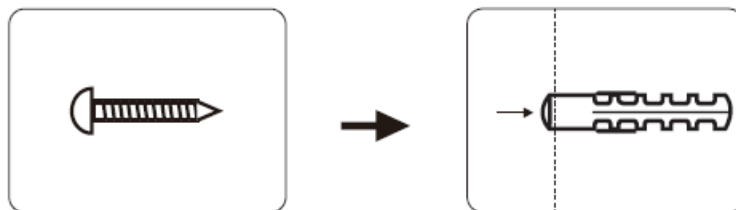


Knock a wall anchor into the hole, then tightly twist a screw into the wall anchor.

**Tips:**

Self-tapping screw: diameter: 5mm, length: 40mm; Plastic wall anchor: 8\*40mm.

6-8 millimeters of the screw should be kept outside the wall.

 3. Attach satellite speaker to the screw in the wall

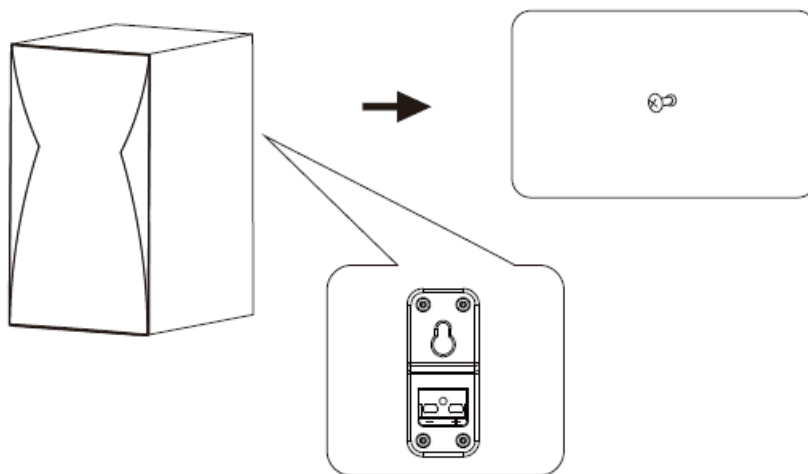

Align the hole on the rear panel of the satellite speaker to the screw on the wall and fix securely.

**Note:**

1. The included screws are only suitable for walls of concrete and brick structure, not for walls with gypsum board, foam composite board and wood structure. Please consult a professional to ensure safety if you need to install in gypsum board and wooden structure walls.
2. Self-tapping screw and plastic wall anchor are not included in the package, and you may need to buy them.

**Warning:**

1. Please follow installation instructions to avoid damage to your product.
2. Please make sure the mounting height is lower than 2m.

**Specifications**

- Power output: L/R: 12W+12W SW: 45W
- Frequency response: L/R: 140Hz-19kHz SW: 45Hz-130Hz
- Audio inputs: Bluetooth, AUX, PC, USB, SD
- Declaration for EU

- Frequency Band: 2.402GHz ~ 2.480GHz
- RF Power Output: ≤10 dBm (EIRP)
- There is no restriction of use.

## Troubleshooting

### No sound

- Check if the speaker is ON.
- Try to turn up the volume using the volume control or remote control.
- Ensure the audio cables are firmly connected and the input is set correctly on the speaker.
- Check if there is a signal output from the audio source.

### Cannot connect via Bluetooth

- Make sure the speaker is switched to Bluetooth input. If it is in other audio input modes, Bluetooth will not connect.
- Disconnect from any Bluetooth device by pressing and holding the “▶||” button on the amplifier or press the “❌” button on the remote control, then try again.
- Effective Bluetooth transmission range is 10 meters; please ensure that operation is within that range.
- Try another Bluetooth device for connection.

### The CX7 does not turn on

- Check if main power is connected, or if the wall outlet is switched on.

### Noise coming from speakers

- EDIFIER speakers generate little noise, while the background noise of some audio devices are too high. Please unplug audio cables and turn the volume up, if no sound can be heard at 1 meter away from the speaker, then there is no problem with this product.

### Noise coming from speakers

- EDIFIER speakers generate little noise, while the background noise of some audio devices are too high. Please unplug audio cables and turn the volume up. If no sound can be heard at 1 meter away from the speaker, there is no problem with this product.

To learn more about EDIFIER, please visit [www.edifier.com](http://www.edifier.com) For EDIFIER warranty queries, please visit the relevant country page on [www.edifier.com](http://www.edifier.com) and review the section titled Warranty Terms.

USA and Canada: [service@edifier.ca](mailto:service@edifier.ca) South America: Please visit [www.edifier.com](http://www.edifier.com) (English) or [www.edifierla.com](http://www.edifierla.com) (Spanish/Portuguese) for local contact information.

For more information, please visit our website: [www.edifier.com](http://www.edifier.com)

Model: EDF100063  
Edifier International Limited  
P.O. Box 6264

## General Post Office

- Hong Kong
- Tel: +852 2522 6989
- Fax: +852 2522 1989 [www.edifier.com](http://www.edifier.com)
- © 2022 Edifier International Limited. All rights reserved.


## Printed in China

### NOTICE:

For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior notice.

Products of EDIFIER will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. If any difference is found, the actual product prevails.

## Documents / Resources

	<a href="#">EDIFIER CX7 Multimedia Speaker</a> [pdf] User Manual CX7, CX7 Multimedia Speaker, CX7, Multimedia Speaker, Speaker
--	---

## References

- [E Headphones, Speakers | A Passion for Sound - Edifier USA](#)
- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.