




[Home](#) » [Edifier](#) » **EDIFIER T30 True Wireless Earbuds With Active Noise Cancellation User Manual** 

Contents [[hide](#)]

- [1 EDIFIER T30 True Wireless Earbuds With Active Noise Cancellation](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Power ON/OFF](#)
- [5 First pairing](#)
- [6 Pairing for a new device](#)
- [7 Multipoint connection](#)
- [8 Reset/left & right connection](#)
- [9 Charging](#)
- [10 Controls](#)
- [11 FAQ](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)



EDIFIER T30 True Wireless Earbuds With Active Noise Cancellation



Product Information

Specifications

- Product Name: T30 True Wireless Earbuds with Active Noise Cancellation
- Charging Input: 5V 200mA (Earbuds), 5V 1A (Charging Case)
- Default Sound Control: Noise cancellation on
- Microphones: Built-in for hands-free smartphone calls

Product Usage Instructions

- Once powered on, the earbuds will automatically enter Bluetooth pairing mode.
- Select EDIFIER T30 from your device list to connect.
- Once powered on, the earbuds automatically reconnect to the last device used.
- If the connection fails, the earbuds enter Bluetooth pairing mode in 10 seconds.
- If manually disconnected, the earbuds enter pairing mode immediately.
- Select EDIFIER T30 from the new devices to connect.
- While the earbuds are paired, disconnecting them from device A will auto-enter Bluetooth pairing mode.

- Go to device B settings and select EDIFIER T30 from the product list to connect.
- Select EDIFIER T30 from the list on device A to reconnect.
- If the left and right earbuds are disconnected, follow these steps to re-pair:
- Respectively tap the left and right earbuds 5 times in 8 seconds to reset and enter TWS pairing; the white LED will blink slowly.
- After a successful reset and TWS connection, the earbuds will enter Bluetooth pairing mode; the white and green LEDs will blink rapidly.

Power ON/OFF

- Take out or place in both earbuds to power on/off.



First pairing

1. Once powered on, the earbuds will automatically enter Bluetooth pairing mode.
2. Select "EDIFIER T30" from your device list to connect.



Pairing for a new device

1. Once powered on, the earbuds automatically reconnect to the last device used.
2. If the connection fails, the earbuds enter Bluetooth pairing mode in 10 seconds.
3. If manually disconnected, the earbuds enter pairing mode immediately.
4. Select “EDIFIER T30” from the new devices to connect.



Multipoint connection

1. While the earbuds are paired, disconnecting them from device A will auto-enter Bluetooth pairing mode.
2. Go to device B settings and select “EDIFIER T30” from the product list to connect.
3. Select “EDIFIER T30” from the list on device A to reconnect.

Note: For subsequent use, the earbuds will automatically reconnect to the two devices used last time.



Reset/left & right connection

The left and right earbuds are connected by default. If the left and right earbuds are disconnected, follow the steps below to re-pair:

1. Take out the earbuds.
2. Respectively tap the left and right earbuds 5 times in 8 seconds to reset and enter TWS pairing, the white LED will blink slowly.
3. After reset and TWS connection are successful, the earbuds will enter Bluetooth pairing mode, white and green LEDs will blink rapidly.



Charging

- Input: 5V \equiv 200mA (Earbuds)
- 5V \equiv 1A (Charging Case)

Note: Make sure the USB-C port is completely dry before charging.

Controls



	L	R
	x2	x2
	x2	x2
	x2	x2
	x3	x3

Note:

1. Default sound control: Noise cancellation on
2. “x2” double tap; “x3” triple tap


EN 18031-2:

Built-in microphones for hands-free smartphone calls.

FAQ

- **Q: How do I reset the earbuds if they are not pairing correctly?**
 - **A:** Follow the steps mentioned in the “Reset/Left & Right Connection” section of the user manual to reset and repair the earbuds.
- **Q: What is the default sound control setting for the earbuds?**
 - **A:** The default sound control setting is Noise Cancellation on. You can adjust it using the controls provided.

Documents / Resources

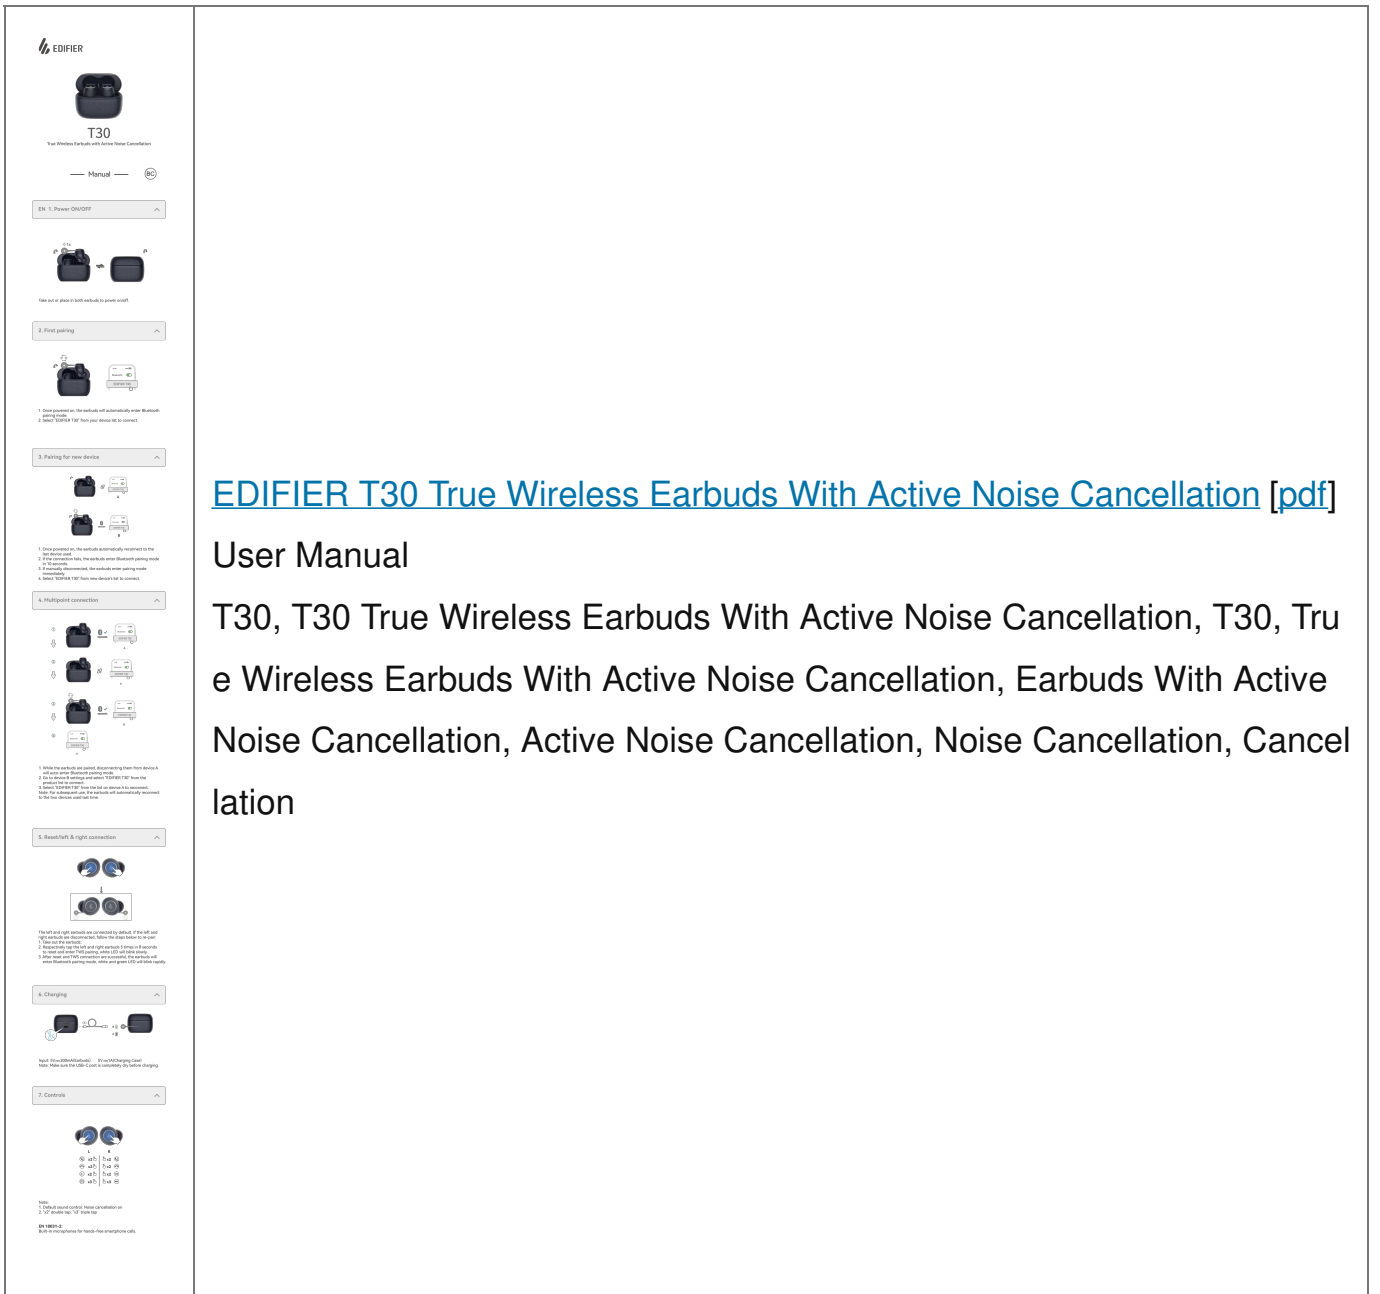

[EDIFIER T30 True Wireless Earbuds With Active Noise Cancellation \[pdf\]](#)

User Manual

T30, T30 True Wireless Earbuds With Active Noise Cancellation, T30, True Wireless Earbuds With Active Noise Cancellation, Earbuds With Active Noise Cancellation, Active Noise Cancellation, Noise Cancellation, Cancellation

References

- [User Manual](#)

Edifier

Active Noise Cancellation, Cancellation, Earbuds with Active Noise Cancellation, Edifier, Noise Cancellation, T30, T30 True Wireless Earbuds With Active Noise Cancellation, True Wireless Earbuds with Active Noise Cancellation

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.