



EDISON FIREFLY T3500 Translucent Bluetooth Party Speaker User Manual

[Home](#) » [EDISON](#) » **EDISON FIREFLY T3500 Translucent Bluetooth Party Speaker User Manual** 

Contents

- [1 EDISON FIREFLY T3500 Translucent Bluetooth Party Speaker User Manual](#)
- [2 Introduction](#)
- [3 Congratulations on your purchase!](#)
- [4 Important Safety Instructions](#)
- [5 PRODUCT OVERVIEW](#)
- [6 Remote control](#)
- [7 Basic Operation](#)
- [8 TURNING THE UNIT ON/OFF](#)
- [9 FRONT PANEL LIGHT](#)
- [10 TWS Mode](#)
- [11 Notes:](#)
- [12 RF exposure statement](#)
- [13 FCC Warning](#)
- [14 SPECIFICATION](#)
- [15 Audio Section](#)
 - [15.1 Power 2000 Watts PMPO](#)
 - [15.2 Read More About This Manual & Download PDF:](#)
- [16 Documents / Resources](#)

EDISON FIREFLY T3500 Translucent Bluetooth Party Speaker User Manual



Introduction


Congratulations on your purchase!

We encourage you to take a few minutes to read this manual, which describes the FIREFLY Speaker and includes step-by-step instructions to help you to enjoy the product. Read all the safety instructions before using the product.

If you have any questions about this product, please contact customer service or your retailer.

Important Safety Instructions

1. Read all
2. Follow all
3. The FIREFLY Speaker should not be exposed to water, rain, or any
4. Do not block any ventilation Please keep at least a foot of distance between the FIREFLY Speaker and any other objects.
5. Do not place the FIREFLY Speaker near any heat sources such as radiators, stoves, or other appliances (including amplifiers) that produce
6. Do not place candles or any objects with a flame on the FIREFLY
7. Protect the power cord from being walked on or pinched, especially at the wall outlet and where the cord attaches to the back of the FIREFLY
8. Use only attachments and accessories specified by the
9. Unplug the FIREFLY Speaker during lightning storms or when not in

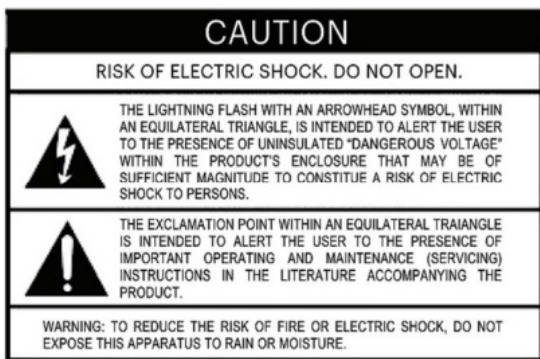

PRODUCT OVERVIEW

Front View




Rear Control Panel



1. Control Panel
 - a. SD CARD: Insert memory card to playback your stored music.
 - b. USB: Insert a USB storage device to play back your stored music.
 - c. MODE: Press to select LINE (Aux-in)/ BLUETOOTH /FM.
 - d. Repeat / EQ: Short press to repeat the track. Long Press to select EQ modes. (EQ: modes Normal/Classical/Jazz/POP/Rock).
 - e. VOL-: Short press for previous song, long press for volume down.
 - f. VOL+: Short press to skip to next song, long press to increase volume.
 - g. /TWS: In USB/SD/BT mode short press to Play & Pause the music. In FM mode, press to auto search and store radio stations. Long press for TWS pairing.
2. TREBLE: Rotate knob to adjust treble settings to your desired levels.
3. VOLUME: In USB/SD/FM/BT mode; rotate the knob to adjust volume to your desired level.
4. AUX input: Connect to external device through 3.5mm AUX-IN cable.
5. BASS: Rotate the knob to adjust BASS to your desired level.
6. LINE OUT: Using balanced XLR cable (not supplied) connect the speaker to an amplifier or other speaker.
7. MASTER: Controls the volume of the speaker.
8. LINE IN VOL: Rotate the knob to adjust volume to your desired level.
9. MIC IN VOL: Rotate the knob to adjust the MIC volume to your desired level.
10. RCA Line input: Connect the speaker to your analogue audio device using RCA cable (not supplied).
11. MIC IN 1/4" Jack Insert a microphone to sing along while listening to music.

10. Line IN: Using balanced XLR cable (not supplied) connect the speaker to an audio source.
11. MIC IN: Plug your microphone into the appropriate XLR cable input to sing along with the music.
12. AC Power: Connect the detachable power cord to speaker and plug in to the main wall outlet.
13. POWER: Press to switch on /off the speaker.
14. LED Switch: Press to switch on /off the lights.

Remote control

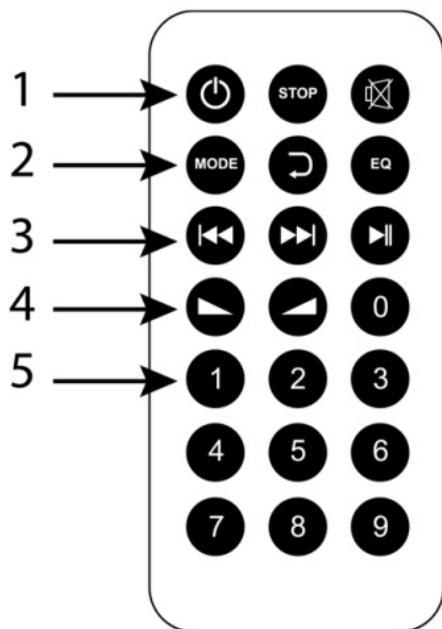

1. POWER: When the Power switch on the unit is ON, press the Power button on remote control and unit will go in STANDBY mode. Press power button again and it will resume to normal mode.
2. STOP: In SD Card and USB mode press to stop the media being played.
3. MUTE: Press to mute music in any mode, press again to resume sound.
4. MODE: Press repeatedly to select the following modes LINE IN (AUX IN)/USB/TF CARD / FM Radio/Wireless BT.
5. REPEAT: Press to repeat one song or repeat all songs.
In Wireless BT mode, this button has no function.
6. EQ: Press to switch between the different EQ modes. This works only in USB/SD card mode. (EQ modes: Normal/Classical/Jazz/POP/Rock).
7. In USB/ SD card and AUX mode press once to go back to the previous song; press and hold for 3 seconds to rewind the current song.
In Bluetooth "BT" mode, press once to go back to the previous song. In FM mode, press once to go back to the previous channel.
8. : In USB/SD card and AUX mode press once to go to the next song, press and hold for 3 seconds to fast forward the current song.
In BT mode, press once to go next song.
In FM mode, press once to go to next channel.
9. In all modes, press to pause the music. Press again to resume play.
10. VOL -: Press to reduce the speaker master volume to your desired level.
11. VOL+: Press to increase the speaker master volume to your desired level.

12. Numeric Keys: In USB /SD mode, press the track number and your desired track will start playing. 1-9 just press the number, 10 is 1+0, 11 is 1+1, 21 is 2+1

Basic Operation

TURNING THE UNIT ON/OFF

Press the power ON/OFF button on the back of the speaker to switch on/off the speaker. If the power button is off, power button on the remote control will not be functional.

FRONT PANEL LIGHT

To turn on the Light short press RED switch on the rear panel. There are 5 lighting modes to choose from.

Mode 1: Multi-color automatically when power on Mode 2: Color conversion

Mode 3: Color run Mode 4: Color flash

Mode 5: Turn off LED light.

TWS Mode



You can pair two FIREFLY speakers (*sold separately*) to enjoy your music in true stereo. Press and hold the “TWS” button on the rear panel. The FIREFLY Speakers will pair automatically. Turn on the Bluetooth from your smartphone and search for the T3500. Select the music you would like to hear. The FIREFLY Speaker will start playing music from your Bluetooth device.

Notes:

1. TWS doesn't work in radio
- Press and hold the TWS button to disconnect TWS

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving
- Increase the separation between the equipment and

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SPECIFICATION

General

Power Requirement	AC120V/60Hz
Power Consumption	7.5 W
Weight	21.5 Kgs
Dimension	47*44.2*100 cm
Operation temperature	+5degree C -+ 35 degree C

Audio Section

Speaker size:	15" steel frame woofer 4 Ohm
Driver:	2X1" Titanium diaphragm 8 Ohm

Power **2000 Watts PMPO**

Accessories Remote Control x 1 AC Power cord Instruction manual

Note: Specifications are subject to change for continuous improvement without prior notice.

Read More About This Manual & Download PDF:

Documents / Resources

EDISON FIREFLY T3500 Translucent Bluetooth Party Speaker



User Manual
This manual contains important safety information. Please read this manual carefully before using the product. Please keep this manual for future reference.

[EDISON FIREFLY T3500 Translucent Bluetooth Party Speaker](#) [pdf] User Manual
2ASW6-T3500, 2ASW6T3500, T3500, FIREFLY T3500 Translucent Bluetooth Party Speaker, FI
REFLY T3500, FIREFLY Translucent Bluetooth Party Speaker, T3500 Translucent Bluetooth Par
ty Speaker, Translucent Bluetooth Party Speaker, Translucent Party Speaker, Bluetooth Party S
peaker, Party Speaker, Bluetooth Speaker, Speaker