



EDM 07750 Wireless Controller User Manual

[Home](#) » [EDM](#) » EDM 07750 Wireless Controller User Manual 



Wireless Controller
USER MANUAL



Ref:07750

Contents

- 1 PRODUCT DESCRIPTION
- 2 BUTTONS
- 3 PRODUCT CHARACTERISTIC PARAMETERS
- 4 PRODUCT INSTRUCTIONS
- 5 Warranty
- 6 Documents / Resources
- 6.1 References

PRODUCT DESCRIPTION

1. Suitable for operating Android system/iOS system/PC (Win7/8/10)/Switch host/PS3 host/Tesla car system/Smart TV/TV box and other platform games.
2. Applicable equipment: smart phone/tablet computer/smart TV, set-top box/PC computer/PS3 host/N-Switch host.
3. Support Turbo one-click burst function, free your hands and make the game easier.
4. Support dual-motor super vibration, feedback the vibration effect according to the game scene, giving you an immersive experience.
5. Four signal channel indicators, which accurately indicate the connection status and power status of the handle.
6. The left and right joysticks can be operated accurately at 360°, helping players to achieve difficult operations such as fine-tuning and aiming.
7. Well-designed D-Pad can be operated in eight directions, rubbing smoothly without sticking the keys.
8. Lightweight button layout, button life can reach millions of times, high quality, durable.
9. Built-in high-capacity polymer lithium battery, with built-in short-circuit and over-voltage protection, low power consumption and high battery life.
10. Ergonomic design, comfortable grip, and lightweight structure make it comfortable to use for a long time.

BUTTONS



PRODUCT CHARACTERISTIC PARAMETERS

- Product size: L152*W109*H61mm

- Input voltage/current: DC5V/500m
- Normal working voltage/current: DC3.7V/20mA
- Continuous use time: >10H
- Charging time: about 2 hours
- Bluetooth 4.0, transmission distance: <8 meters
- Battery capacity: 500mAh
- Standby time: 50 days when fully charged
- TypeC data cable: 800mm in length

PRODUCT INSTRUCTIONS

1. Instructions for Android devices

- Press and hold the A+HOME button for 2 seconds at the same time, the LED1 indicator flashes quickly (it has been connected, you can directly press the HOME button to connect back).
- Turn on the Bluetooth on the Android device and select the device named "GamepadPlus V3" as the paired Bluetooth device, the connection is successful, and the LED1 indicator light is always on.
- You can play directly: Glory of the King, Game for peace, Endless Showdown, Wilderness Action (except for changing the rules of the game itself), the mapping method is as follows:
Up key + HOME key: select King Glory; right key + HOME key: select Game for peace.
Down button + HOME button: select endless duel; left button + HOME button: select wilderness action; the default is the glory of the king.
- Use the ShootingPlus V3 App tool to adjust the key position to play more games

A. Install the Android version of ShootingPlus V3 App, please go to Google Play Store to search for "ShootingPlus V3" to download, or search for "ShootingPlus V3" and download in the Android market of mobile phones.

B. How to change the keys of the Android ShootingPlus V3 App:

- Connect Bluetooth, install ShootingPlus V3 App, and push the App to the background.
- After starting the game directly, click the "V3" floating ball icon on the screen or press the "START" button on the handle to enter the App's key change interface.
- Drag the key icon in the key change interface to the desired operation position in the game.
(Click the key position icon to select the key position attribute).
- Click "Save" on the menu bar, and then "Confirm" to save.
- Click "Close" on the menu bar or press the "START" key again (or click the "V3" floating ball icon again) to exit the key change interface.
- In the game, you can press the "SELECT" button on the handle to call up the set key position prompt.
- After installing the ShootingPlus V3 App, you can also download the set game keys directly from the "Cloud Key List" on the main interface of the App.
- For MediaTek (MTK) mobile phones, please enter the standard Android mode with the X+HOME key to use in the game hall (such as: grape game hall, octopus, etc.).

Note: If you enter the wrong Apple mode, please cancel the Bluetooth pairing and re-pair to enter the Android mode.

1. Instructions for using iOS Apple devices

(DPress and hold the Y+HOME button for 3 seconds at the same time, at this time the LED2 indicator flashes quickly (it has been connected, you can directly press the HOME button to connect back).

(QTurn on the Bluetooth function of the Apple device, select the paired Bluetooth device named "GamepadPlus V3", the connection is successful, and the LED2 indicator light is always on.

GSYou can play directly: Glory of the King, Game for peace, Endless Showdown, Wilderness Action (except for changing the rules of the game itself)Up key

+ HOME key: select King Glory; right key + HOME key: select Game for peace.

Down button + HOME button: select endless duel; left button + HOME button: select wilderness action; the default is the glory of the king.

Y Support iPhone or iPad tablet device iOS13.3.8 or lower system, iOS13.4 or higher system only supports unilateral contact.

Use ShootingPlus V3 App tool to adjust the key position to play more games

A. For the Apple version of ShootingPlus V3 App, please go to the App Store and search for "ShootingPlus V3" to download.

B. How to change the key of Apple ShootingPlus V3 App:

- Connect Bluetooth and install ShootingPlus V3 App.
- Start the game and take a screenshot of the game in the game (iPhone X/MAX press the "Power button" and "Volume + button" at the same time.
For other iPhones, press the "Power button" and the physical "HOME button" at the same time).
- Open the ShootingPlus V3 App, click the "V3" floating ball or press the handle "START" button to enter the App change button interface.
- Long press the blank part of the screen to start loading screenshots of the game.
Click to choose a picture to choose a screenshot of the game (b. Screenshot of the operation).
(In the process of selecting pictures, there will be a reminder to visit the album, please allow access, that is: click OK)
- Drag the key icon in the key change interface to the desired operation position in the game. (Click the key position icon to select the key position attribute).
- Click "Save" on the menu bar, and then "Confirm" to save.
- Click "Close" on the menu bar or press "START" again to exit the key change interface.
- After installing the ShootingPlus V3 App, you can also download the set game keys directly from the "Cloud Key List" on the main interface of the App.

Note:If you enter the wrong Android mode, please cancel the Bluetooth pairing and then re-pair to enter the Apple mode.

1. Wireless connection operation method (need to be equipped with our company receiver).
2. Wireless receiver support: PC equipment/smart TV/TV box/Tesla carsystem/Switch host base/PS3 host; Insert the 2.4G wireless receiver into the USB interface of the above correspond-ing device.
3. Press the handle L1+HOME button for 3 seconds at the same time, the handle enters the wireless pairing mode, at this time the LED1 and LED2 indicators flash quickly.
After the wireless connection is successful, the LED1 and LED2 indicator lights will be on and the game can be started.
4. Wired USB mode operation method (Wired support: PC equipment/Switch host base/PS3 host/smart TV.
Press and hold the R1 key and then insert the USB cable into the USB interfaceof the above corresponding device.
The LED light of the corresponding mode flashes quickly after the USB is inserted, and the LED light of the

corresponding mode is always on after the USB recognition is successful.

In PS3 and N-Switch host mode, the indicator light after successful USB identification will be automatically assigned according to the channel issued by the host.

5. TURBO function. Action keys include (A/B/X/Y/L/ZL/R/ZR) 8 keys, all of which can manually set the TURBO function.

Setting method: press and hold the action key, then lightly press the TURBO key to turn on, hold down the action key, lightly press the CLEAR button, the TURBO function is off. After the product sleeps, shuts down and restarts,

the previously set TURBO function is automatically cleared. If the TURBO function is enabled, it must be reset.


6. Handle charging/sleeping/wake-up/shutdown function.

Charging function of the handle:

- When the power is low, the LED4 indicator light flashes quickly.
- When charging, the LED4 indicator light flashes slowly.
- When it is full, the LED4 indicator will be on for a long time.

The handle sleep/wake up/shutdown function:

- It will automatically sleep if no button is pressed within 5 minutes.
- When you need to use it again, press the HOME button for 1 second to wake up the handle, and you can connect back.
- In the power-on state, long press the HOME button for 10 seconds, the product will shut down and all the LED indicators will go out.

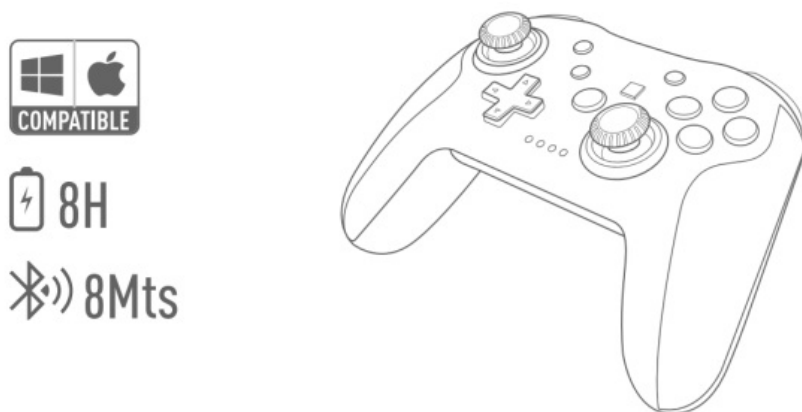

Charging/connection cable included

Warranty

WASTE



This symbol on the product or in the instructions means that your electrical and electronic equipment must be disposed at the end of its useful life in a specialized container; Do not dispose it in the usual household waste container.

In the EU there is special waste collection systems for subsequent recycling. For more information, contact with the local authority or the retailer from whom you purchased the product.



WARRANTY

ELEKTRO-3, S.C.C.L. certifies that its products comply with the quality requirements and HAVE THE LEGAL

GUARANTEE according to the regulations in force in each country. In case of observing any defect or problem in the product,
please contact our Technical Assistance Service (SAT) by calling +34 610 699 257.

THE INVOICE IS THE PRODUCT WARRANTY
THE MANUFACTURER DECLINES ALL RESPONSIBILITY DUE TO AN INCORRECT INSTALLATION OF THE APPLIANCE.



IMPORTED BY
www.edmproduct.com
ELEKTRO 3, S.COOP.C.L.
F-43389675
Polígono Ind. Alba
C/ Barenys, 21 – 43480 Vila-seca
Tarragona – España
FABRICADO
MADE IN CHINA



Documents / Resources

	<p>EDM 07750 Wireless Controller [pdf] User Manual 07750 Wireless Controller, 07750, Wireless Controller, Controller</p>
---	--

References

- s.coop » [Welcome](#)
- edmproduct.com
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.