




eeLink GPT19 GPS Tracker User Guide

[Home](#) » [eeLink](#) » eeLink GPT19 GPS Tracker User Guide 

Contents

- [1 eeLink GPT19 GPS Tracker](#)
- [2 Turning your tracker on](#)
- [3 Placing your tracker](#)
- [4 Download the tracking app](#)
- [5 Login with email and password](#)
- [6 Troubleshooting](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

eeLink

eeLink GPT19 GPS Tracker



Turning your tracker on




To turn your tracker on, remove the top cover and make sure the switch is in the ON position. Your tracker may have been shipped turned on.

Placing your tracker



Your tracker has a built-in magnet. Place the tracker in any location that is not surrounded by metal (it can't get a GPS signal when surrounded by metal). Ideally, the tracker is placed facing up toward the sky, however, this is not required.

Download the tracking app

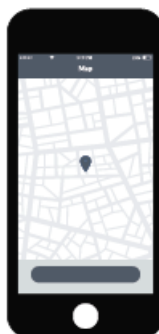

Download the mobile app from the App Store or Play Store by searching for “Keelinktech”. You can also track from any web browser at Sky200.com

Login with email and password



Login to the app with your email address and the password you used when you purchased the tracker.

Sending commands to the tracker

You can configure your tracker by sending commands via the mobile app. The tracker will only respond to commands for few minutes after it has just been turned on or when it wakes up to report its location at its scheduled time. When you send a command and it is successfully received, the tracker will always reply with “OK” or a confirmation message.

Tracker reporting frequency

By default, the tracker will report its location every 24 hours and the battery will last up to 5 years. The report frequency is configurable in the app. To change the report frequency go to Commands > new command > Change report frequency. Note that increasing the report frequency will decrease the battery life.

The tamper sensor

The tamper sensor on the back of the tracker can send you an alert via text message if the tracker is removed. To use this feature, you will need to send two commands in the app. Set your cell phone number in the app by going to Commands > Set SOS number. Also send the “Enable tamper button” command.

Tamper sensor and battery life

If the tamper sensor is triggered by removing the tracker, it will enter into alert mode and report its location continuously for 30 minutes. Repeated or accidental triggering of the tamper sensor can drain the battery quickly. If you accidentally trigger the tamper sensor you can send the “Cancel removal alarm” command to prevent draining the battery.

GPS positions vs Cell Tower positions



If your tracker reports a position with a light blue circle around it, this indicates it is the location of the cell tower it's connected to. You will get an exact GPS fix when the tracker gets a better view of the sky. Try a new spot or take the tracker outside.

Setting up alerts



To be notified if your tracker enters or exits an area, create a geofence. In the mobile app, click Geofences > New Geofence. Give your new geofence a name, address and size. Note that a geofence will only be triggered when the tracker wakes up at it's next scheduled time.

Troubleshooting




If you have a question or problem, we can help. Learn more about your tracker's features, watch tutorial videos and ask questions at eelinktech.com/contact-us

Replacement battery



You can purchase a replacement battery for the. Questions? We're here to help! eelinktech.com/contact-us
apple@eelinktech.com

Documents / Resources

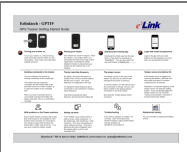	eeLink GPT19 GPS Tracker [pdf] User Guide GPT19, GPS Tracker, GPT19 GPS Tracker
---	--

References

- [e² Contact Us - Eelink website Contacts](#)

- [ZX login](#)

Manuals+.