

EESENS  
EESENS  
P32C1  
Guardian  
Alarm Device



# EESENS P32C1 Guardian Alarm Device User Manual

[Home](#) » [EESENS](#) » EESENS P32C1 Guardian Alarm Device User Manual 

## Contents

- 1 [EESENS P32C1 Guardian Alarm Device](#)
- 2 [What's in the Box:](#)
- 3 [Alarm device Overview](#)
- 4 [Initial commissioning](#)
- 5 [Battery Replacement](#)
- 6 [Install alarm device](#)
- 7 [Pairing a new device](#)
- 8 [Unpairing a connected device](#)
- 9 [Battery instructions](#)
- 10 [Water-resistant instructions](#)
- 11 [Extended wireless instructions](#)
- 12 [Open and assembly instructions](#)
- 13 [FCC WARNING](#)
- 14 [Frequently Asked Questions \(FAQ\):](#)
- 15 [Documents / Resources](#)
  - 15.1 [References](#)
- 16 [Related Posts](#)


# EESENS

**EESENS P32C1 Guardian Alarm Device**




### What's in the Box:

1. Alarm device

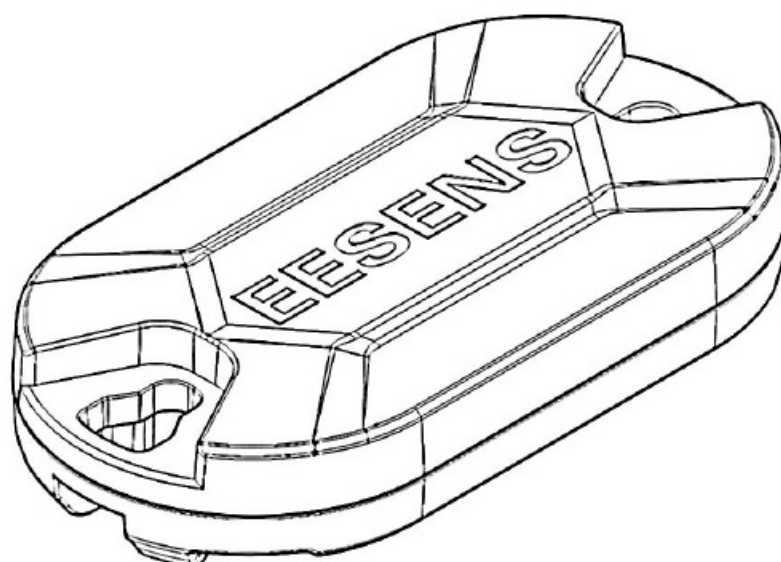

2. Alarm remote

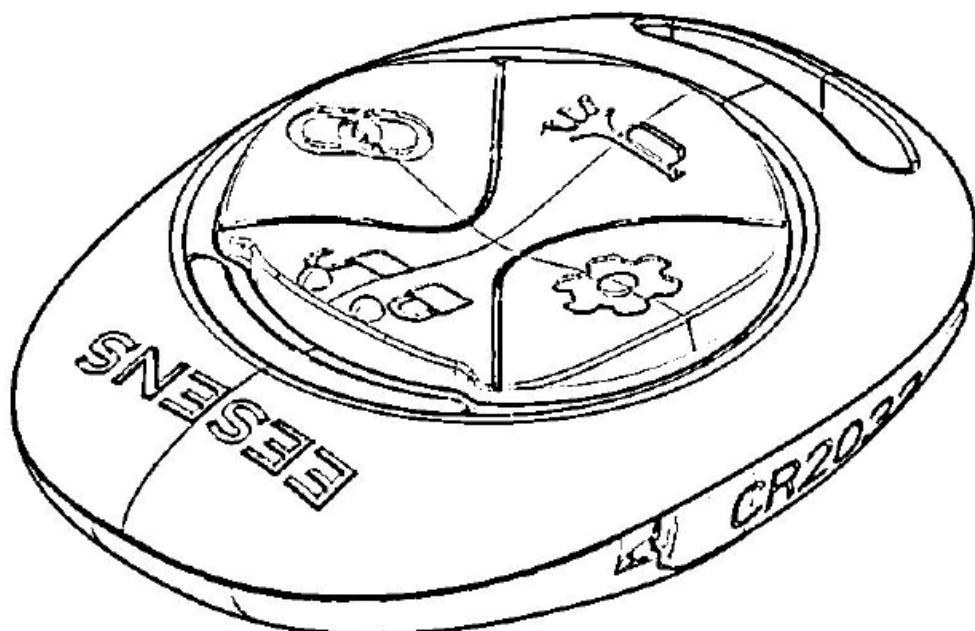


3. Plastic zip tie x 2




x2

 
4. Screw driver x 1




5. L wrench x 1

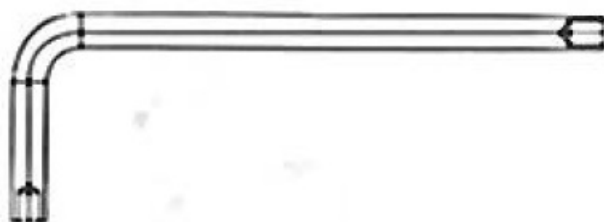

6. Carabiner x 1

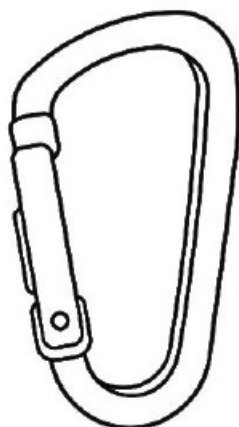


7. Plastic spacers x 2

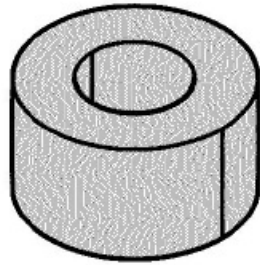


H: 6mm x2

#### 8. Security screws

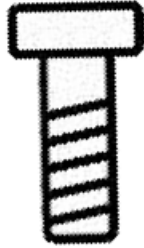


L: 30mm x2


#### Alarm device Overview

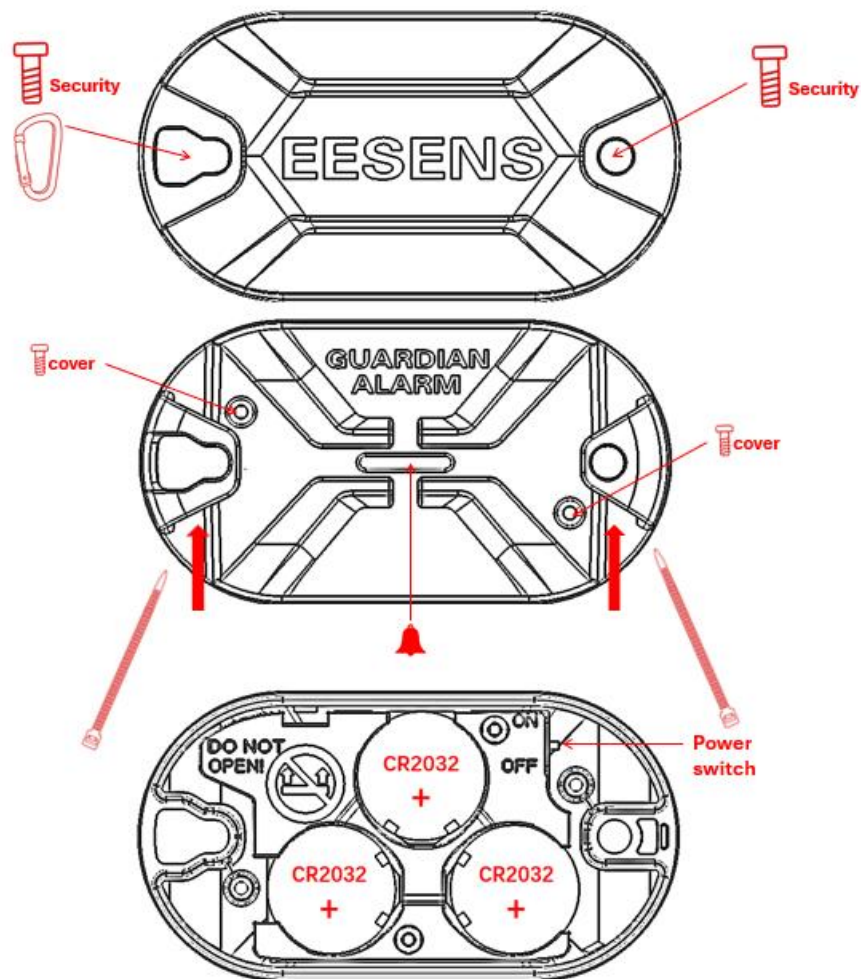

#### Initial commissioning

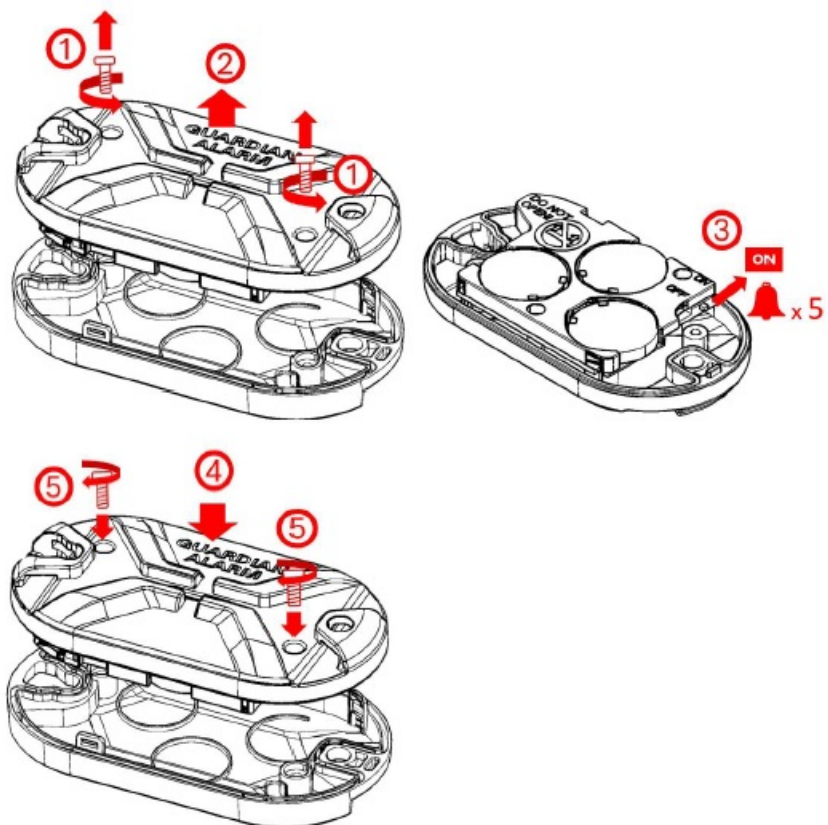


## Battery Replacement

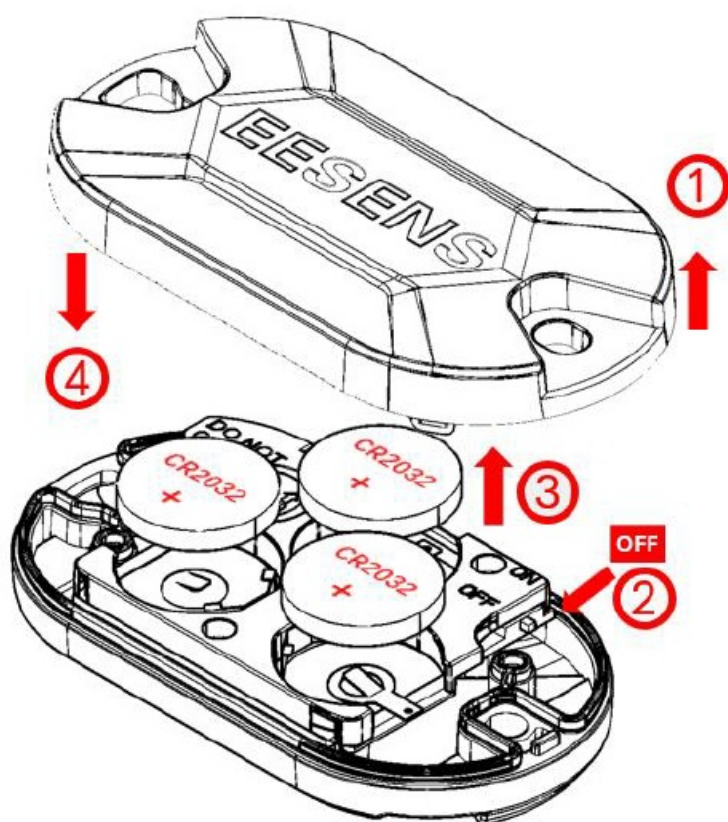


## Alarm controller overview



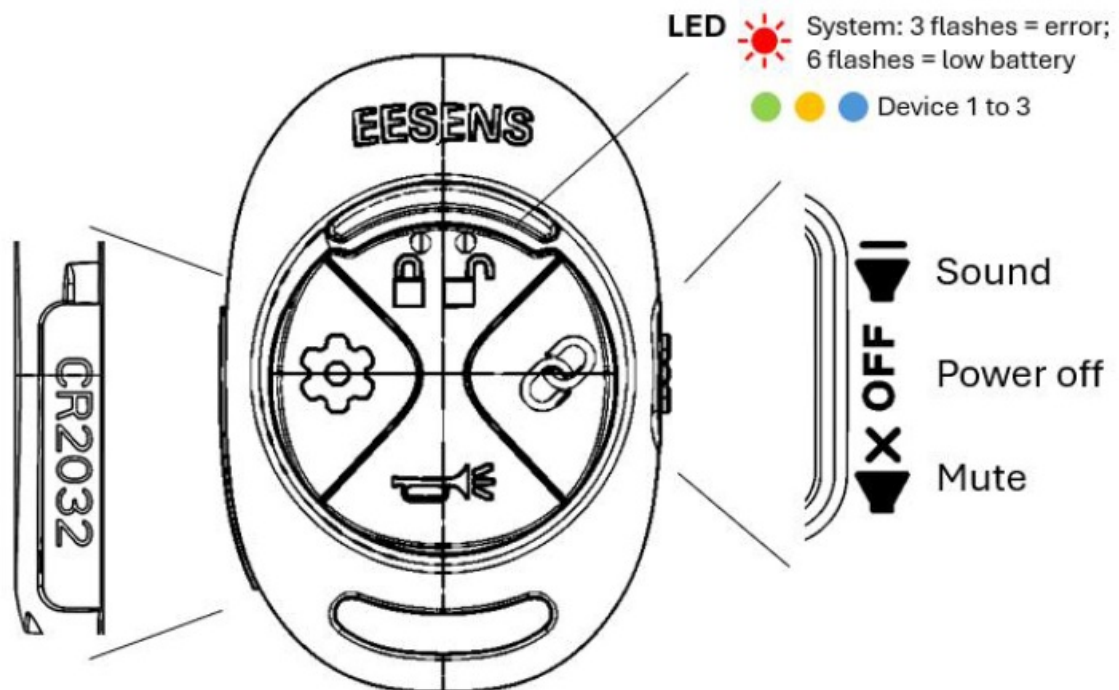


● Short Press      ● Press for 1 second	
	Select device      Pairing
	Arm      Disarm
	Select alarm sound      Select movement sensitivity
	Find item nearby      Find item far away

### Initial commissioning

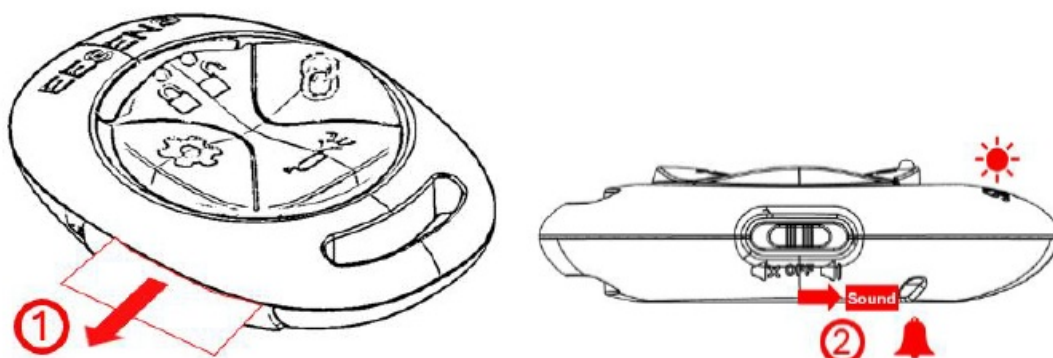


### Battery Replacement

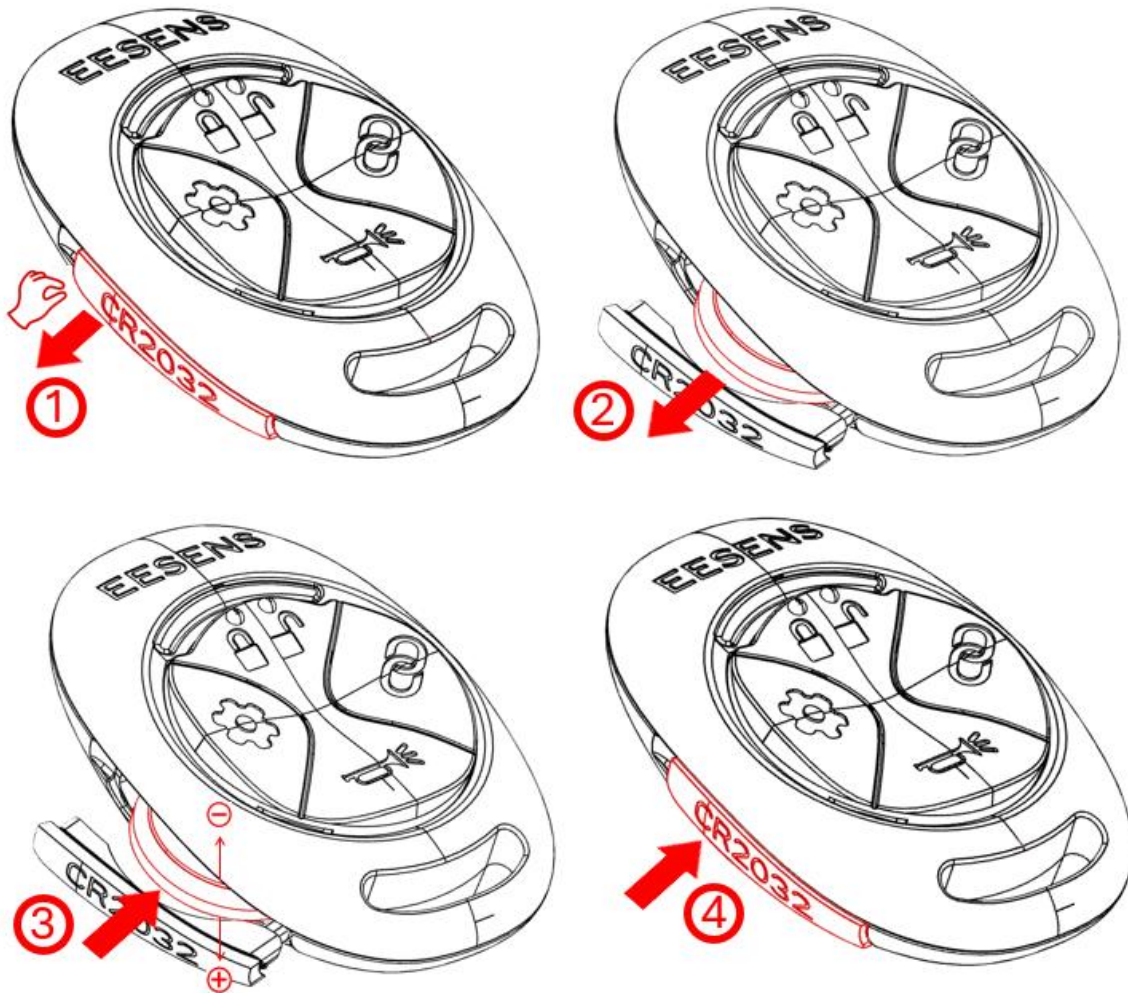

## Install alarm device


### 1. Option 1: Attach to Water Bottle Cage Braze-ons (Without Water Bottle Cage)

- Tools Needed: L-wrench, two security screws, alarm device

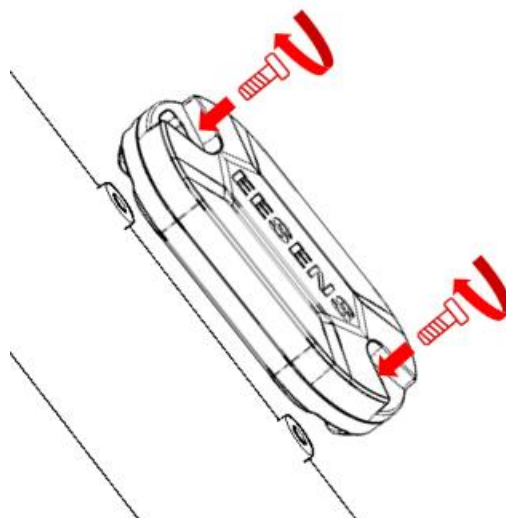


### 2. Option 2: Attach to Water Bottle Cage Braze-ons (With Water Bottle Cage)

- Tools Needed: L-wrench, two security screws, alarm device, two spacers, your water bottle cage

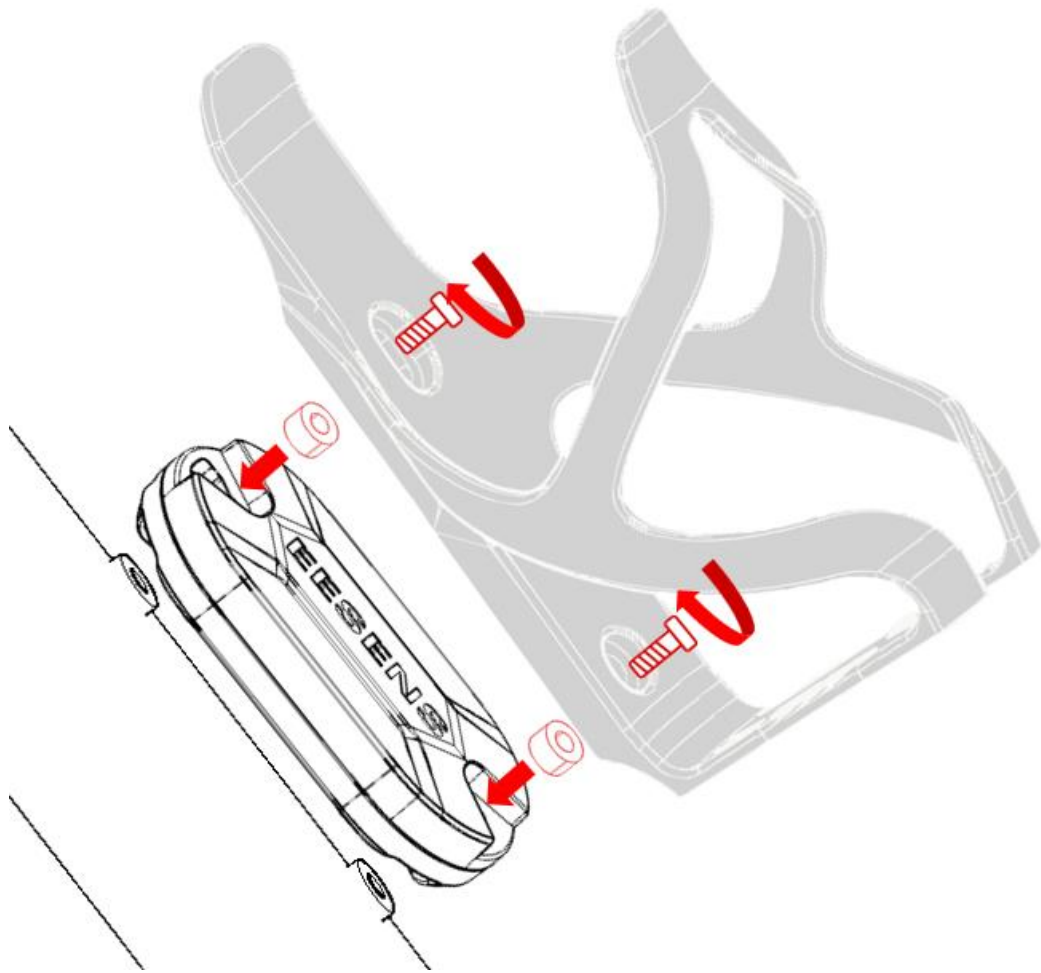


3. Option 3: Attach Using Zip Ties on a Strong Tube

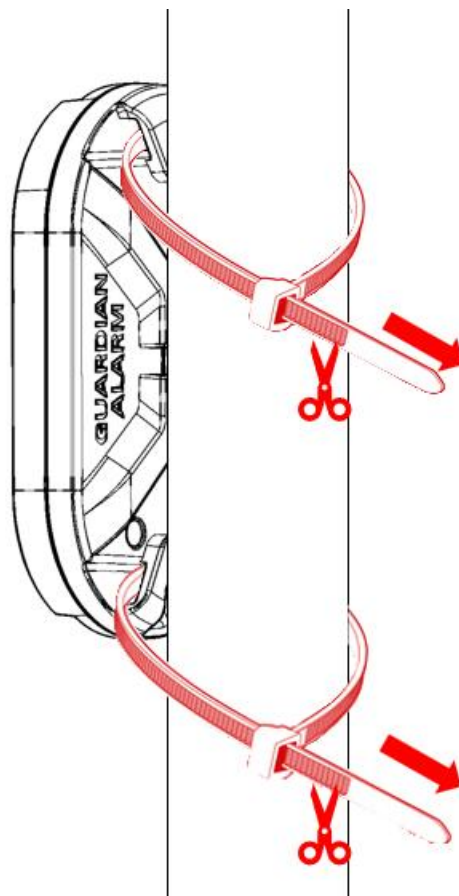

4. Option 4: Attach Using a Carabiner



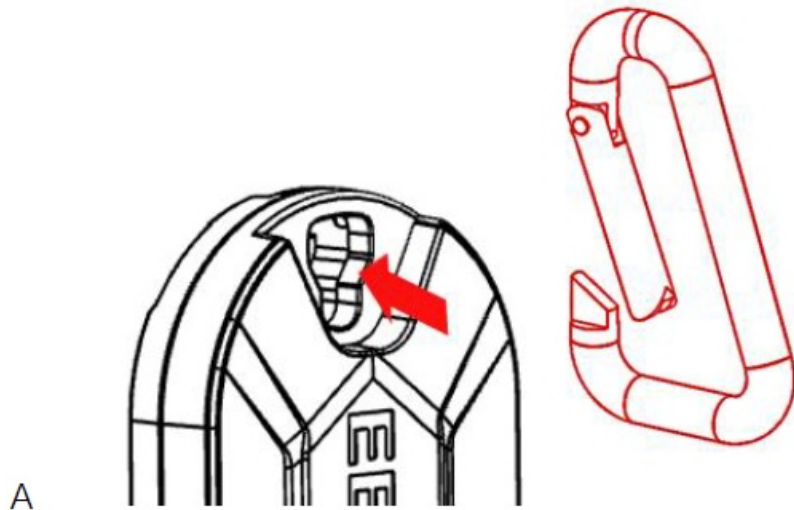






#### 5. Option 5: Mount Using an Alarm Fixture Accessory (Available at EESSENS Store)




### Pairing a new device

Ensure the alarm device and the controller are within wireless range of each other.

1. Short Press the device button  to select the desired alarm device color. 
2. Restart the alarm device and listen for the pairing sound notification (  x5).
3. Long Press the device button  until the LED flashes continuously before pairing mode ends.
4. 2 Quick Beeps (  x2) indicate that pairing has succeeded.

### Unpairing a connected device

Ensure the alarm device and the controller are within wireless range of each other.

1. Short Press the device button to select the desired alarm device color .
2. Long Press the device button  while simultaneously switching from OFF to SOUND .
3. Release the device button when the alarm device emits the disarm sound. Unpairing has succeeded.

### Battery instructions

- Use new CR2032 batteries in good condition from the same brand to maximize battery capacity.
- Replace the batteries immediately when the device shows a low power indicator. Performance decreases when battery voltage is low.
- Ensure batteries are inserted with the correct polarity (+ and -). Incorrect polarity can short-circuit the battery

terminals. There is a risk of burns from contact with leaking or damaged batteries.

- Remove the battery when it's depleted or if the device will not be used for an extended period.
- For optimal performance, we recommend using our certified batteries, available at [Eesens.com](https://eesens.com).
- Follow the battery manufacturer's usage and disposal guidelines. Improper use or disposal may cause damage to the device or overheating.

## Water-resistant instructions


- Use the supplied tool to securely screw the alarm device in place.
- Do not remove the silicone ring.
- The controller is rain-resistant, and the device is resistant to water splashes. However, do not expose it to water for extended periods.
- If the device is exposed to water, dry it thoroughly before opening the cover.

## Extended wireless instructions


- The wireless range can be affected by environmental factors such as walls, metal, water, living beings, or other wireless devices.
- To maximize the range, place the controller in an open area, away from metal, living beings, walls, or floors.
- A low battery will reduce the wireless range. Replace the batteries as soon as you receive a low battery notification.

## Open and assembly instructions

- Open the top cover of the alarm device by using your finger to lift through the designated slot.

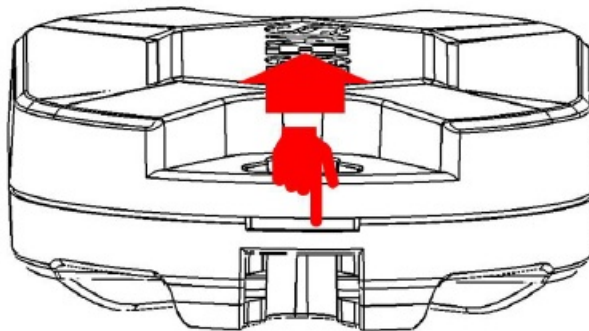

- Assemble the top cover by aligning and pushing the top and bottom covers together. When assembled correctly, you will hear two clicks.

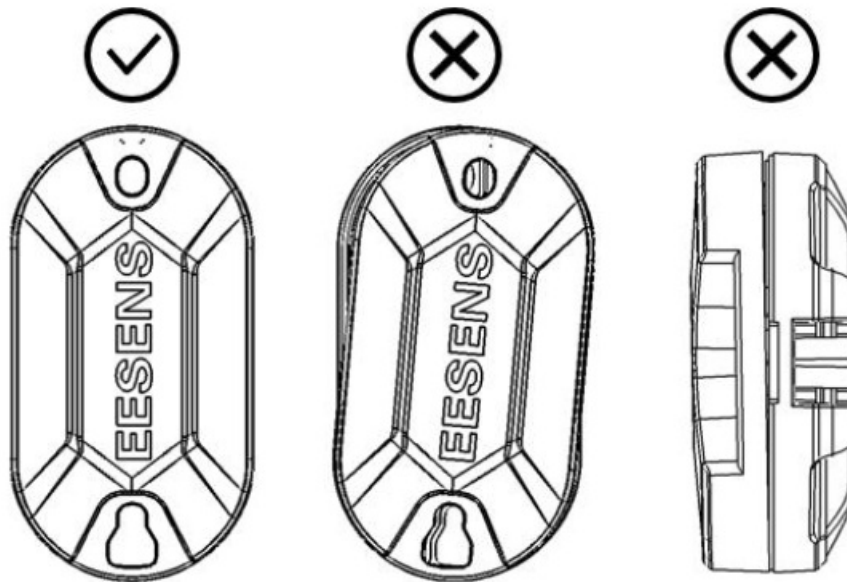

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

## Frequently Asked Questions (FAQ):

- **Q: Can I use rechargeable batteries with the alarm device?**

A: It is recommended to use new CR2032 batteries for optimal performance. Rechargeable batteries may not provide the same level of performance.

- **Q: How do I know when to replace the batteries?**

A: Replace the batteries immediately when the low power indicator shows on the device. Performance decreases with low battery voltage.

## Documents / Resources

User Manual

What's in the Box

- 1. P32C1 Device
- 2. P32C1 Mounting Bracket
- 3. P32C1 Mounting Screws
- 4. P32C1 Mounting Screws
- 5. P32C1 Mounting Screws
- 6. P32C1 Mounting Screws

**EESENS P32C1 Guardian Alarm Device** [pdf] User Manual

P32C1 Guardian Alarm Device, P32C1, Guardian Alarm Device, Alarm Device, Device

## References

- [!\[\]\(cdf2842d82858164c68c92720a337fb9\_img.jpg\) EESENS BIKE TECHNOLOGY – EESENS Official Site](#)
- [User Manual](#)

**Manuals+, Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.